

12x15 Backyard Building with Optional Center Girts and Floor Kit Instructions

Mueller Backyard Building Kits are not engineered structures and do not meet any specific building code criteria.
For video installation instructions, visit our website at www.muellerinc.com/downloads-home/videos-home

877-2- MUELLER • www.muellerinc.com




PARTS LIST

Refer to the parts list on the itemized invoice delivered with your building. All parts are stenciled on the inside of the channel, purlin, girts and rafters. Example of this below:





TYPES OF SCREWS


TEK Screw
For attaching sheet metal to purlin

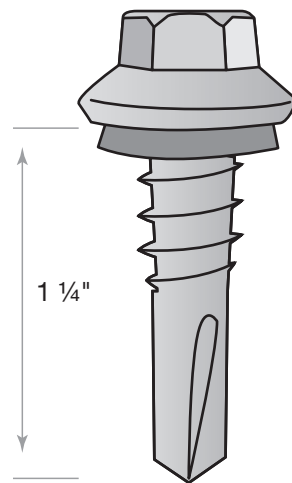


Lap TEK Screw
For attaching sheet metal to sheet metal

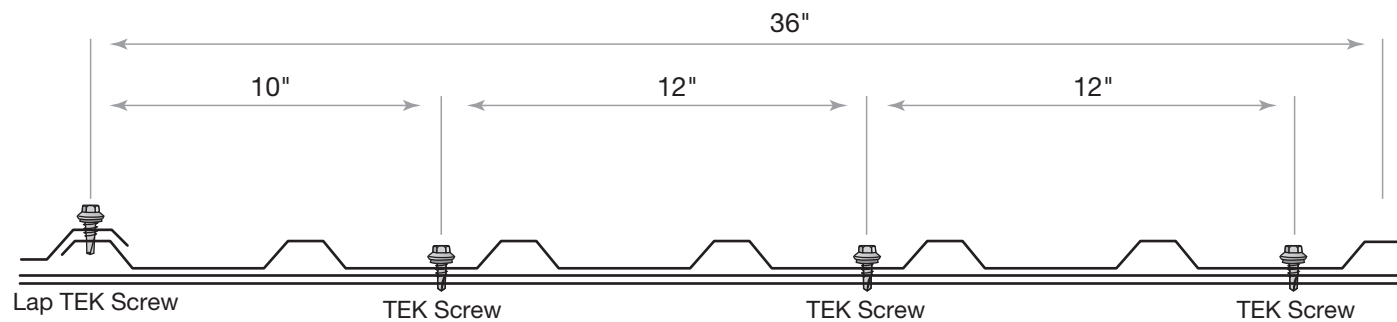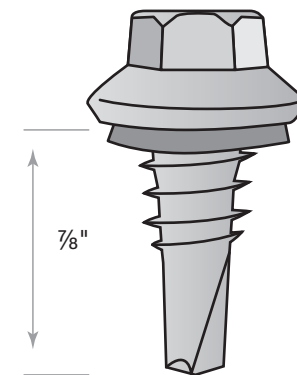

NOTE: Make sure to use TEK screws to attach sheets to purlins, lap TEK screws to attach sheets to sheets.

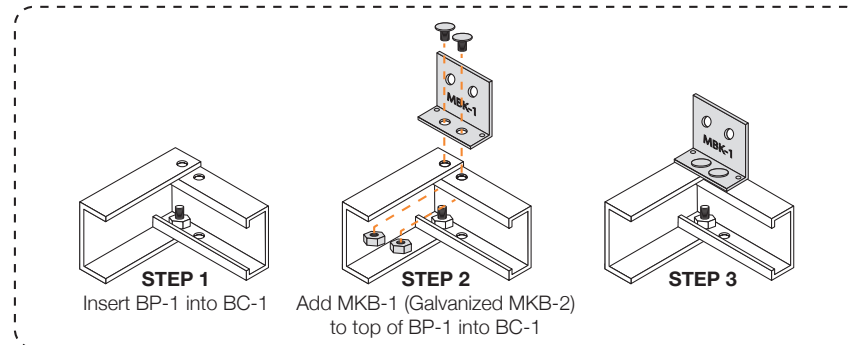
BASE LAYOUT (BC-1 AND BP-1)

NOTE: Leading and trailing edge of channels are overbent for a tight fit. Spread apart as needed to nest the purlin into the channel.

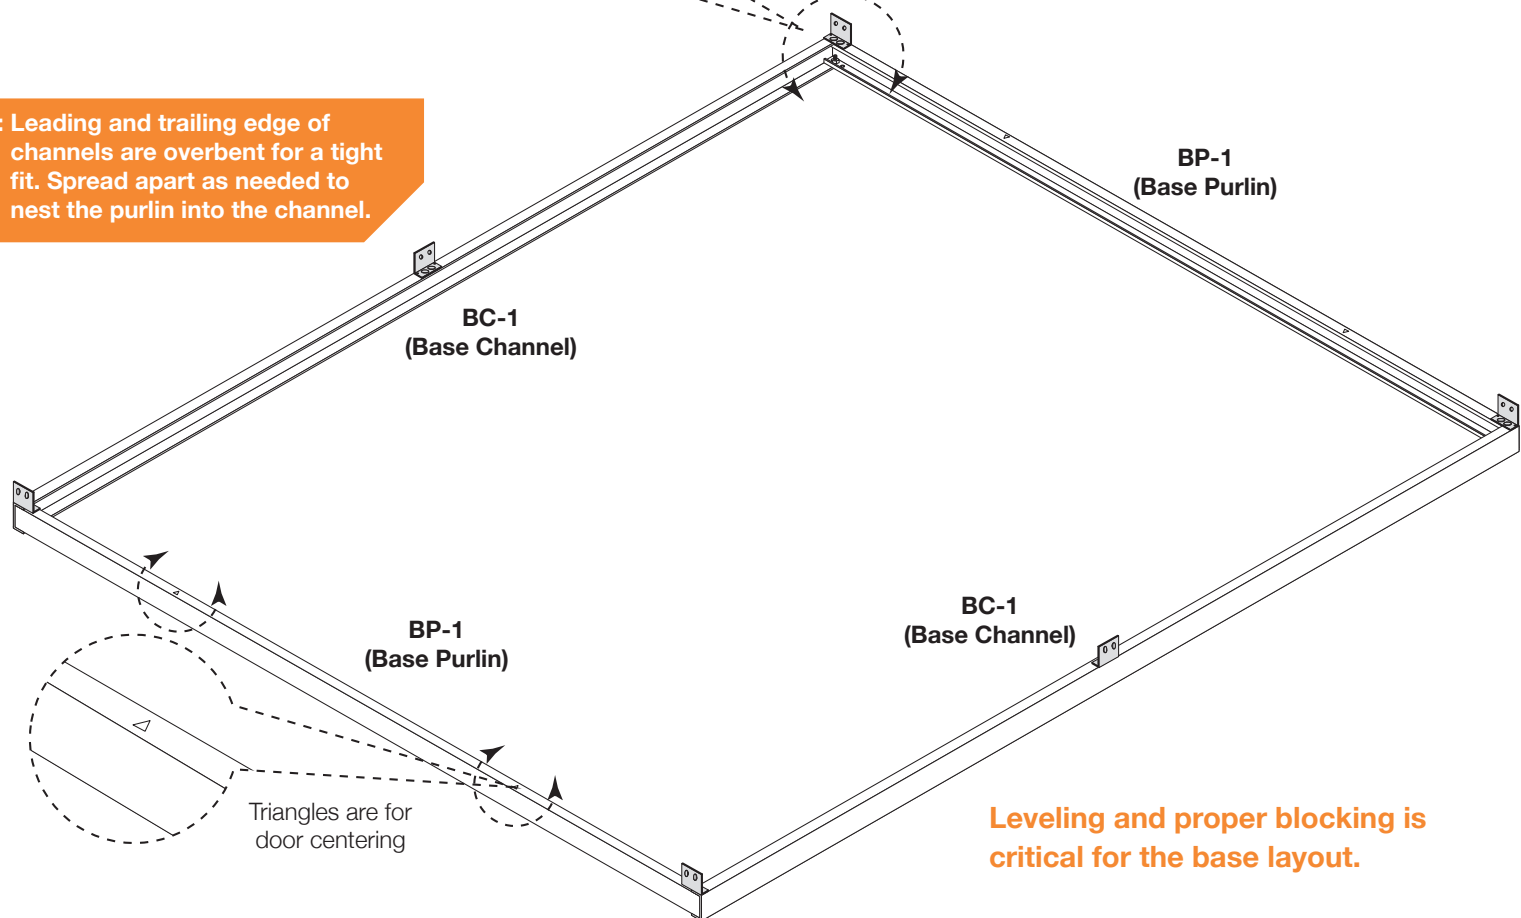


MAKE SURE THE ASSEMBLY IS SQUARE

NOTE: Mueller recommends the building be placed on leveling blocks (not included) to support the base channel and purlins. Mueller also recommends the building be anchored to the ground or foundation. The method of anchor is at the owner's discretion.

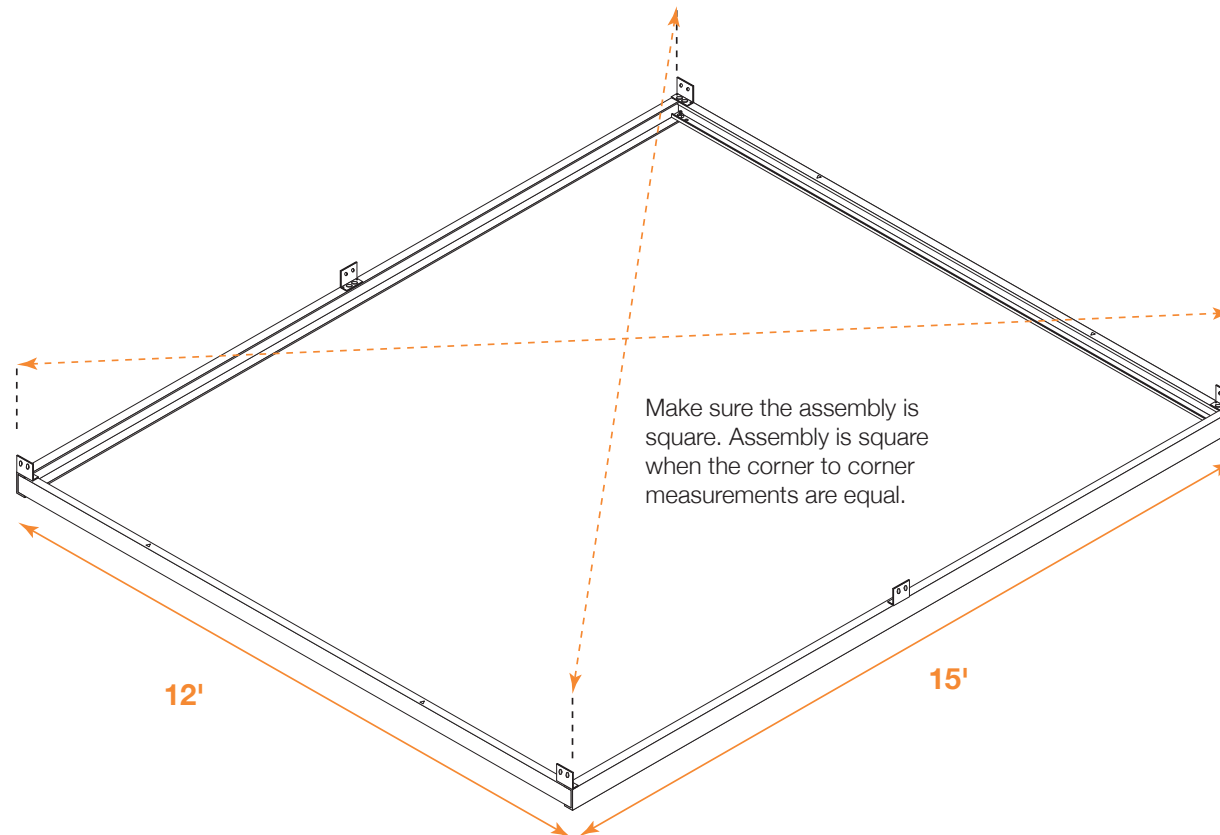


FLOOR KIT (OPTIONAL)


NOTE: Mueller recommends the building be placed on leveling blocks (not included) to support the base channel and purlins. Mueller also recommends the building be anchored to the ground or foundation. The method of anchor is at the owner's discretion.

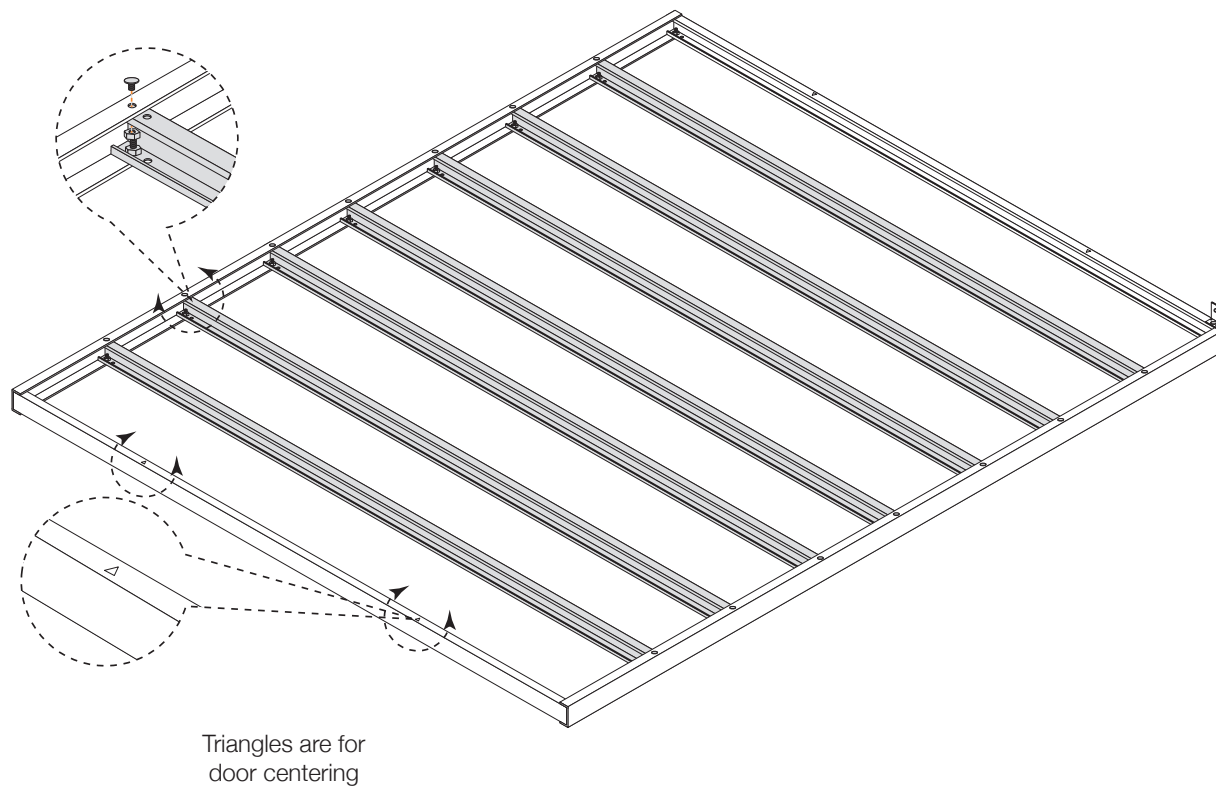


FLOOR KIT (OPTIONAL)

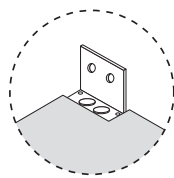

OPTION 1
Notching

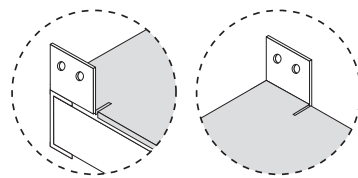


OPTION 2
Slotting
Slotting is for column flange

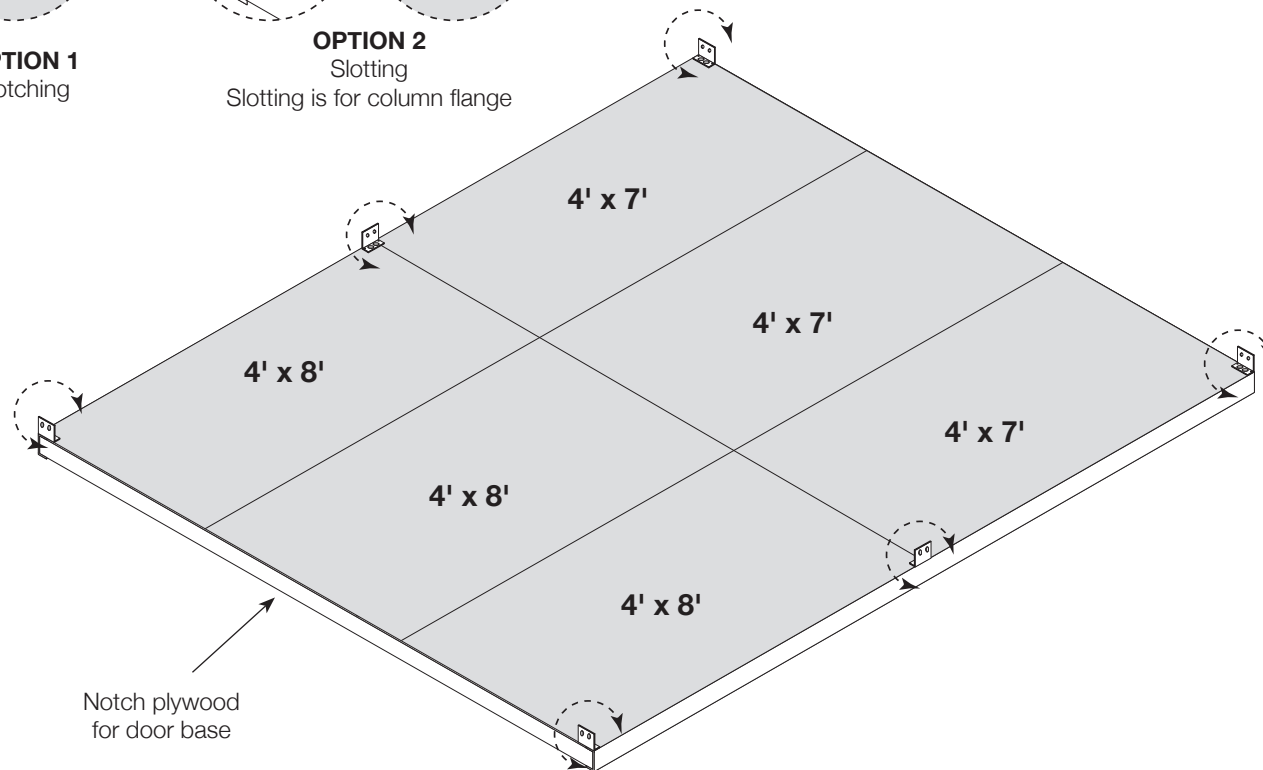

ERECTING COLUMNS (C-1)


Attach column to MKB-1 (Galvanized MKB-2) clip using 1/2"x1" Fin Head Bolts

HINT: Add clips to top of columns before standing up.

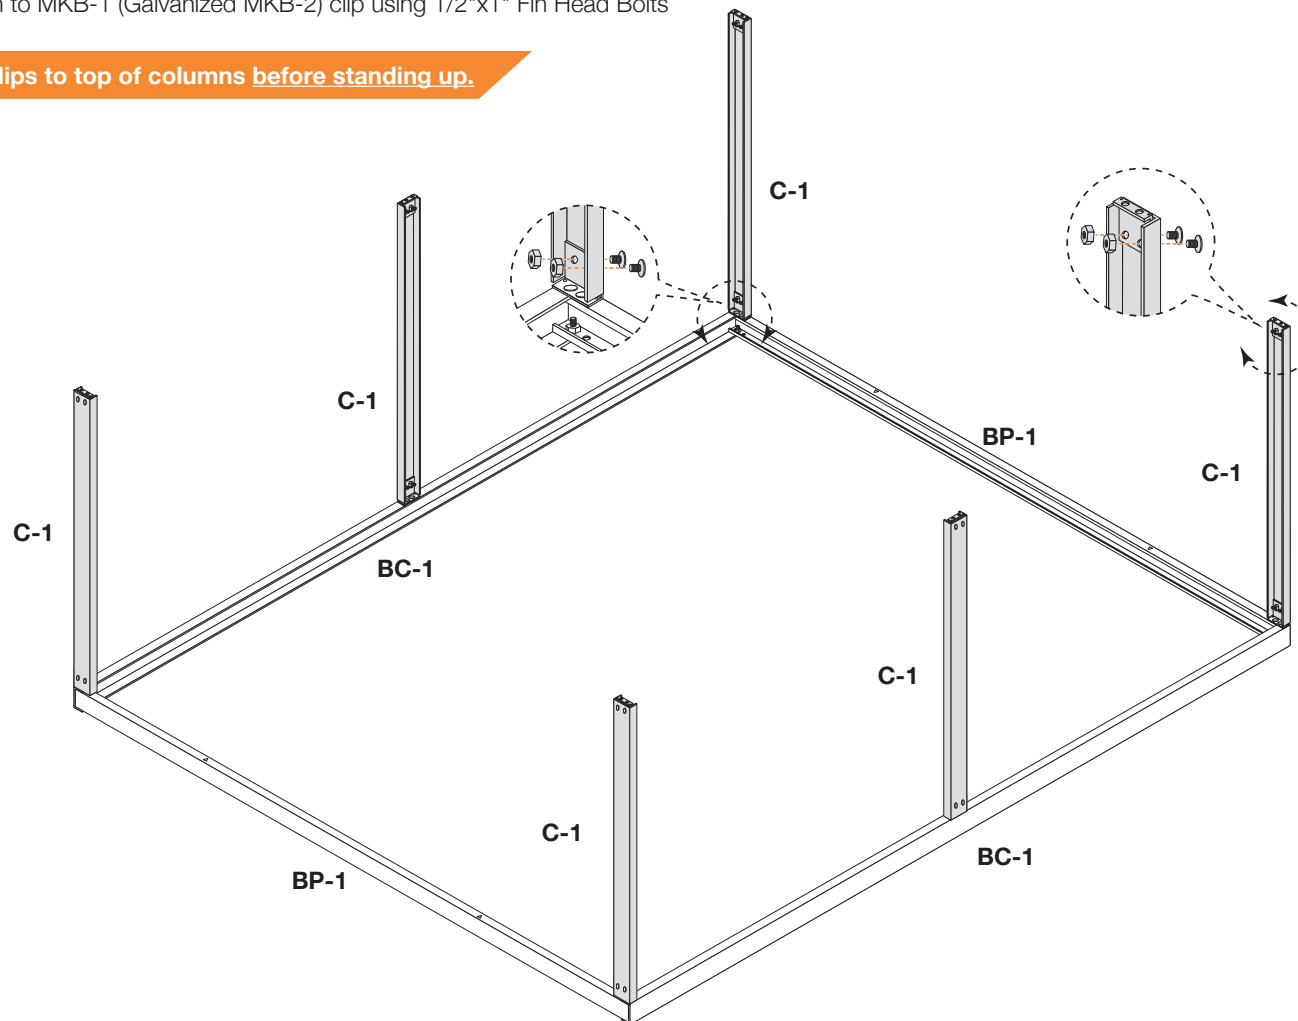


RAFTERS (R-1)

Bolts should remain loose until EC-1 is installed

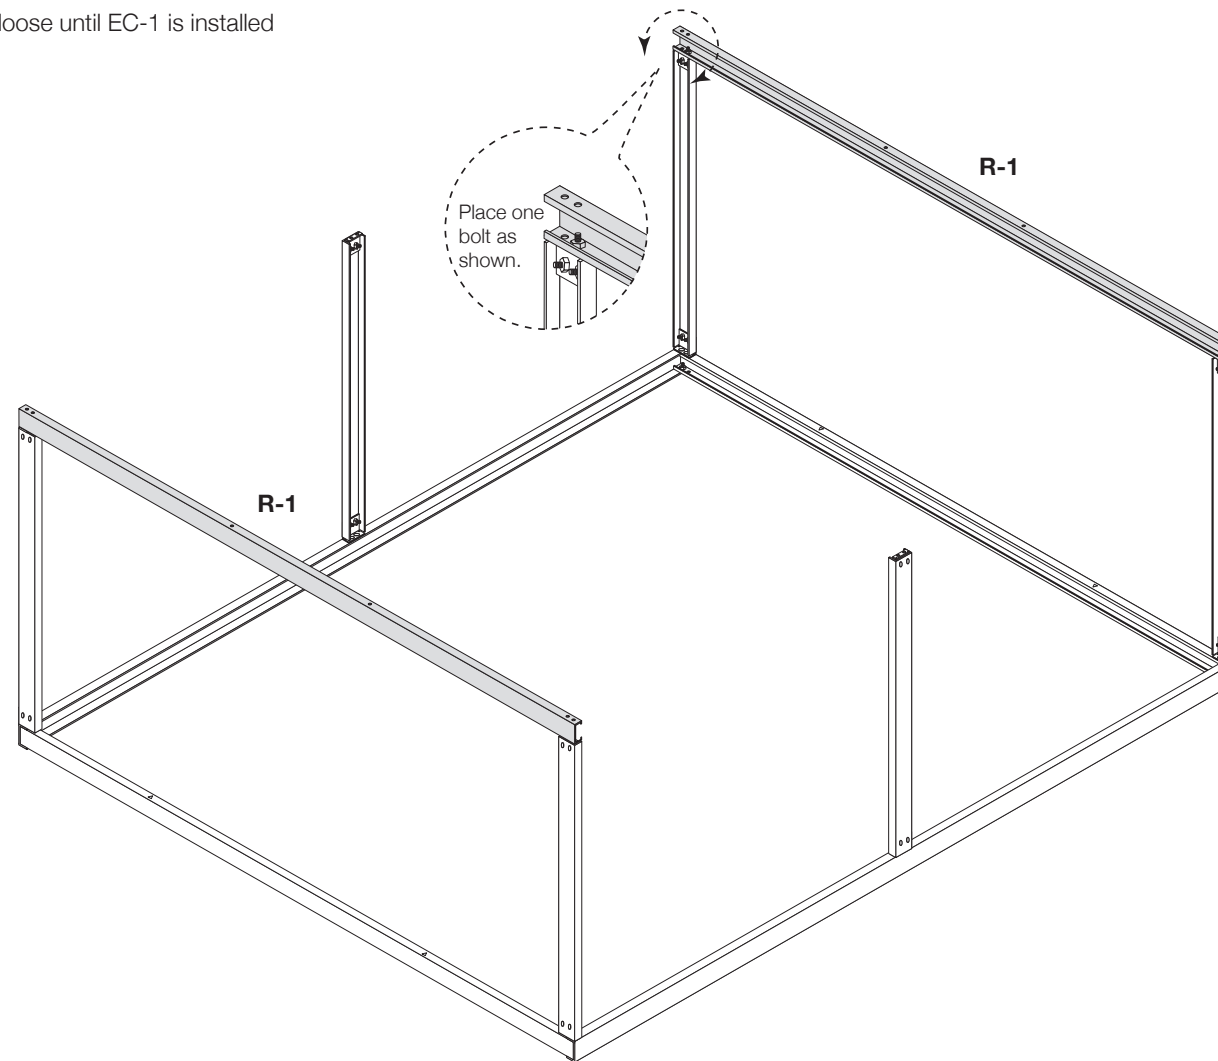


EAVE CHANNEL (EC-1)


Tighten bolts after EC-1 is installed.

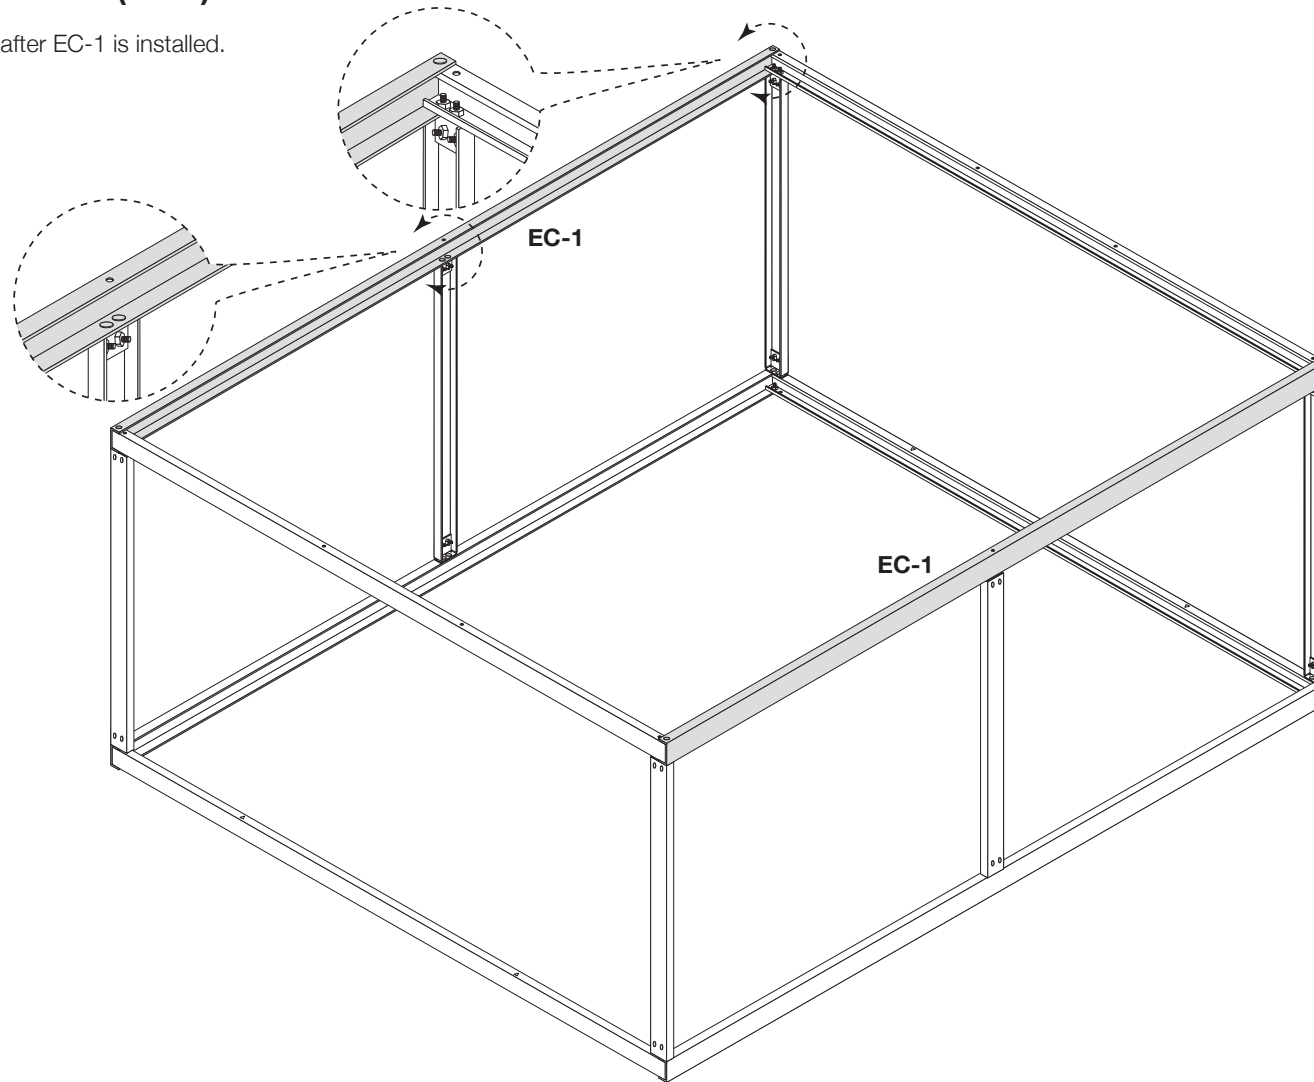

RAFTERS (R-2)

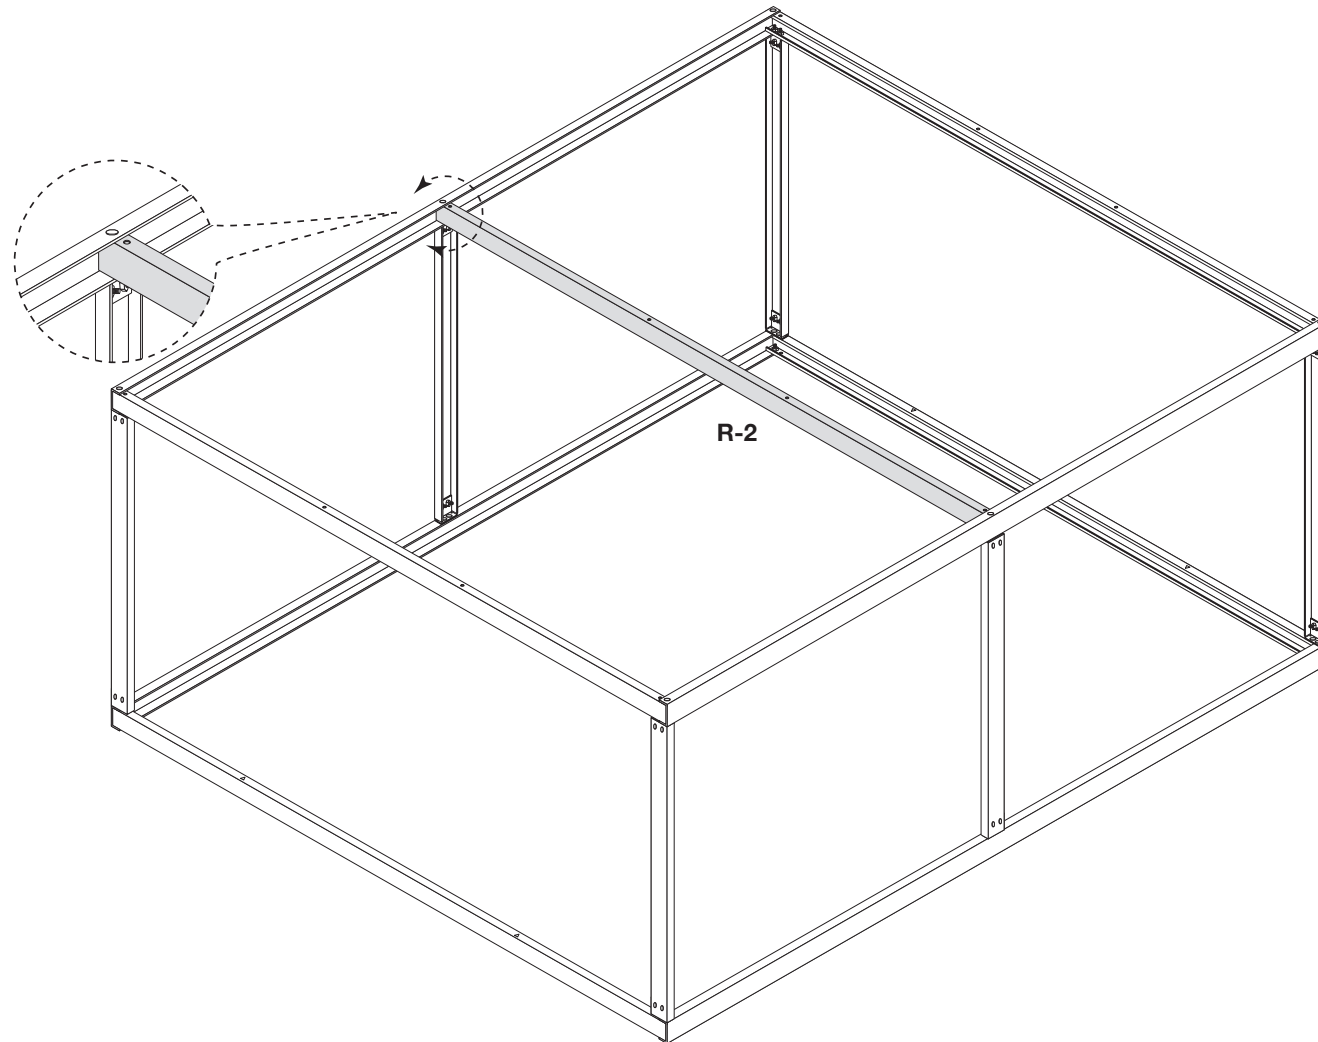


**MAKE SURE THE ASSEMBLY
IS SQUARE AND LEVEL**

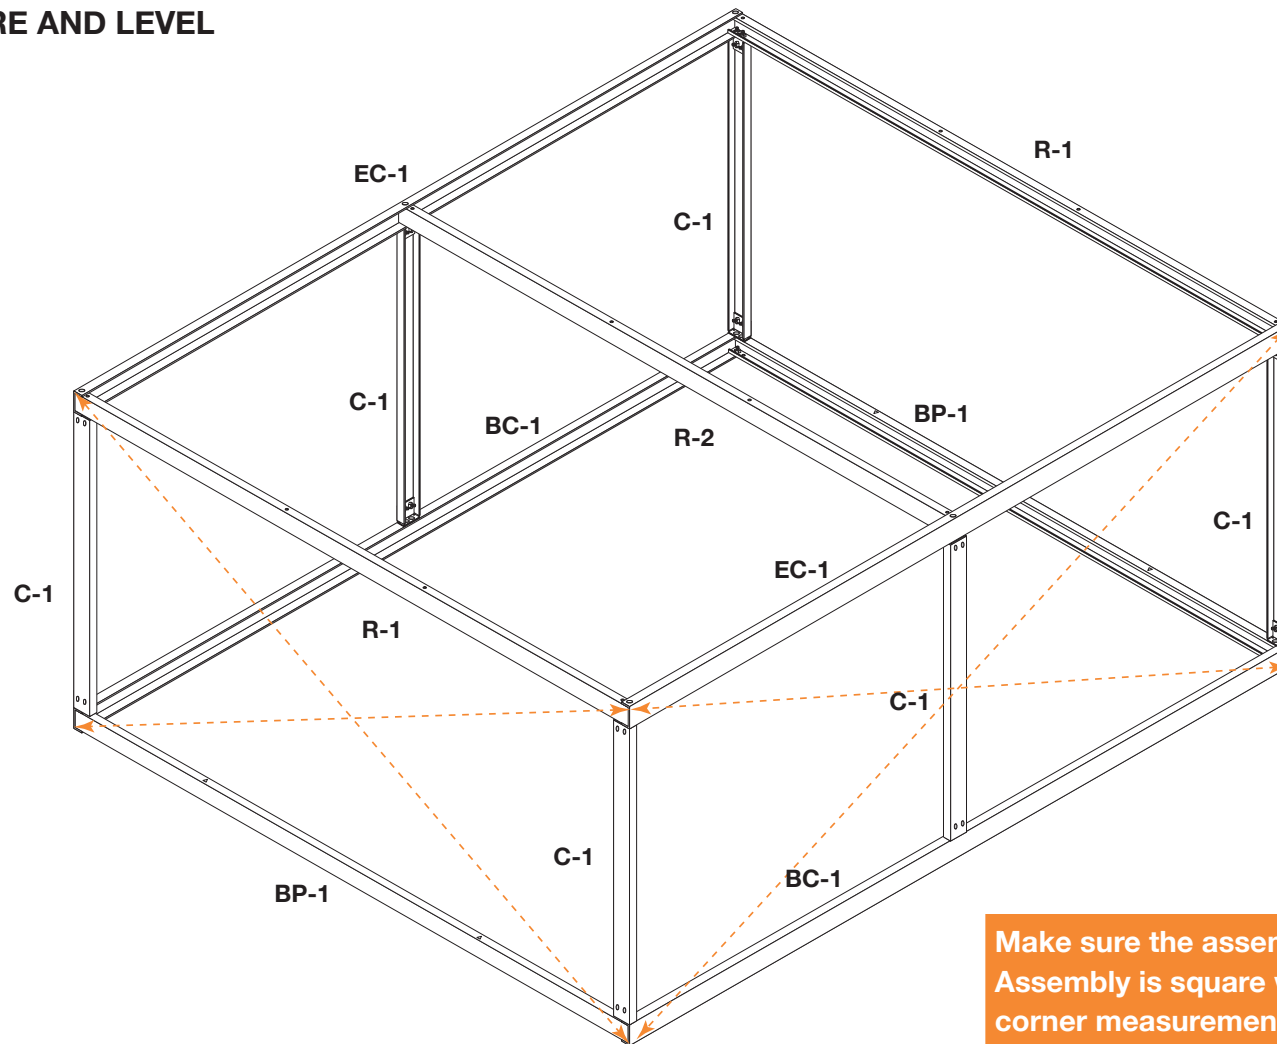


Make sure the assembly is square. Assembly is square when the corner to corner measurements are equal. Use temporary bracing (not included) to hold assembly square if required.

ROOF PURLIN

Open side of RP-1 faces to center of building

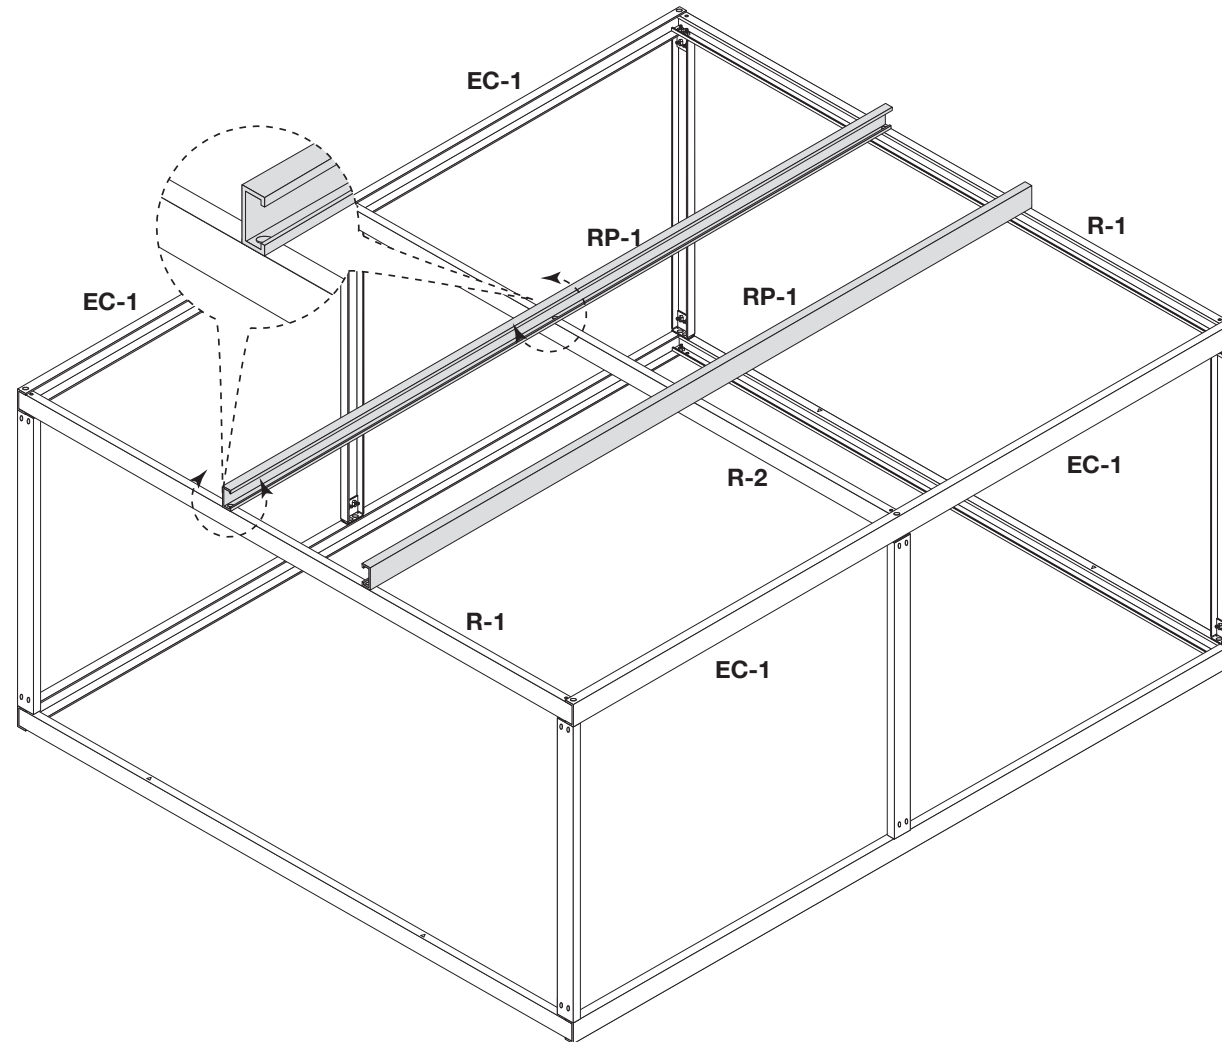


DOOR AND DOOR TRIM

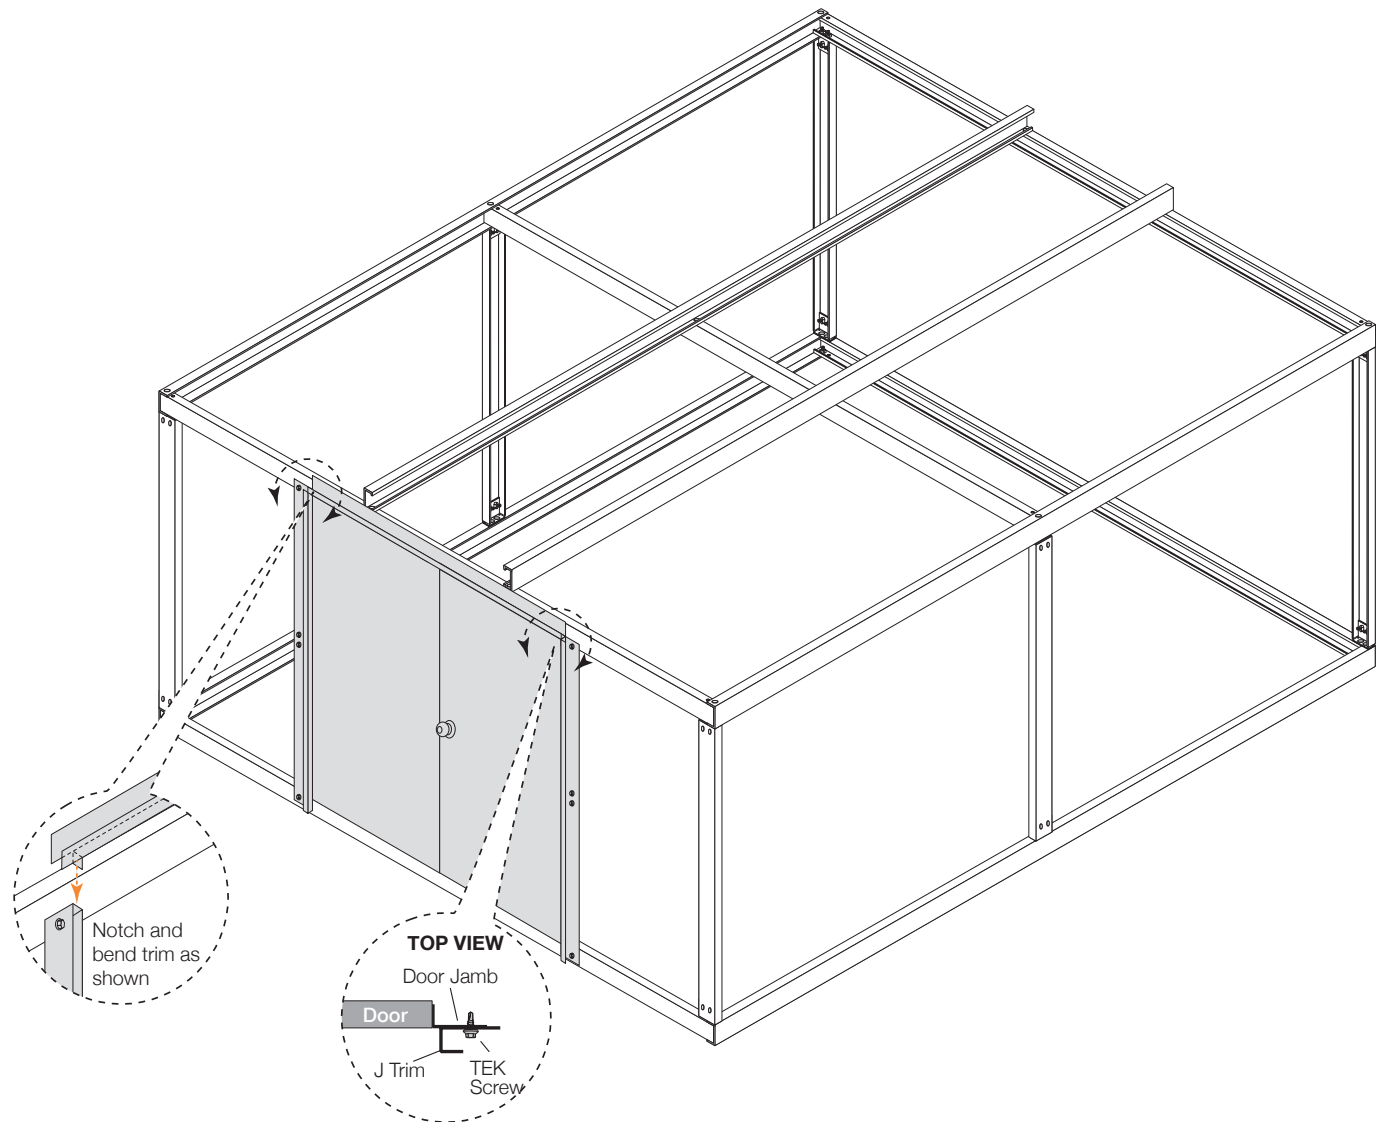


MID-GIRTS (OPTIONAL - MG-1, MG-2 AND MG-3)

NOTE: Bolt to inside of column leg

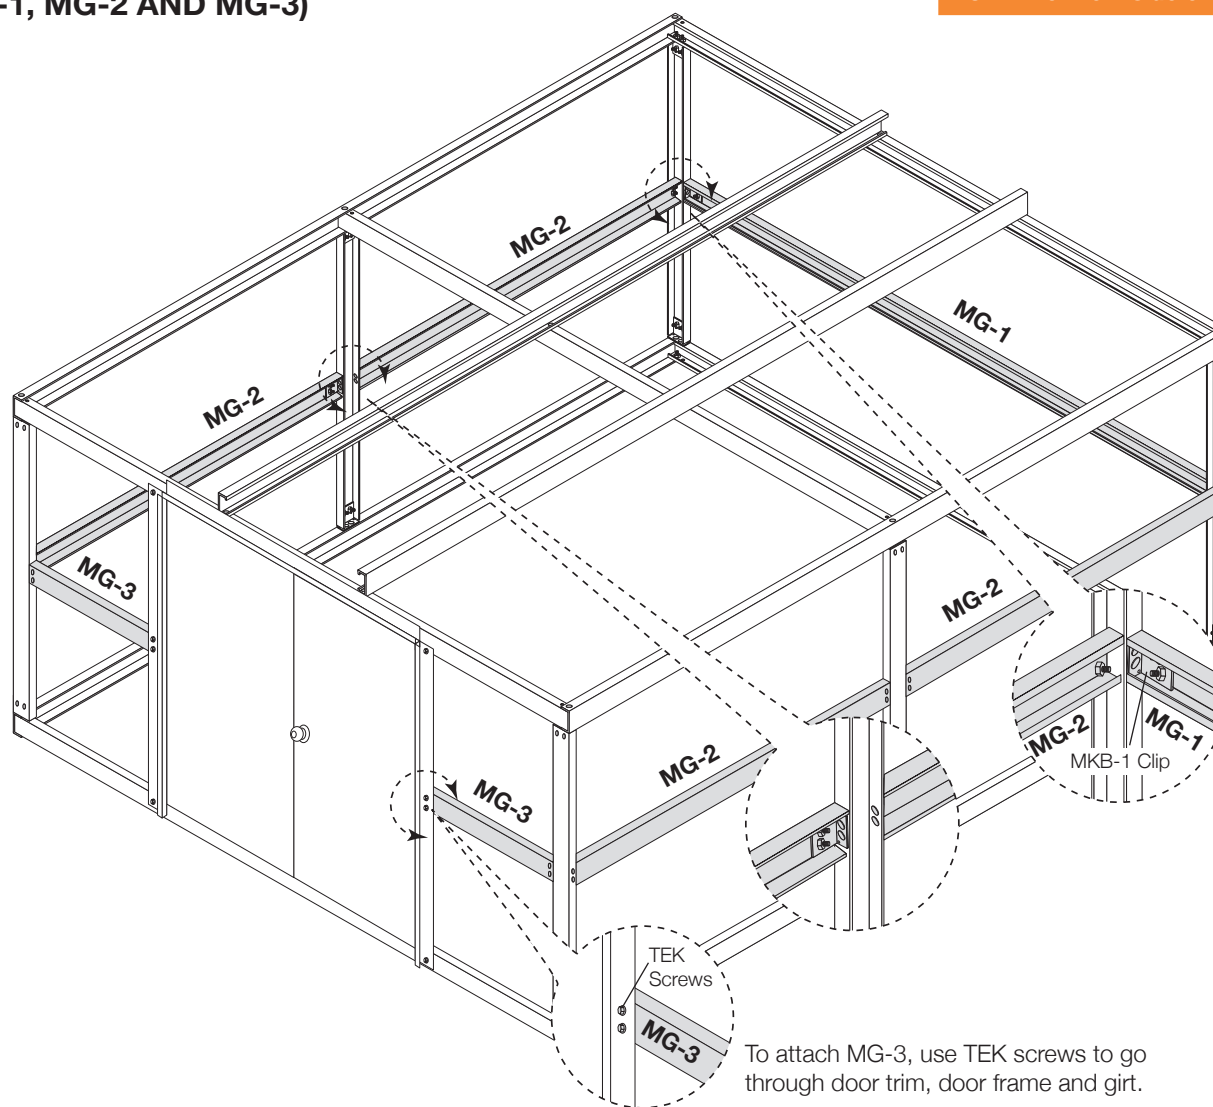


WINDOW (OPTIONAL)

Start sheet 3/4" past steel line. Sheet 1" above bottom of base channel

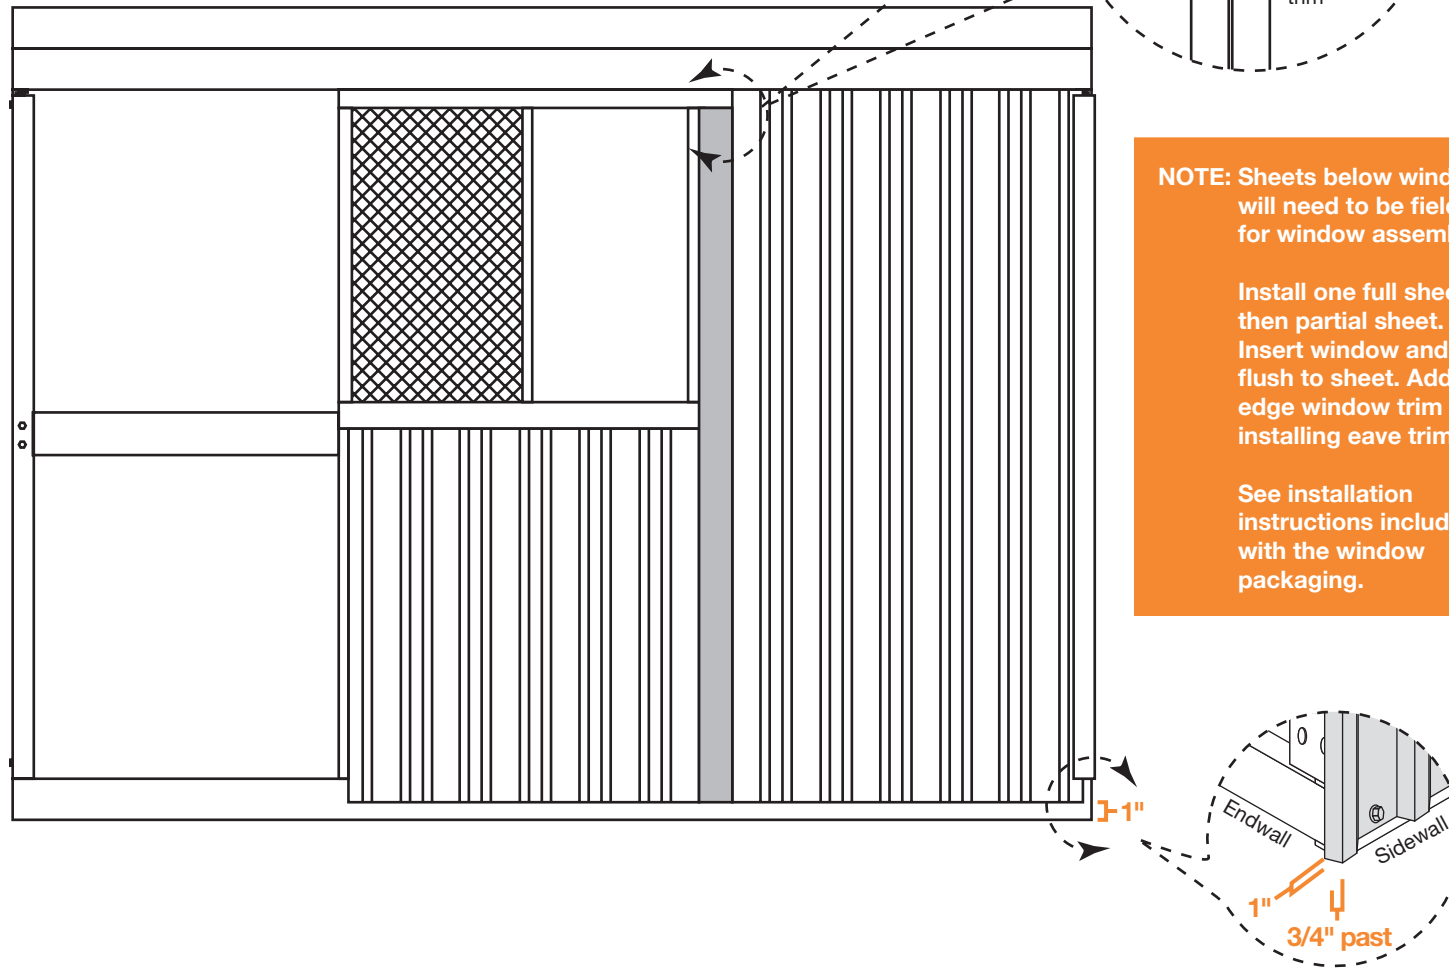


SHEETING SCREW PLACEMENT

WALL SHEETS

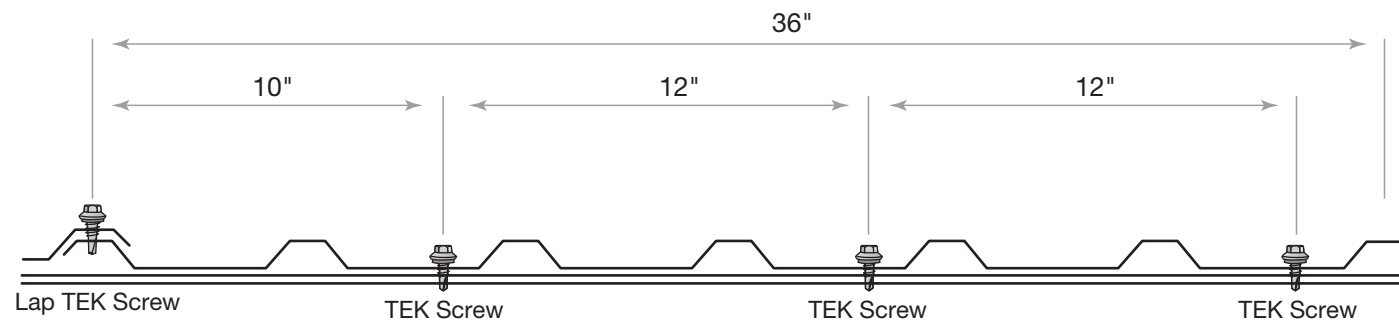


ROOF SHEETS

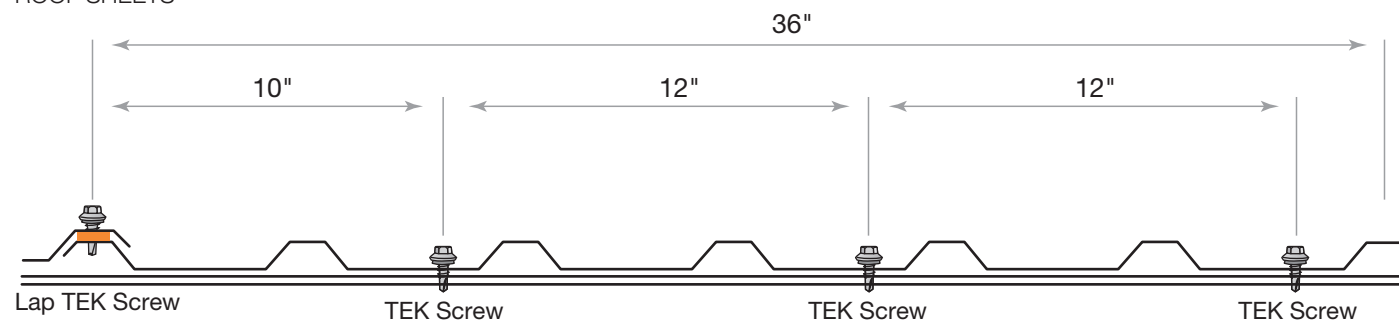

NOTE: Make sure to use TEK screws to attach sheets to purlins, lap TEK screws to attach sheets to sheets.


SHEETING

NOTE: Make sure the frame is plumb and level, and tighten all bolts prior to sheeting. Repeat for each wall.

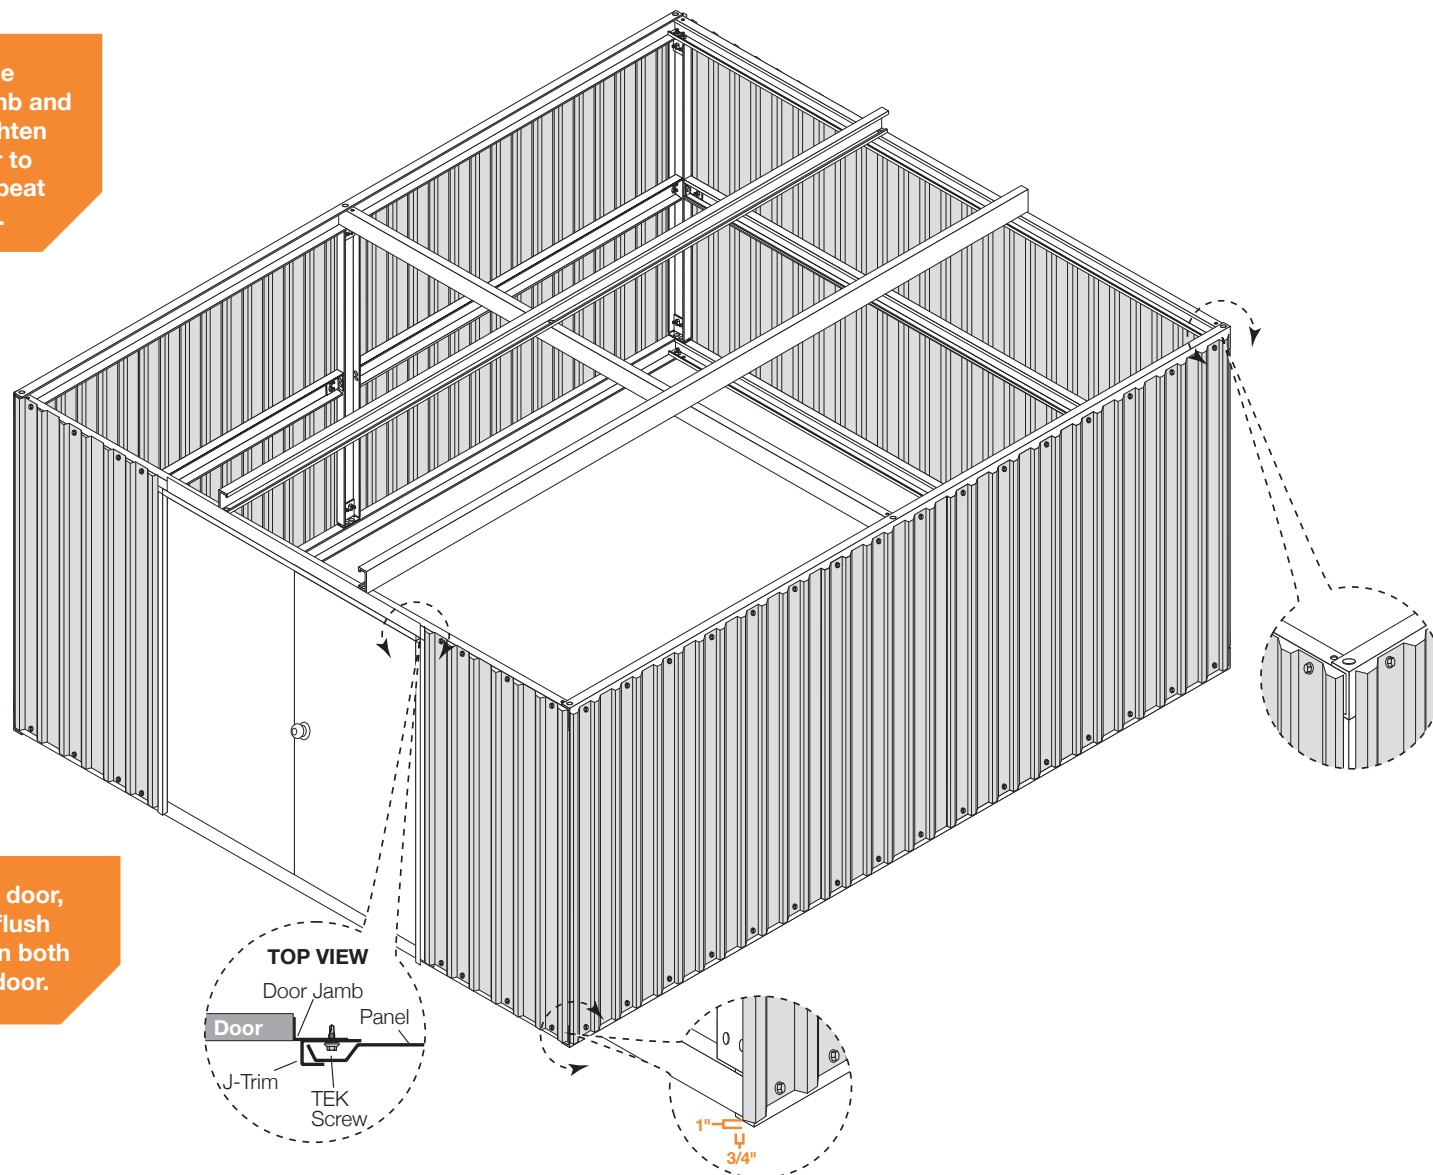


NOTE: For side with door, start sheets flush with J-trim on both sides of the door.

SHEETING ENDWALL WITH OPTIONAL DOUBLE DOOR

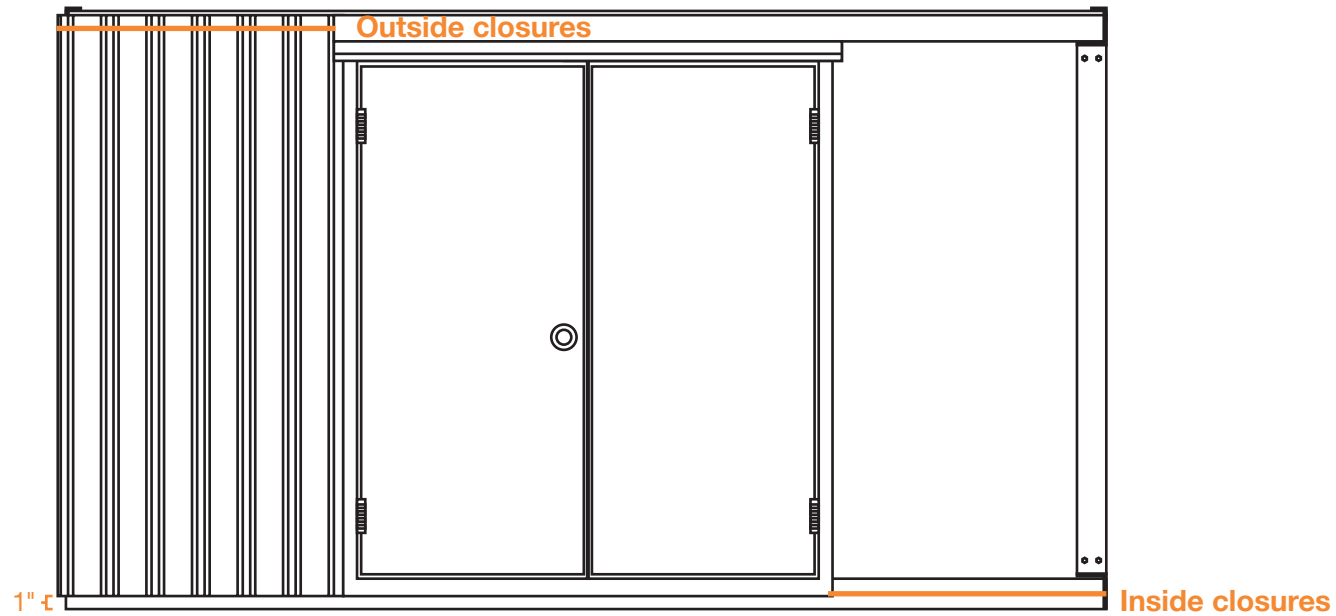


IMPORTANT: 1" above the bottom of the base channel

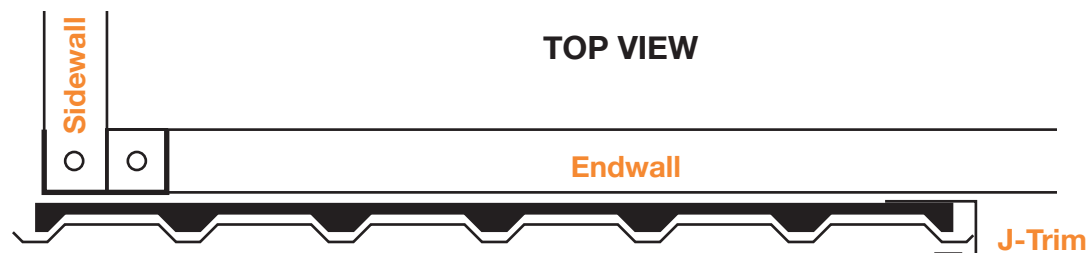

Inside closure goes on the bottom and outside closure goes on top.


NOTE: Start sheets inside of J-Trim 1" above the bottom of the base purlin

SHEETING SIDEWALL

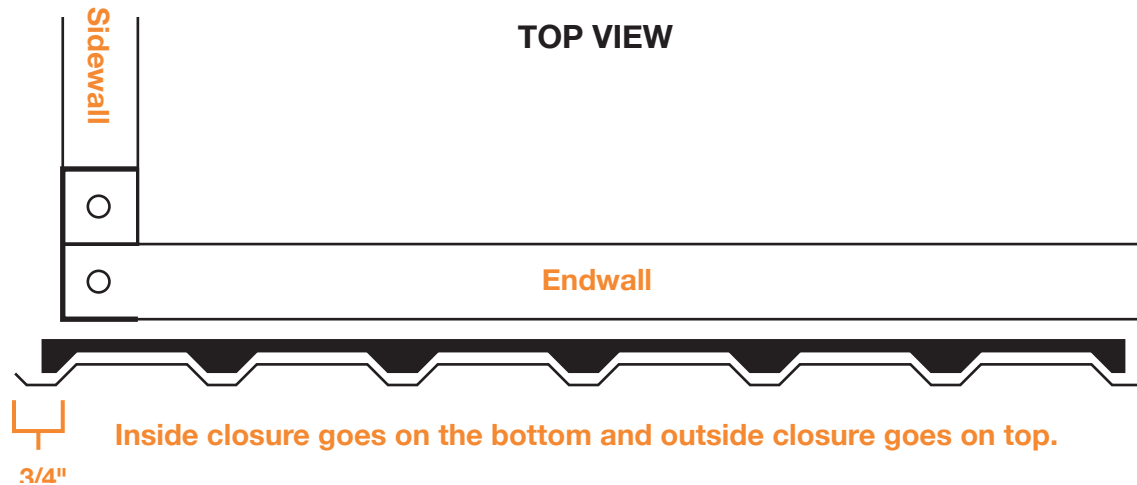


NOTE: Start sheets 1" above the bottom of the base channel and 3/4" out from endwall

SHEETING ENDWALL

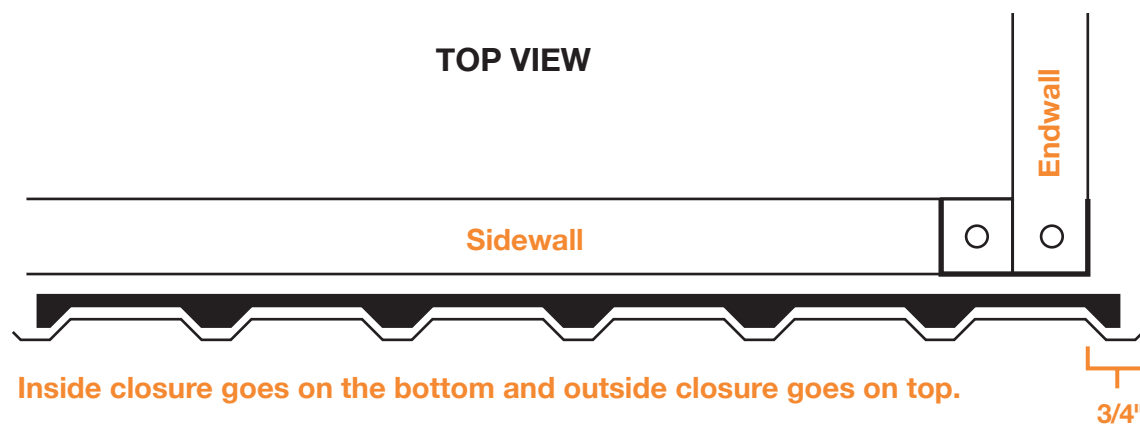

NOTE: Start sheets 1" above the bottom of the base purlin and 3/4" out from the sidewall

CORNER TRIM

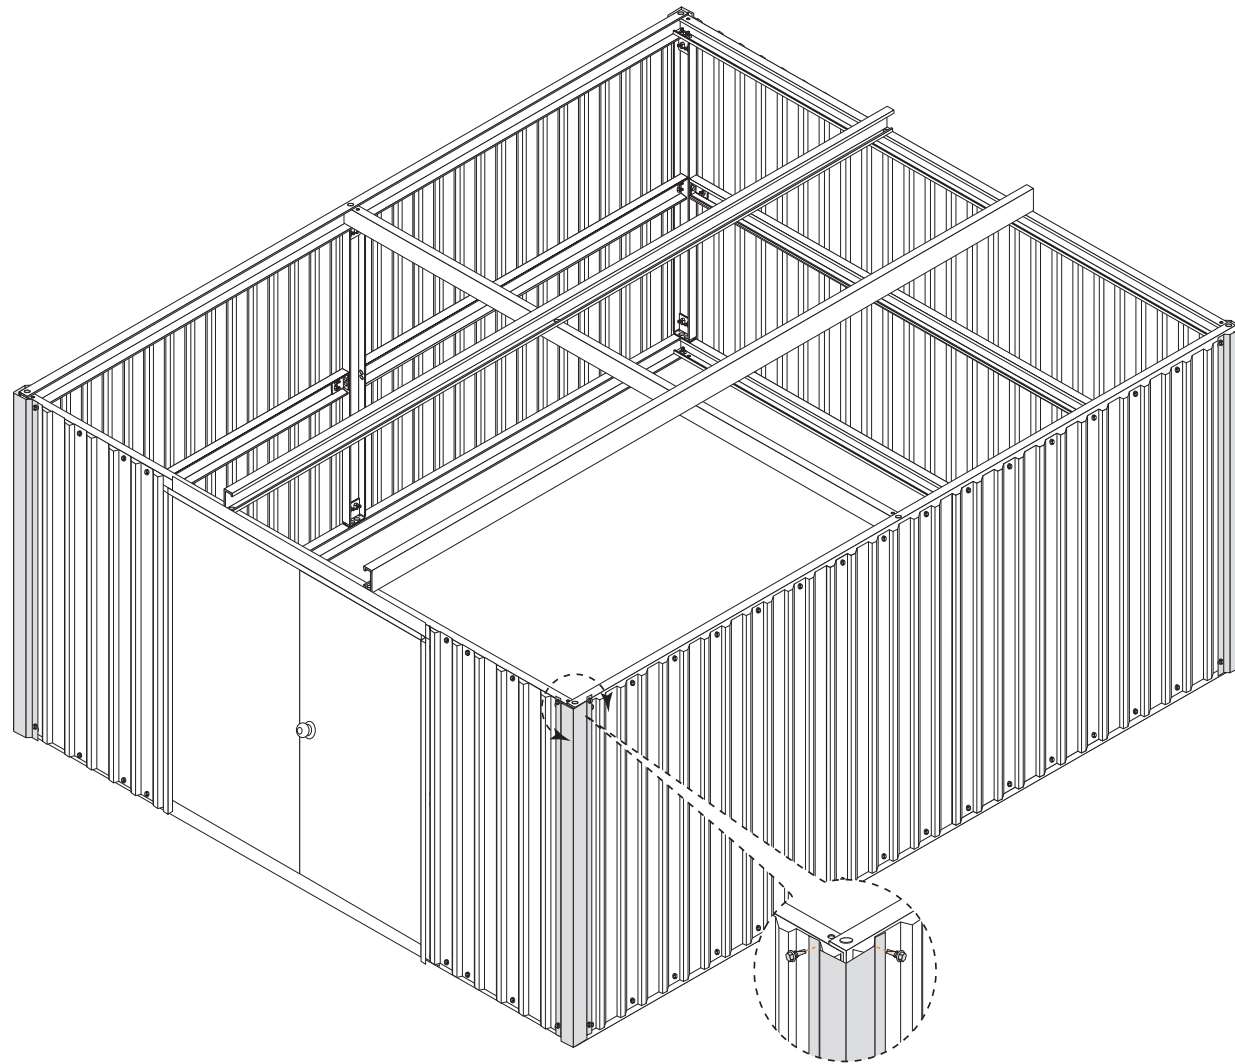


BACK SIDE WALL

Roof to wall sheet alignment

Align major ribs from wall to major rib on roof

NOTE: Make sure panels remain square during installation.


NOTE: If optional double door is used, roof and wall sheets will not align.

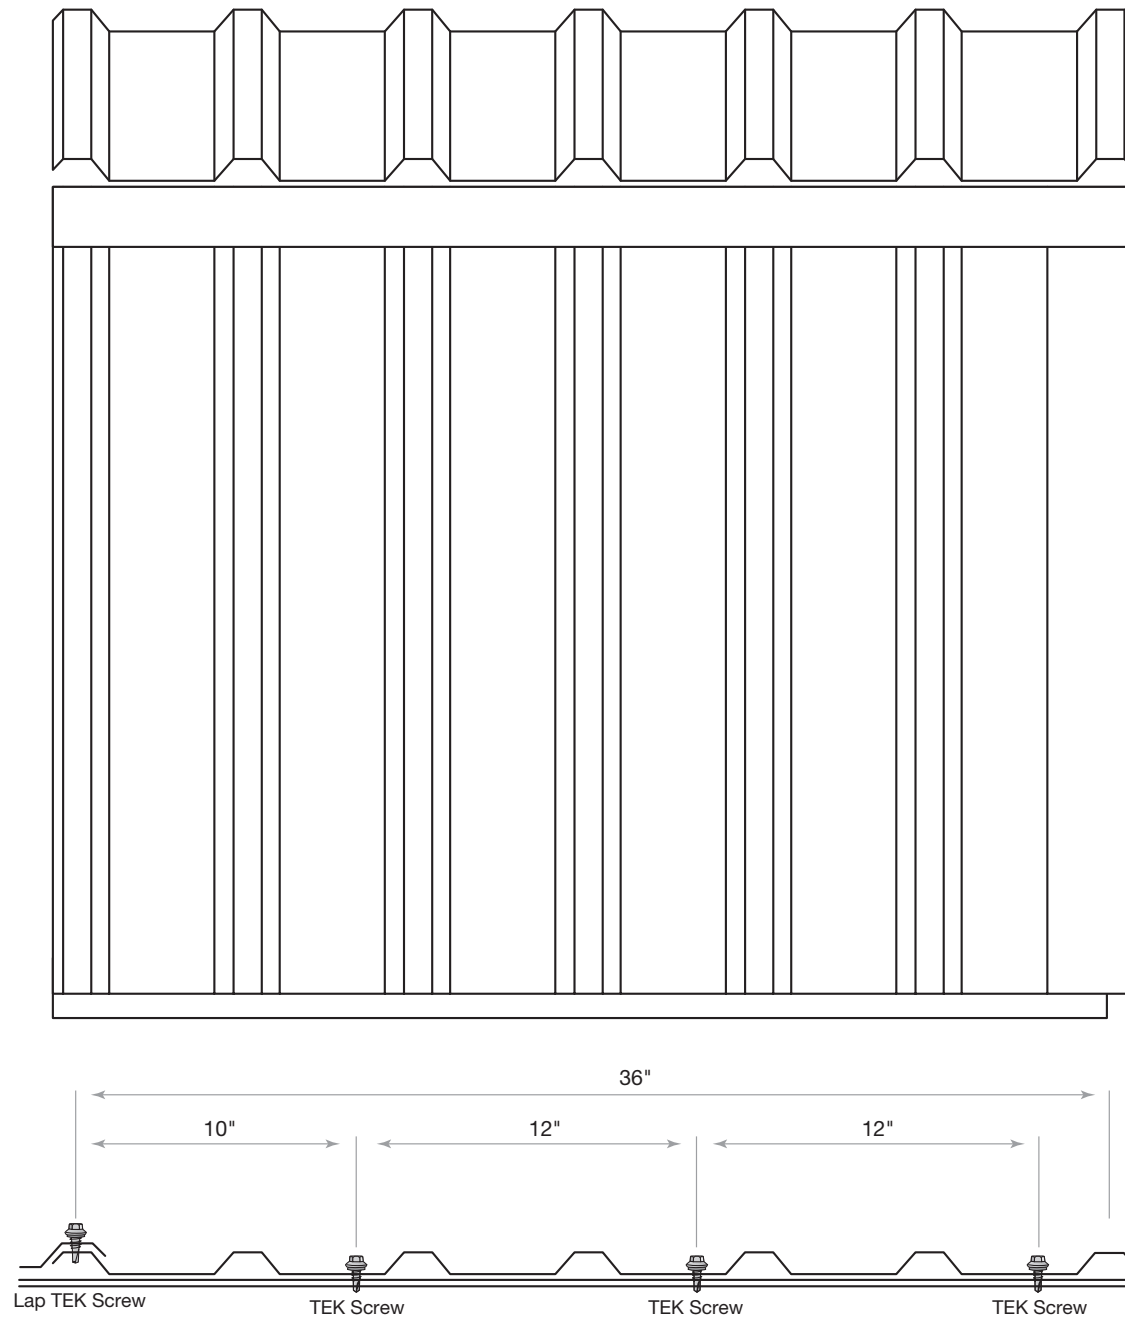

SHEETING THE ROOF

Align roof sheets with wall sheets


Place sealer tape between roof sheets to avoid leaks

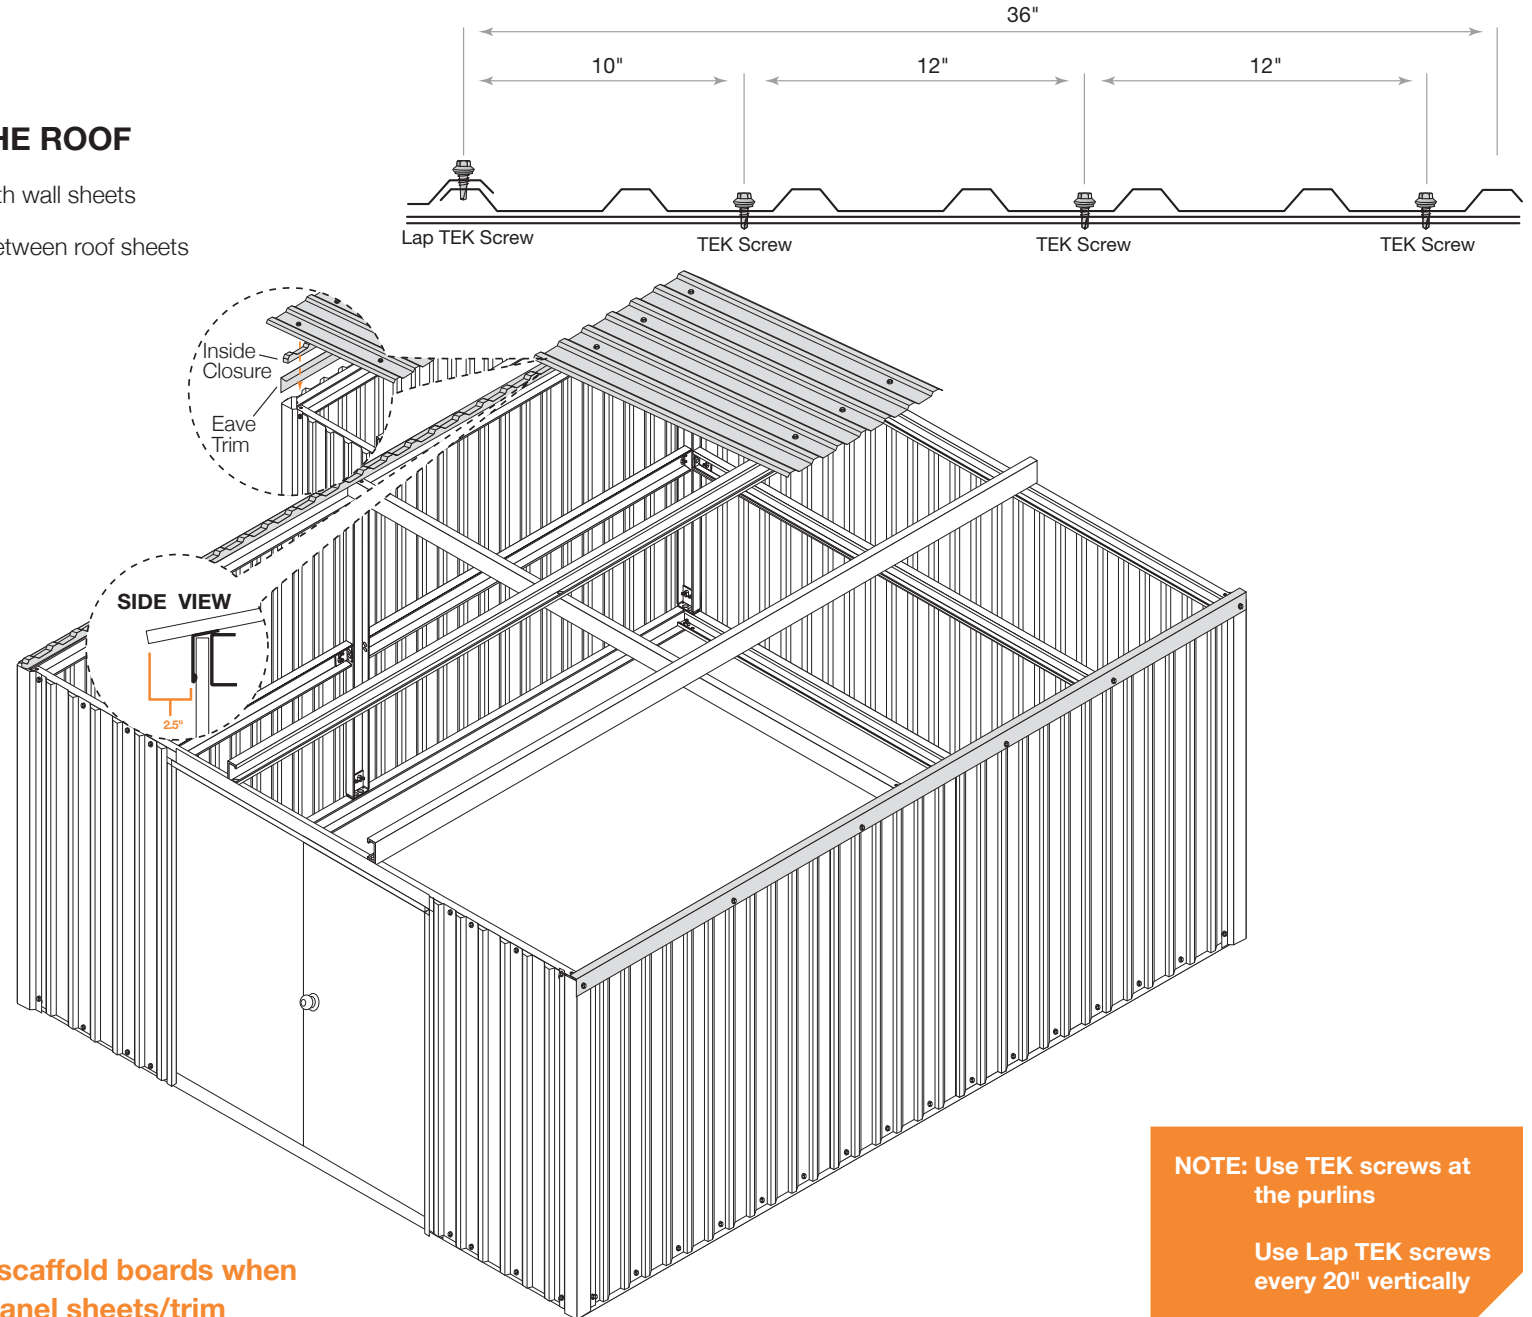

ROOFING TRIM DETAILS

CAUTION: Use scaffold boards (not included) for support while installing roof sheets and trim.


NOTE: A chalk line will assist in closure and ridge roll placement

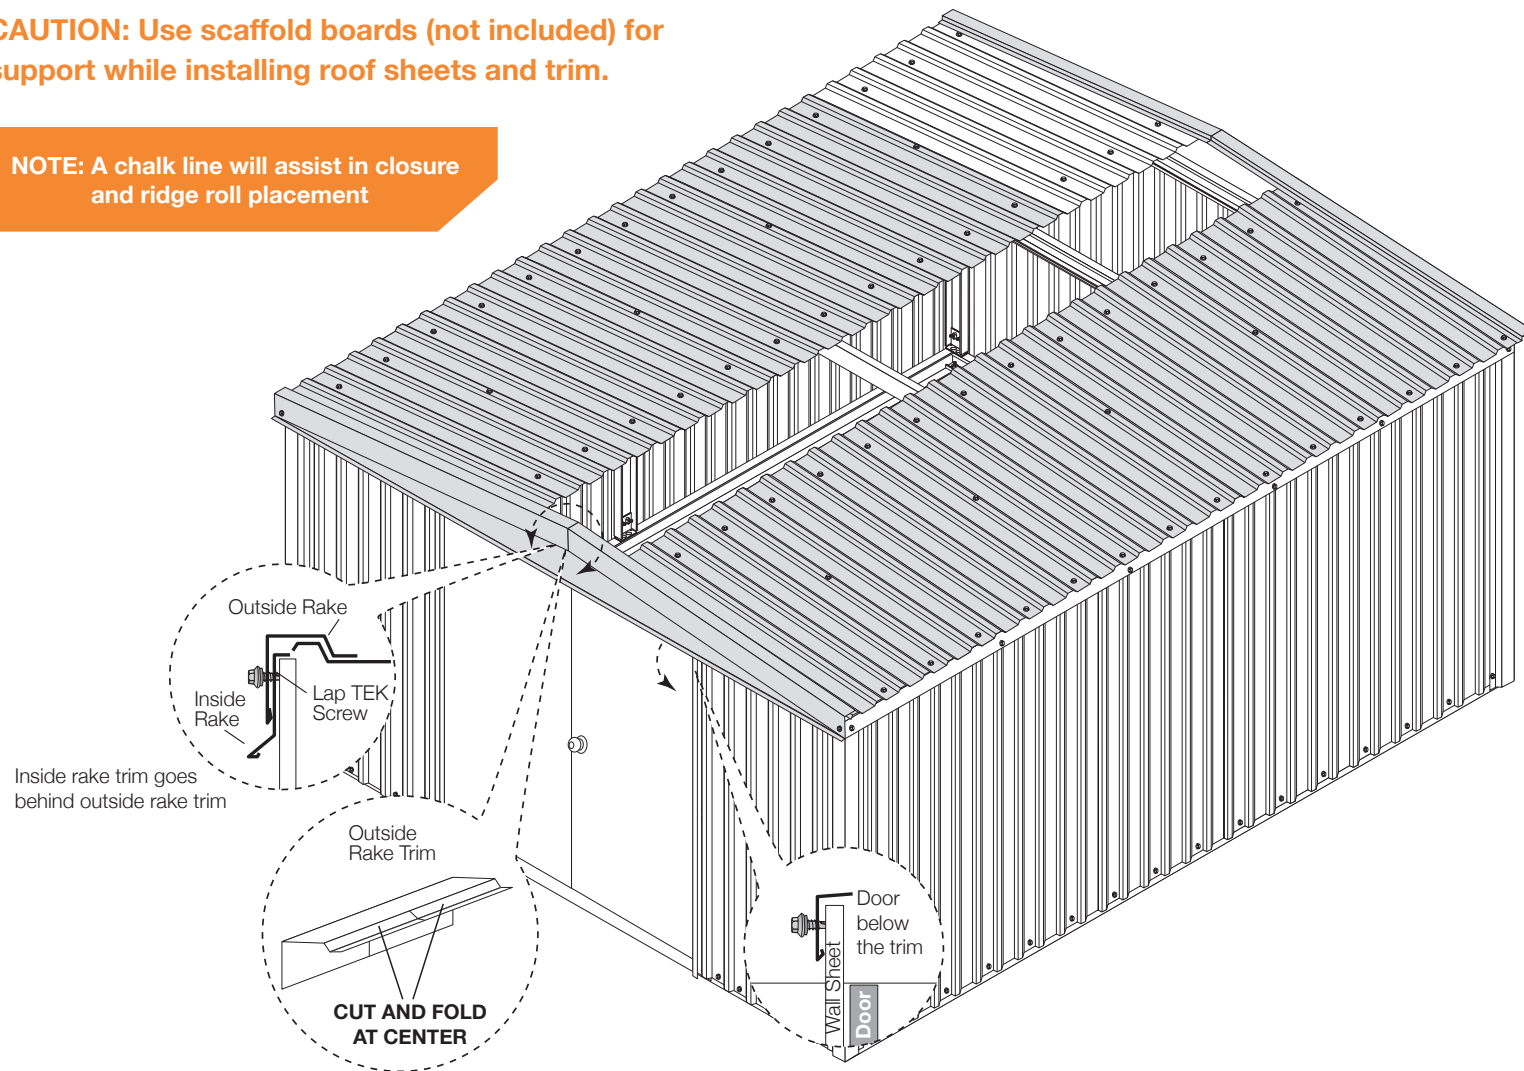

SKYLIGHT RIDGE ROLL INSTALLATION

CAUTION: Use scaffold boards (not included) for support while installing roof sheets and trim

HINT: Screw corner of ridge roll and middle first to maintain pitch. Install remainder of screws.

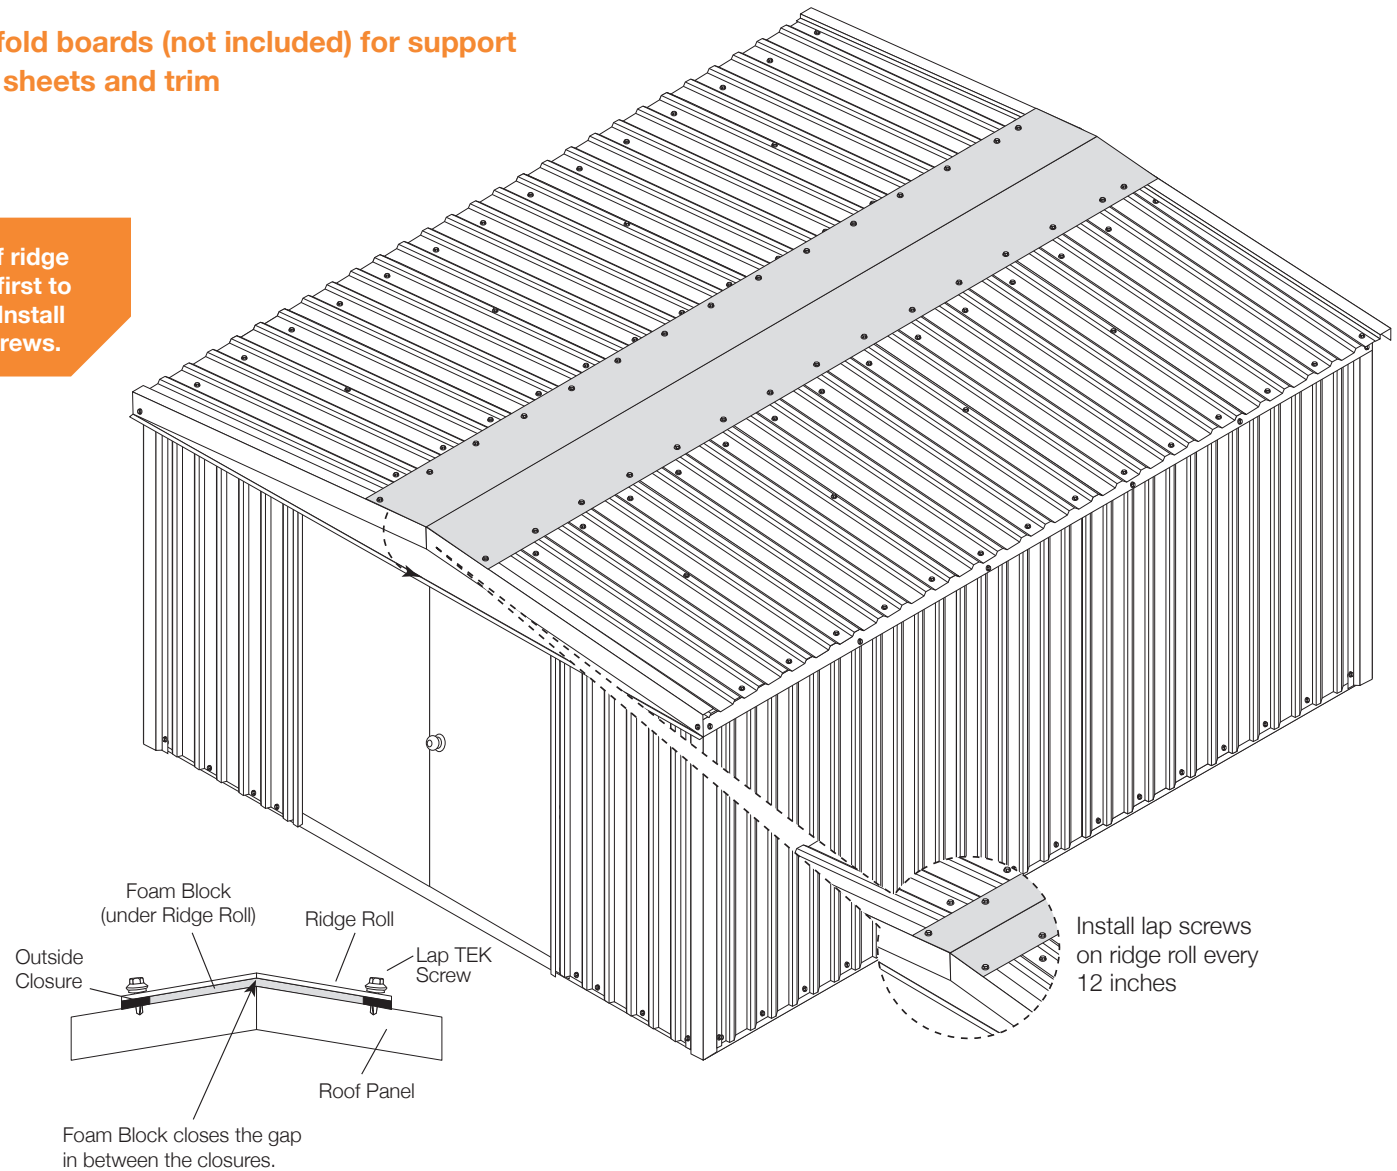

TOTAL BUILDING MEASUREMENTS

