


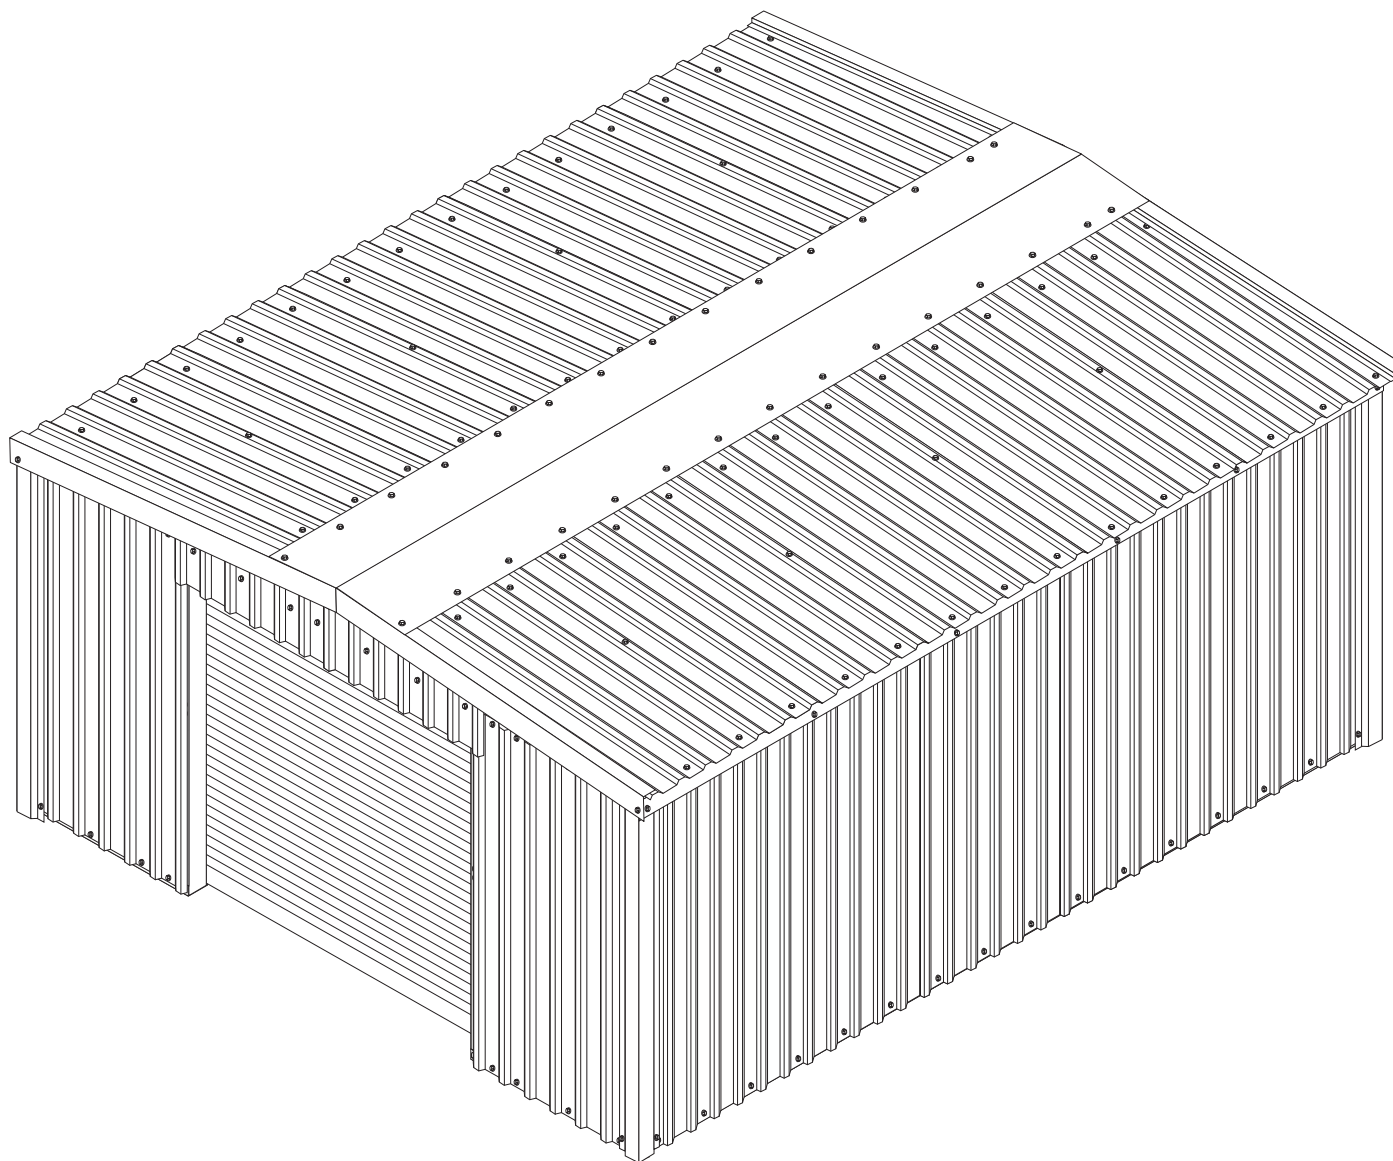

Slab Mounted: 12' x 15' x 8' Backyard Building with Optional Center Girts Instructions


Mueller Backyard Building Kits are not engineered structures and do not meet any specific building code criteria.
For video installation instructions, visit our website at www.muellerinc.com/downloads-home/videos-home

877-2- MUELLER • www.muellerinc.com




PARTS LIST

Refer to the parts list on the itemized invoice delivered with your building. All parts are stenciled on the inside of the channel, purlin, girts and rafters. Example of this below:


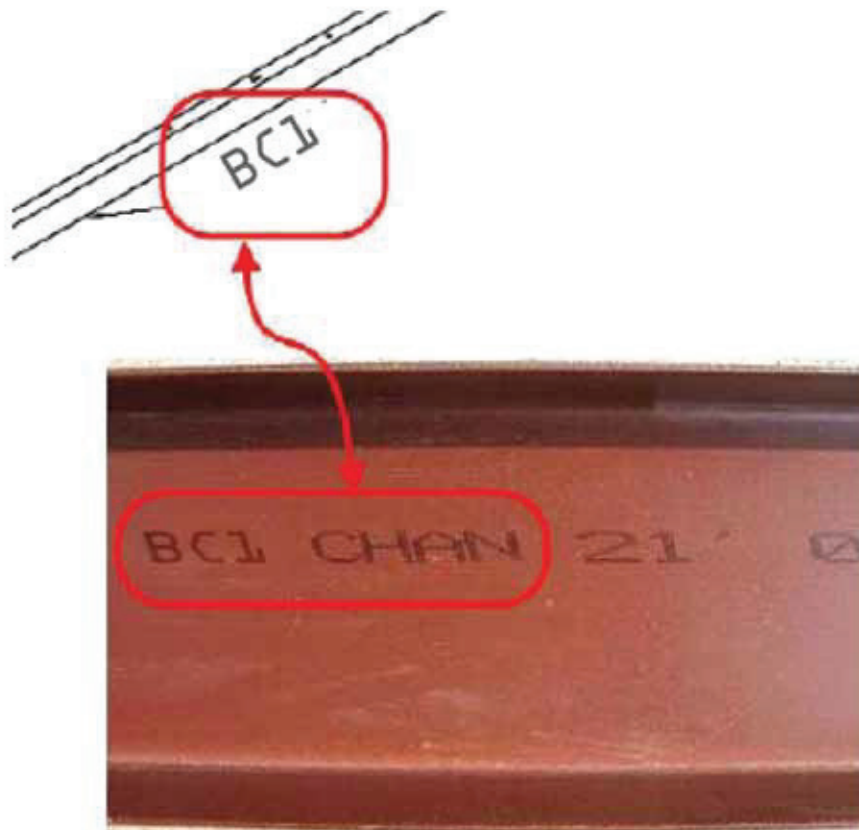


TYPES OF SCREWS

TEK Screw
For attaching sheet metal to purlin

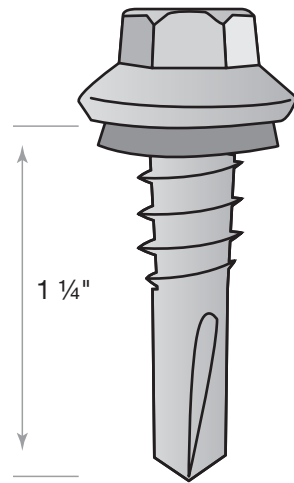


Lap TEK Screw
For attaching sheet metal to sheet metal

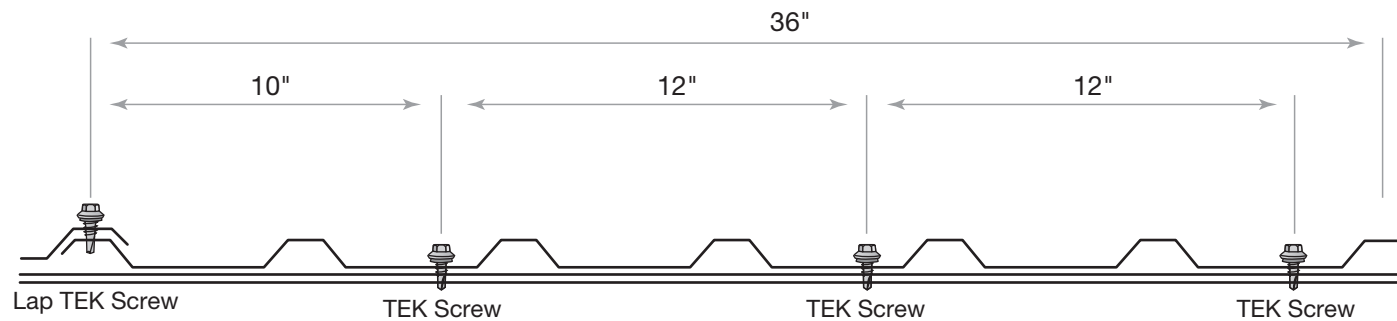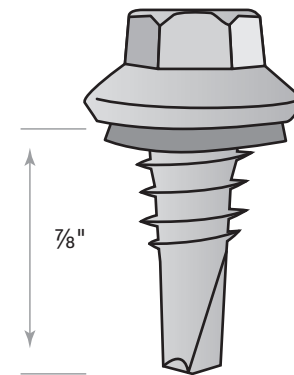


NOTE: Make sure to use TEK screws to attach sheets to purlins, lap TEK screws to attach sheets to sheets.

SHEETING SCREW PLACEMENT

WALL SHEETS

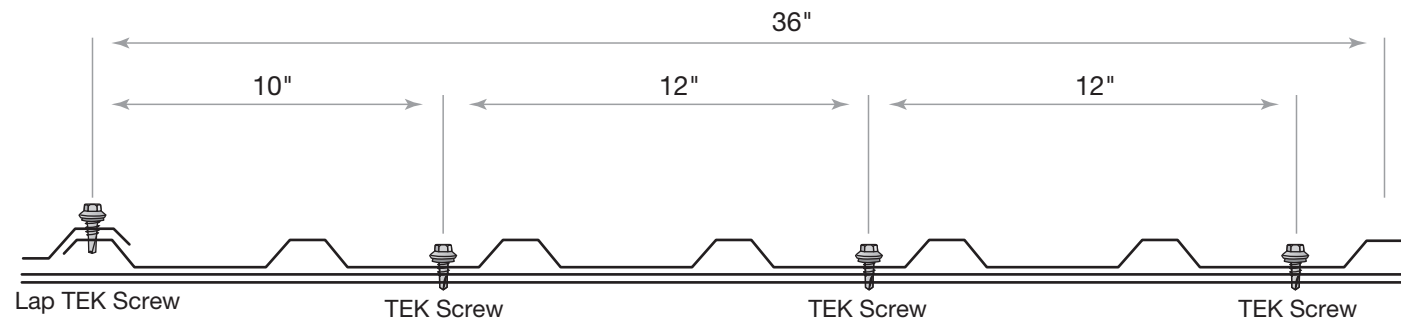

ROOF SHEETS

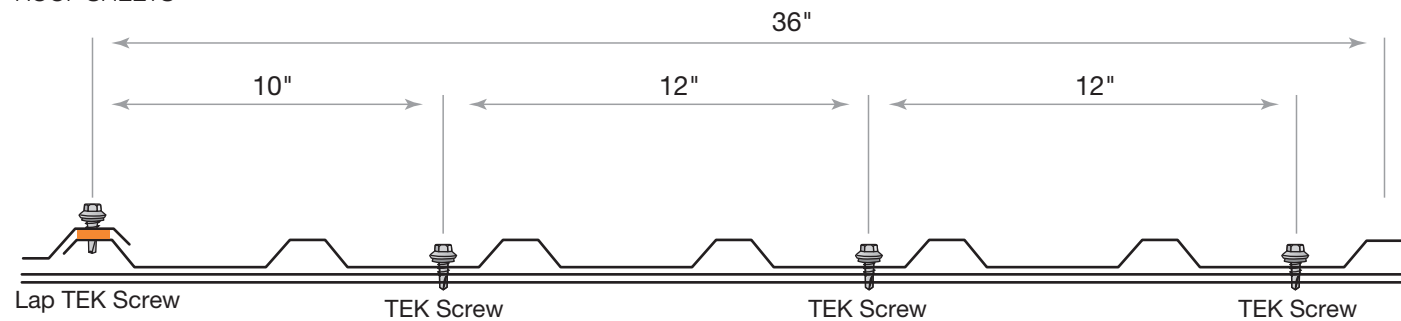



Place sealer tape between roof sheets only.

NOTE: Make sure to use TEK screws to attach sheets to purlins, lap TEK screws to attach sheets to sheets.

BASE LAYOUT (BC-1 AND BP-1)


NOTE: Leading and trailing edge of channels are overbent for a tight fit. Spread apart as needed to nest the purlin into the channel.

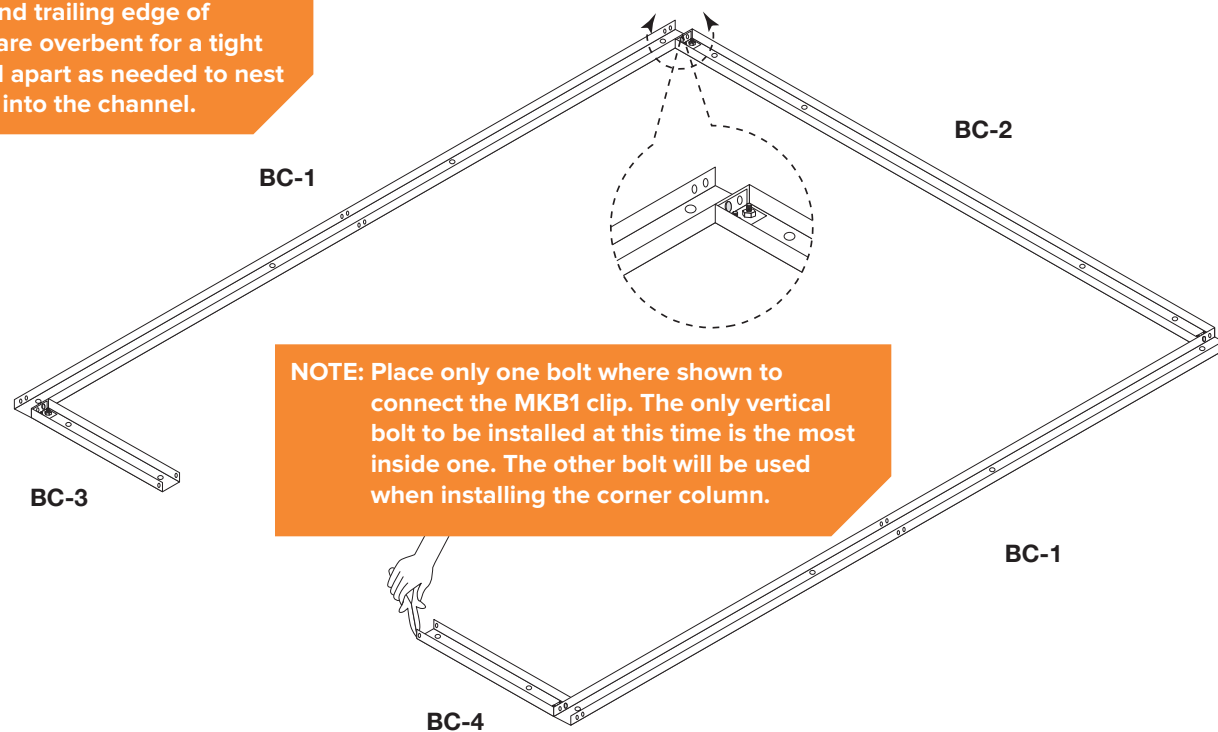

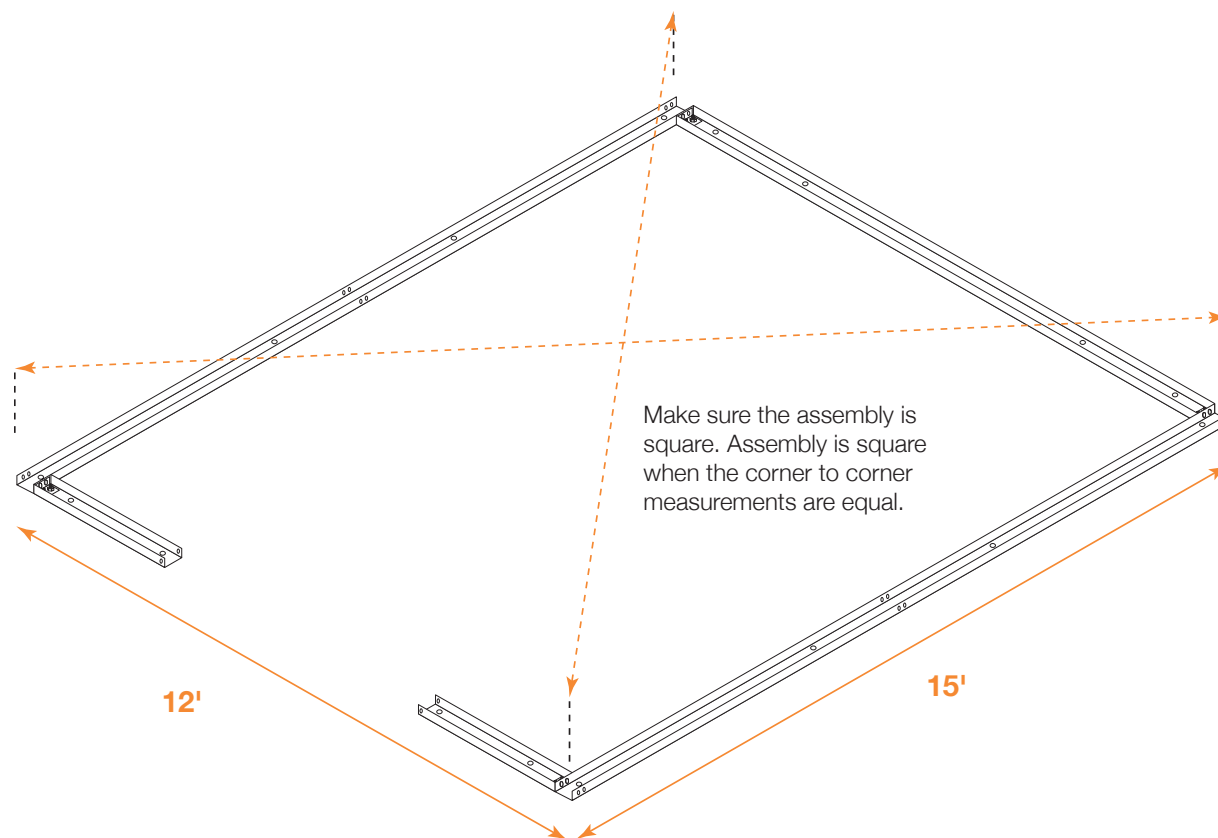
MAKE SURE THE ASSEMBLY IS SQUARE

ANCHOR BOLT PLACEMENT


NOTE: Make sure assembly is square.

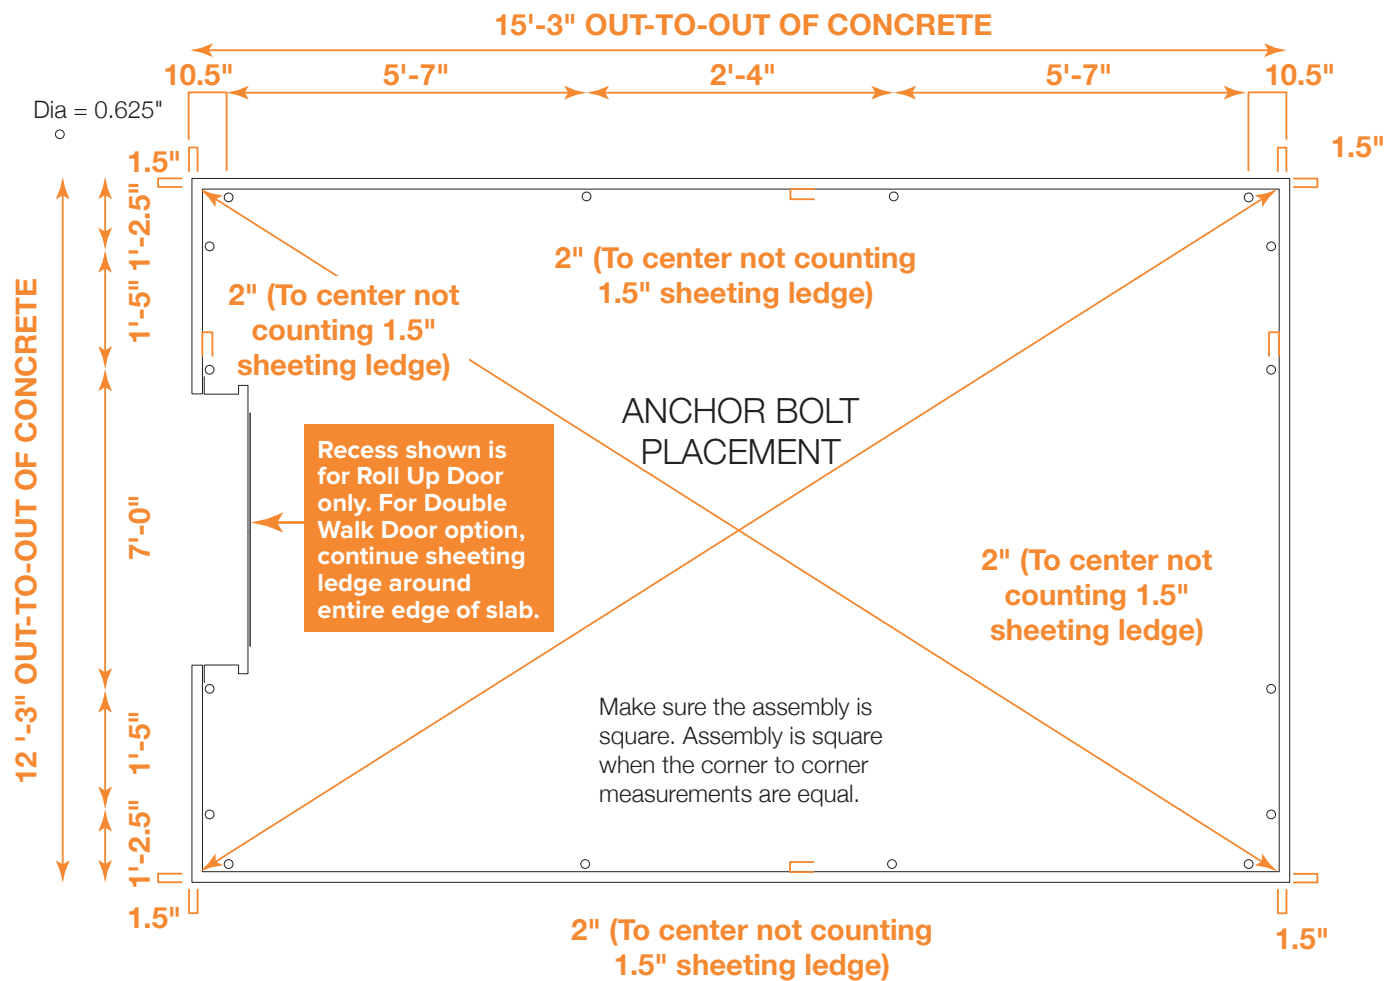


ANCHOR BOLT PLACEMENT DETAILS

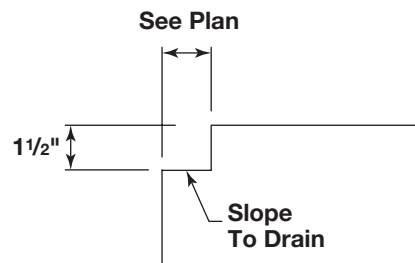


**TYP. SHEETING RECESS
WITH BASE DRIP EDGE TRIM**

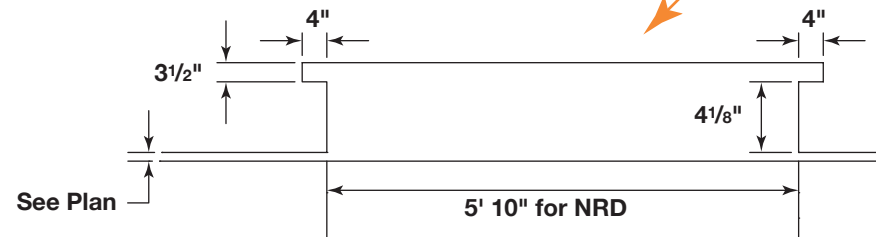


TYP. ROLL UP DOOR RECESS LAYOUT

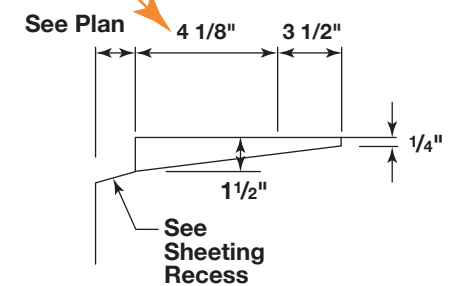

TYP. ROLL UP DOOR RECESS

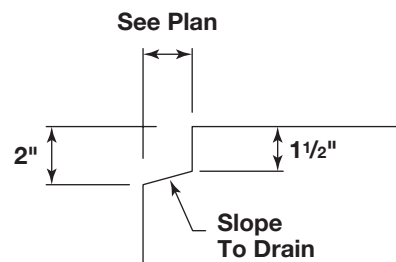


**TYP. SHEETING RECESS
WITHOUT BASE DRIP EDGE TRIM**

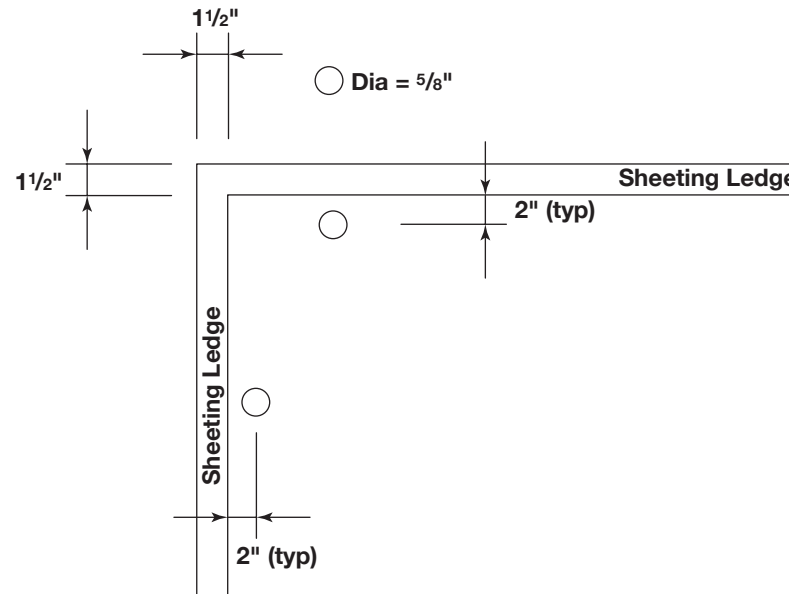


NOTE: One of the methods must be used. See erection details for additional information.

ERECTING COLUMNS (C-1)

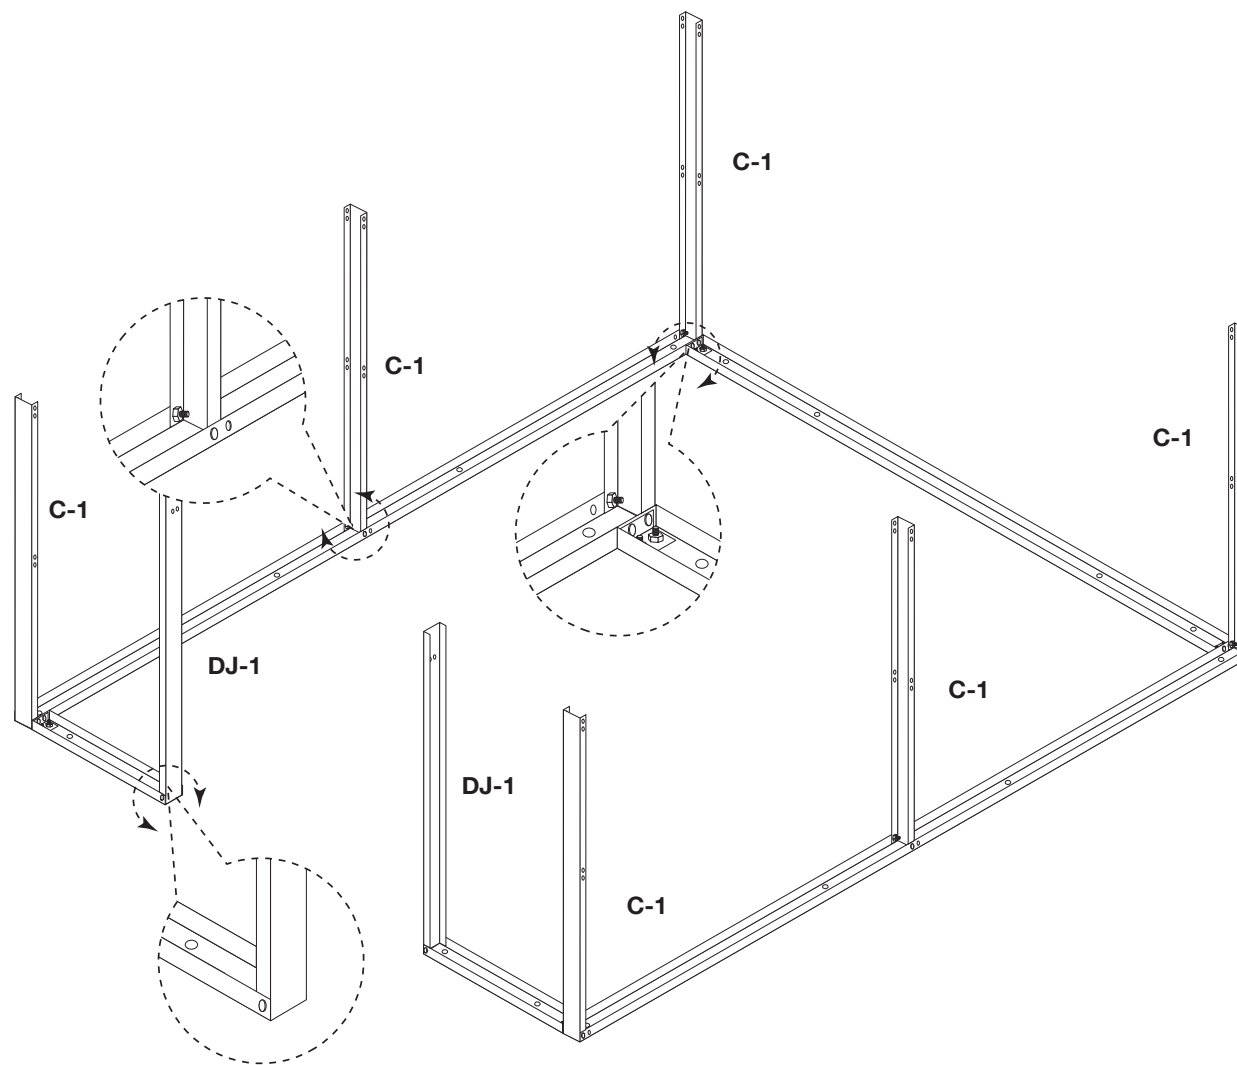


MID-GIRTS (OPTIONAL MG-1, MG-2 AND MG-3)


DOOR HEADER (DH-1)

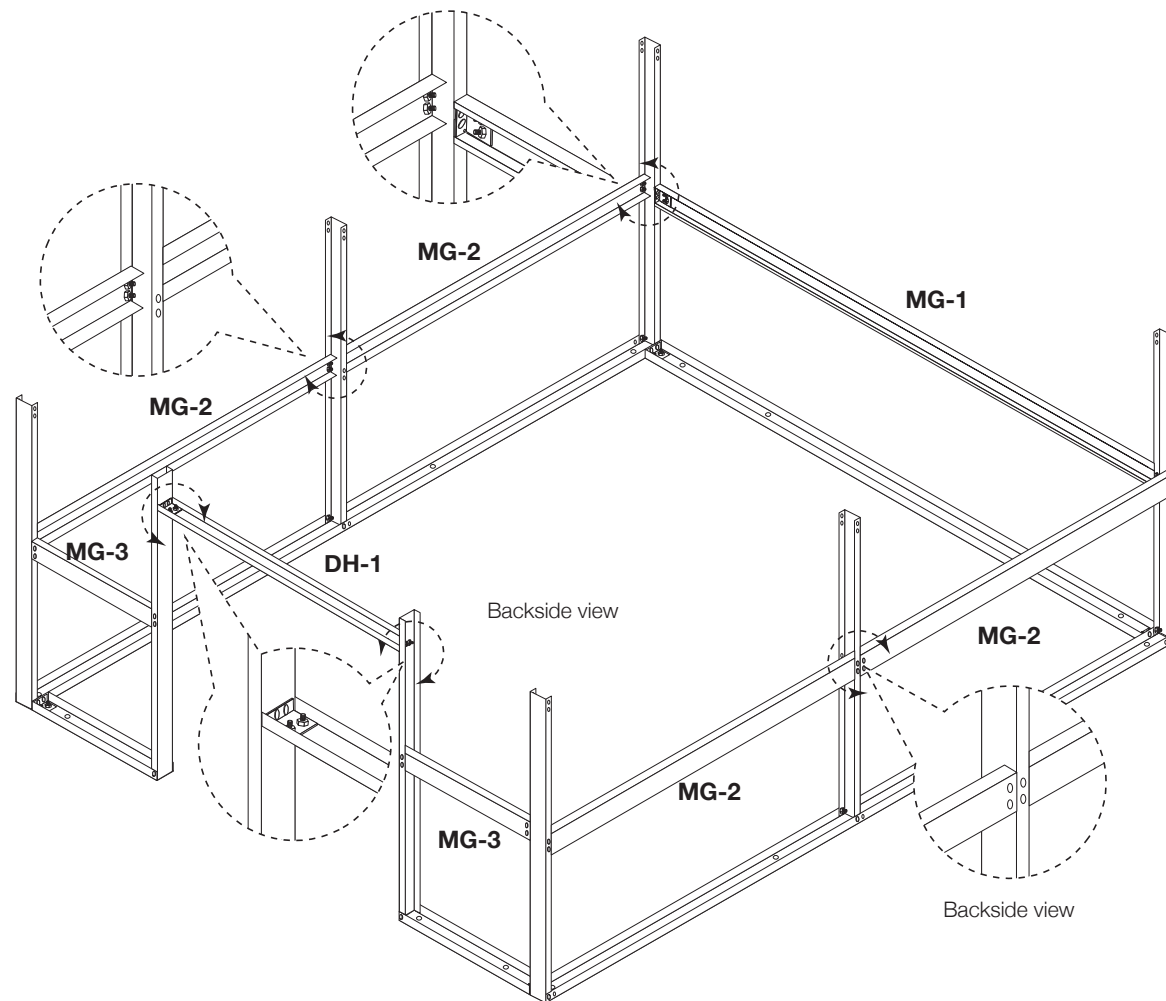

EAVE CHANNEL (EC-1)

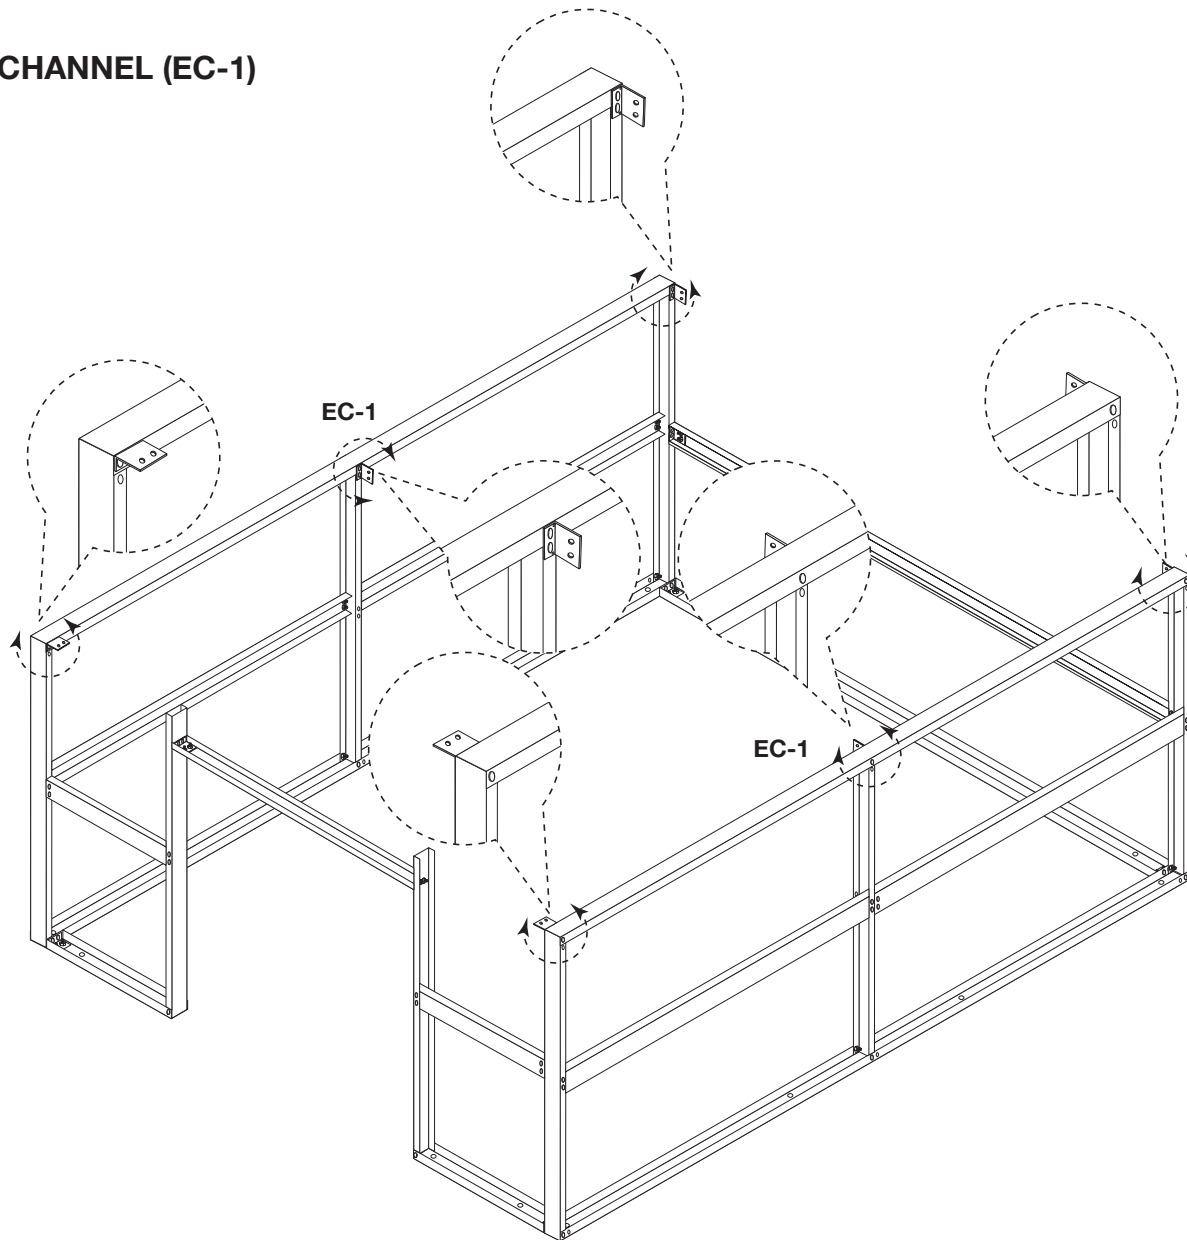


RAFTERS (R-1 AND R-2)

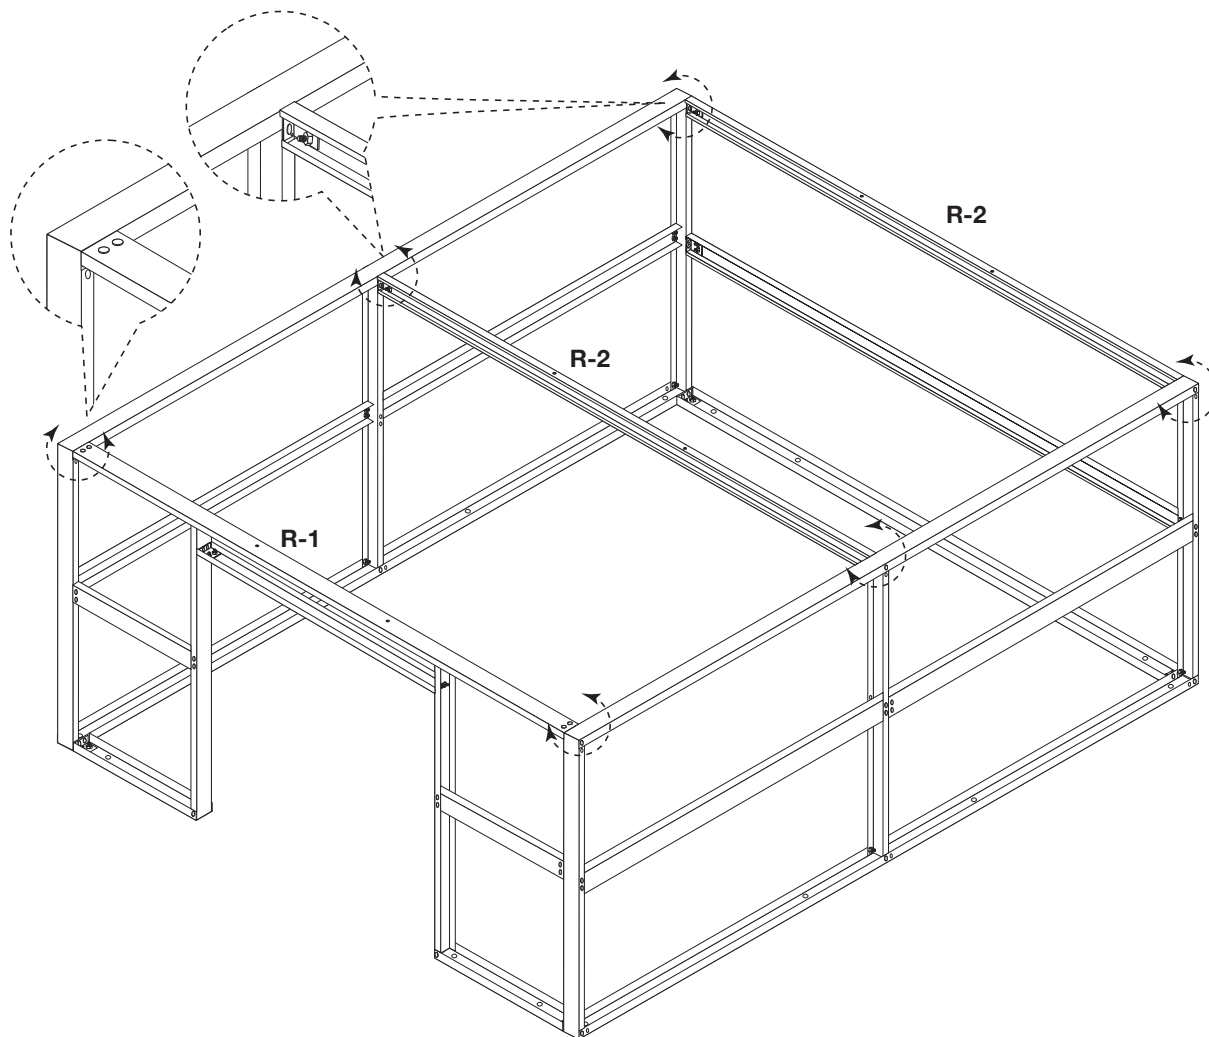


ROOF PURLIN

Open side of RP-1 faces to center of building

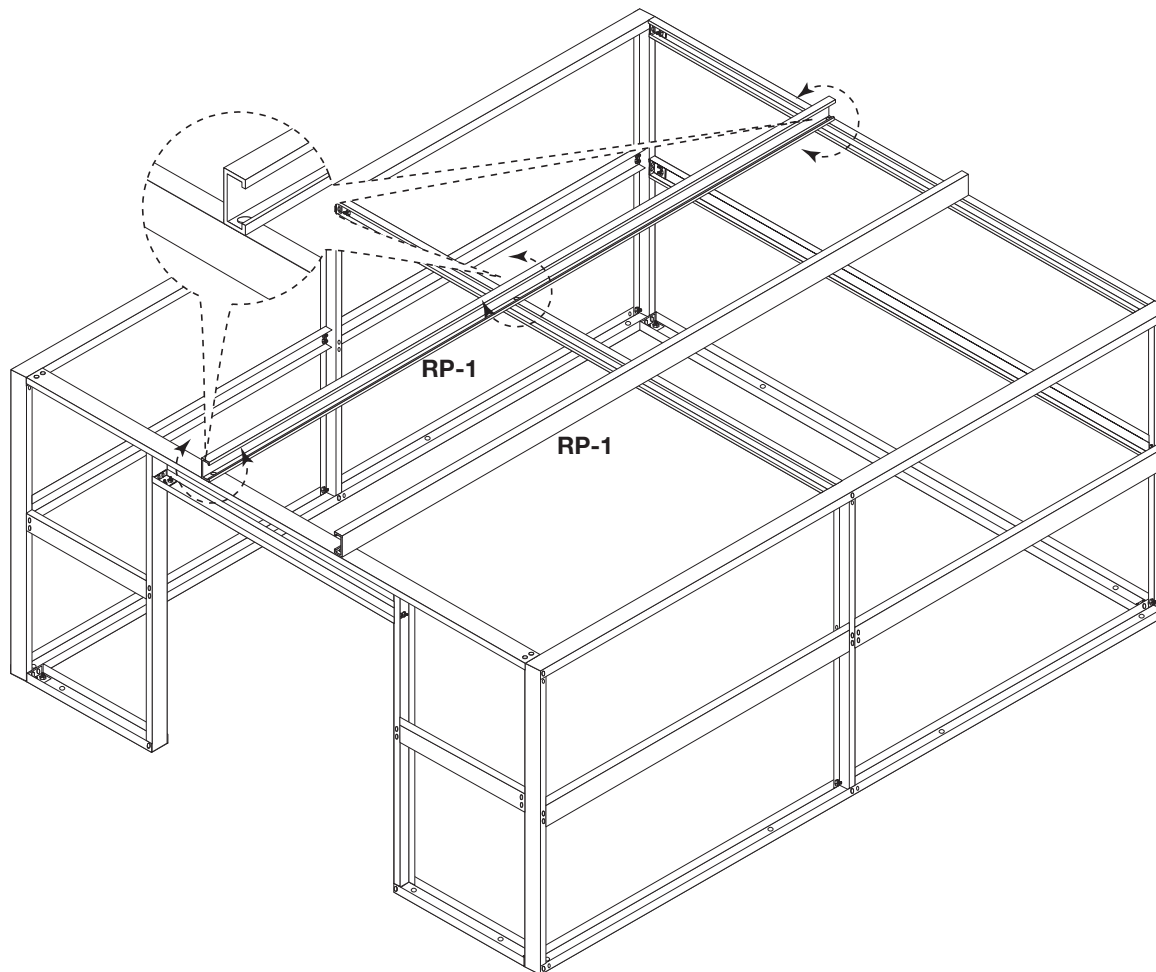

WINDOW (OPTIONAL)


Start sheet 1" past steel line.

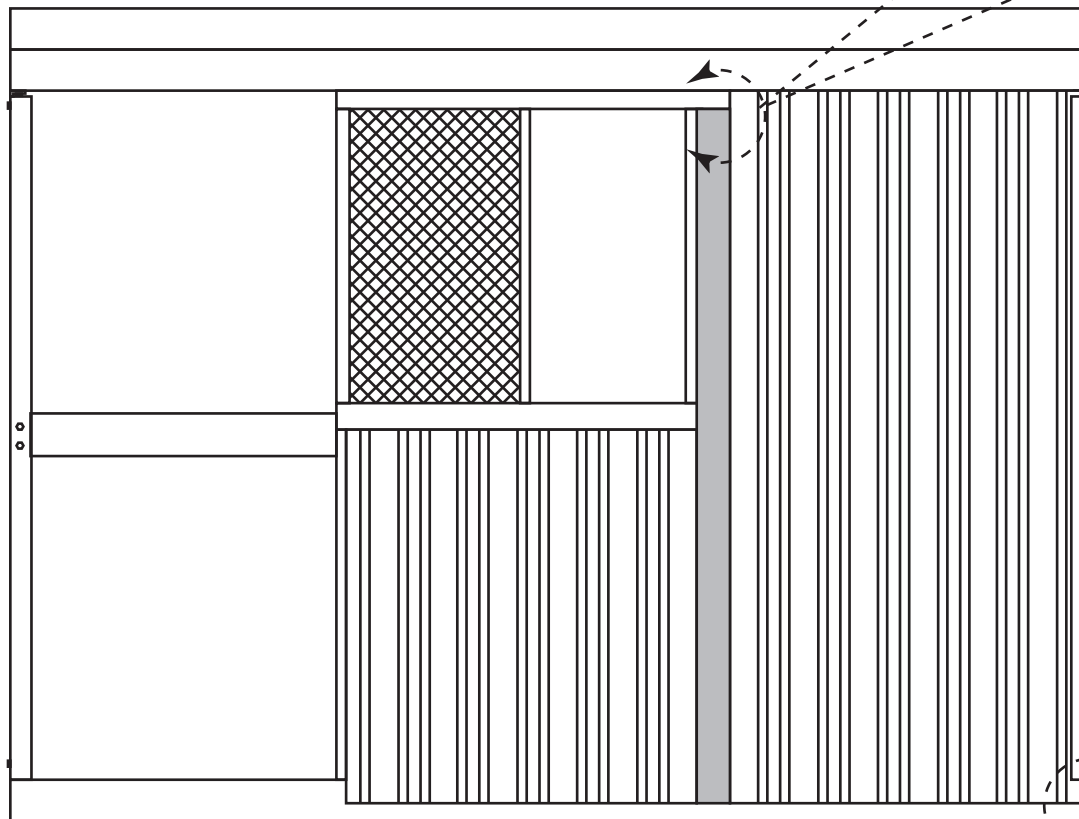

NOTE: Sheets below window will need to be field cut for window assembly.


Insert window and flap flush to sheet. Add drip edge window trim when installing eave trim.

See installation instructions included with the window packaging.

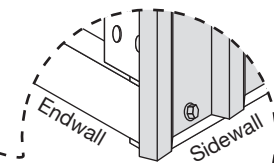

SHEETING


NOTE: Make sure the frame is plumb and level, and tighten all bolts prior to sheeting. Repeat for each wall.

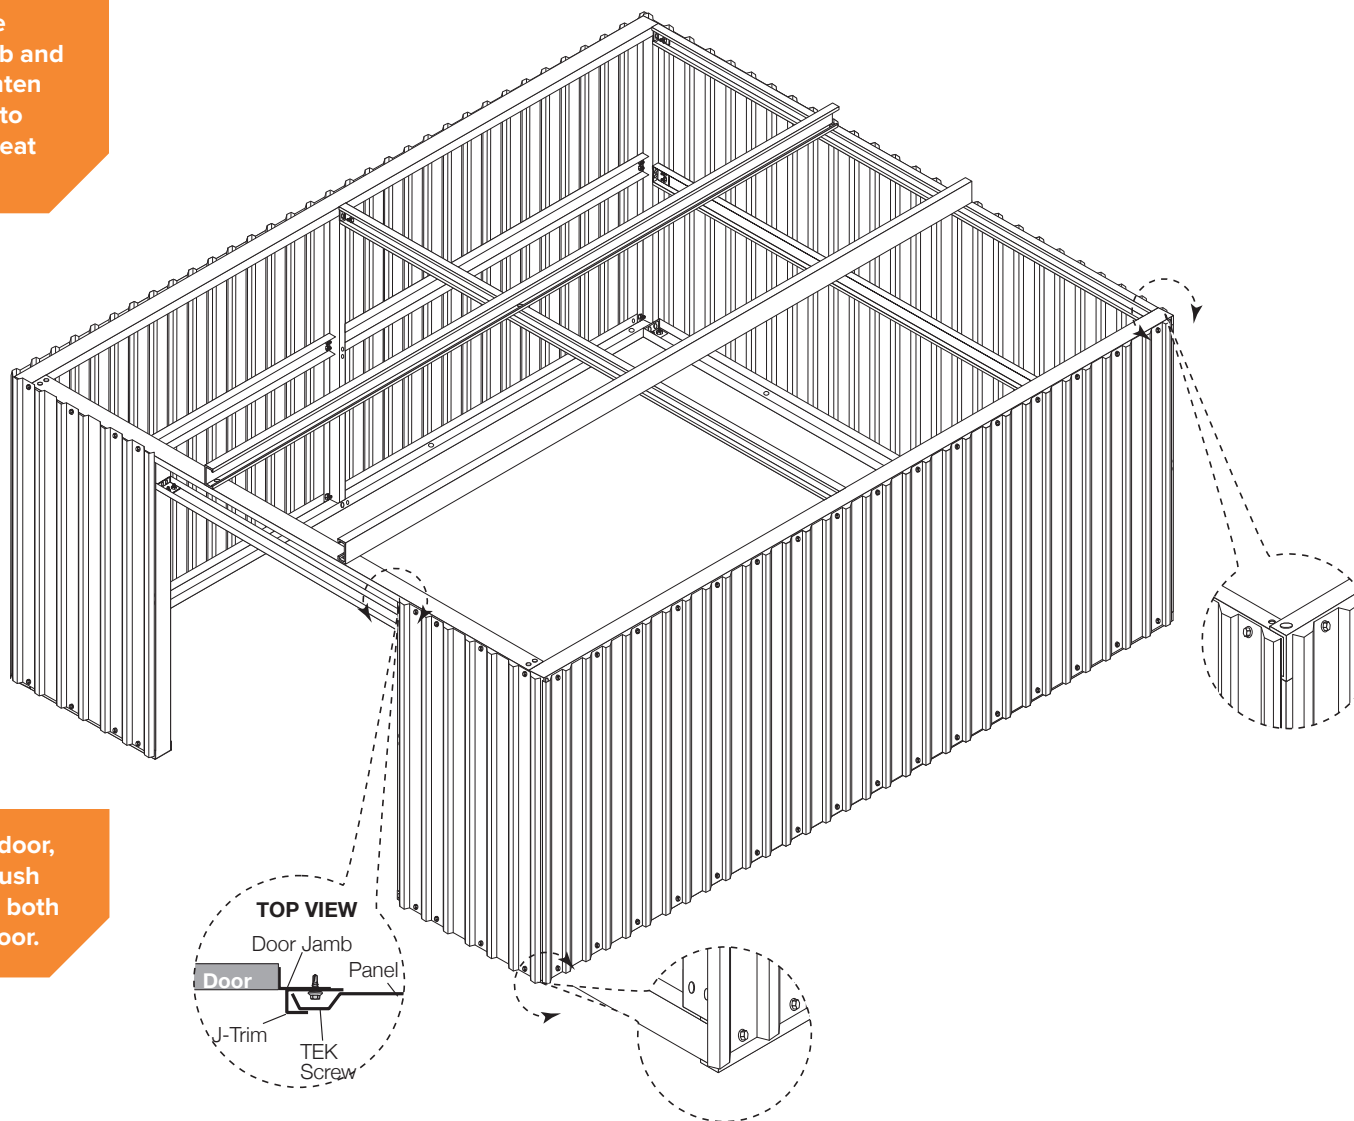

NOTE: For side with door, start sheets flush with J-trim on both sides of the door.


SHEETING ENDWALL WITH RUD DOOR

To install the RUD, see the RUD video and instructions.

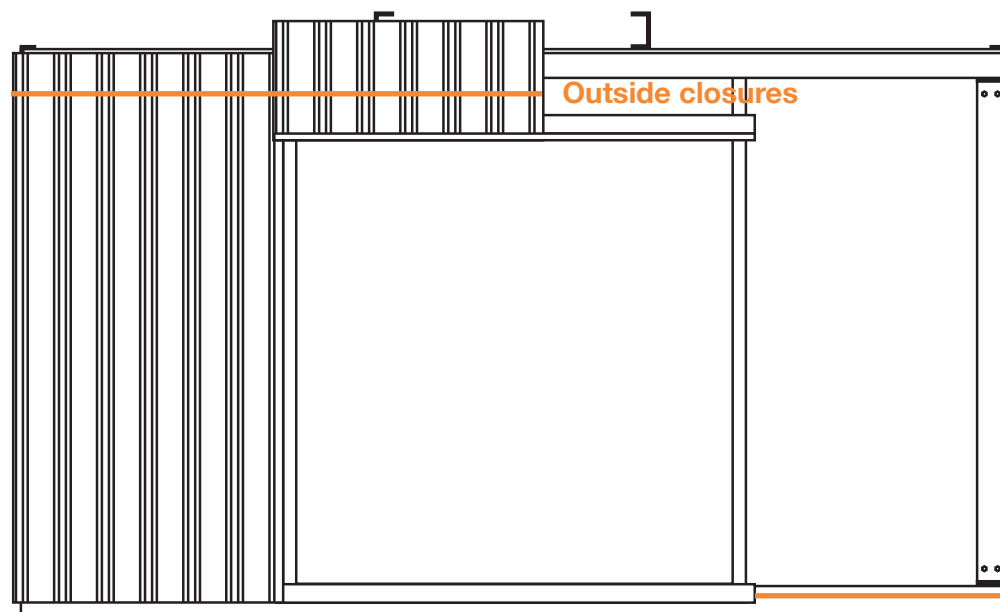

NOTE: If using optional walk door, set jamb trim inside measurement at 5' 10 1/8".


Inside closures

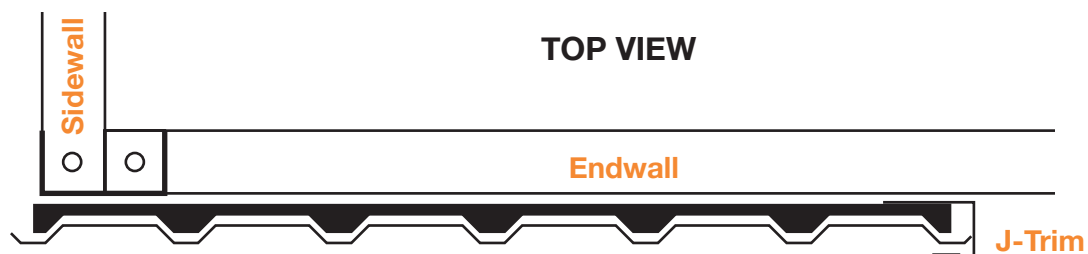

Inside closure goes on the bottom and outside closure goes on top.


NOTE: Start sheets inside of J-Trim

SHEETING SIDEWALL

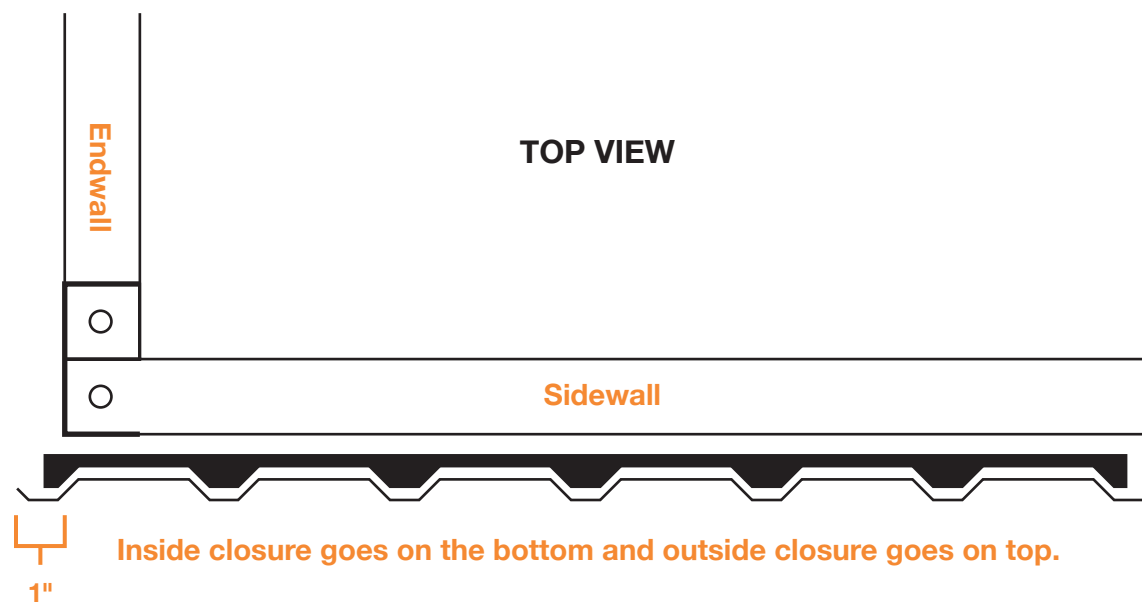


NOTE: Start sheets 1" out from endwall

SHEETING ENDWALL WITHOUT DOOR

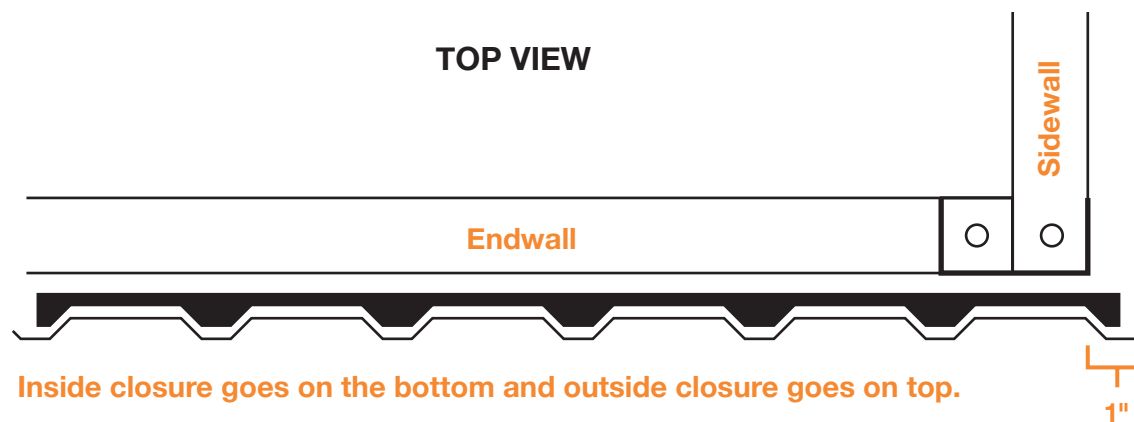

NOTE: Start sheets 1" out from the sidewall

CORNER TRIM

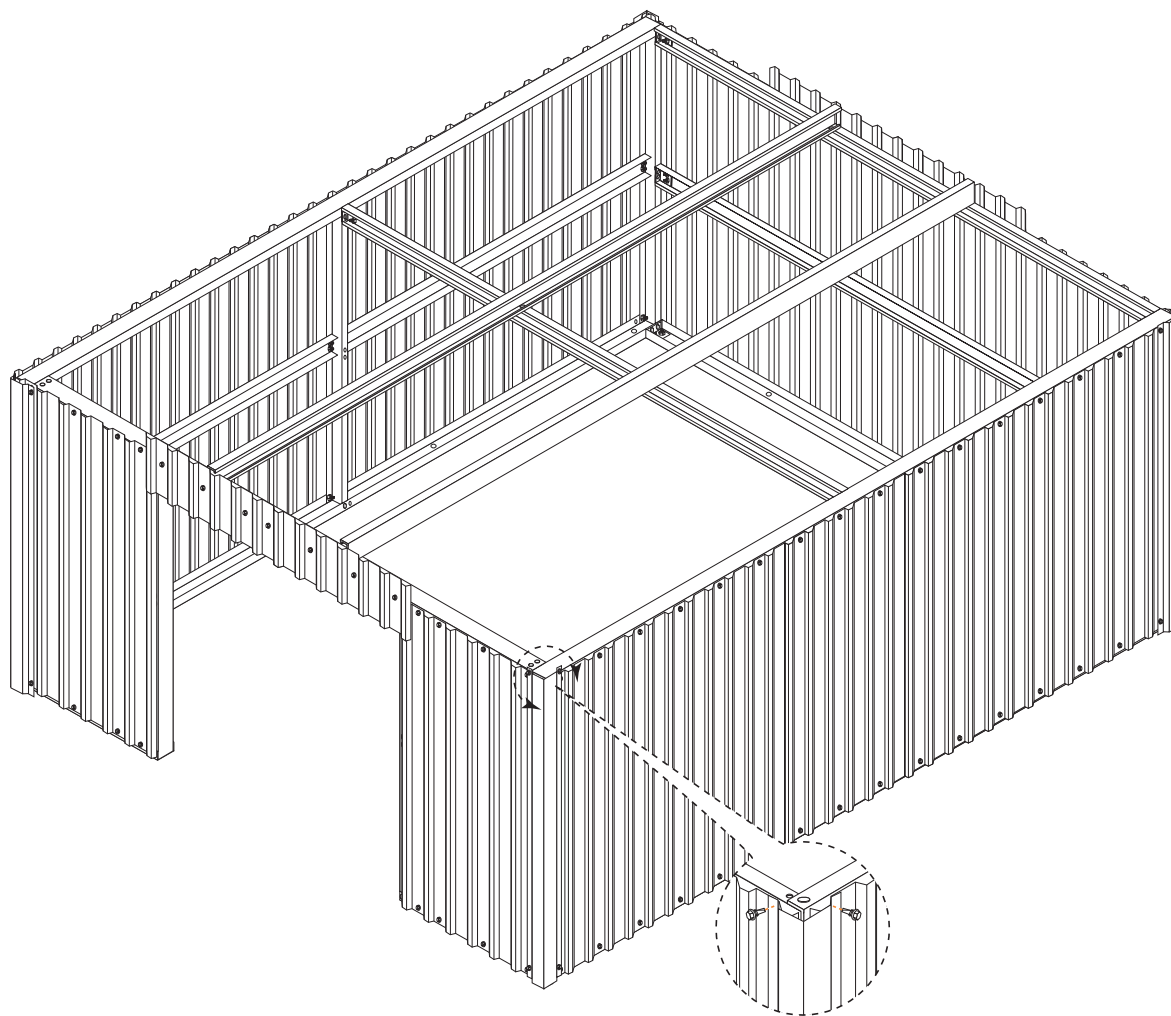


BACK SIDE WALL

Roof to wall sheet alignment

Align major ribs from wall to major rib on roof


NOTE: Make sure panels remain square during installation.

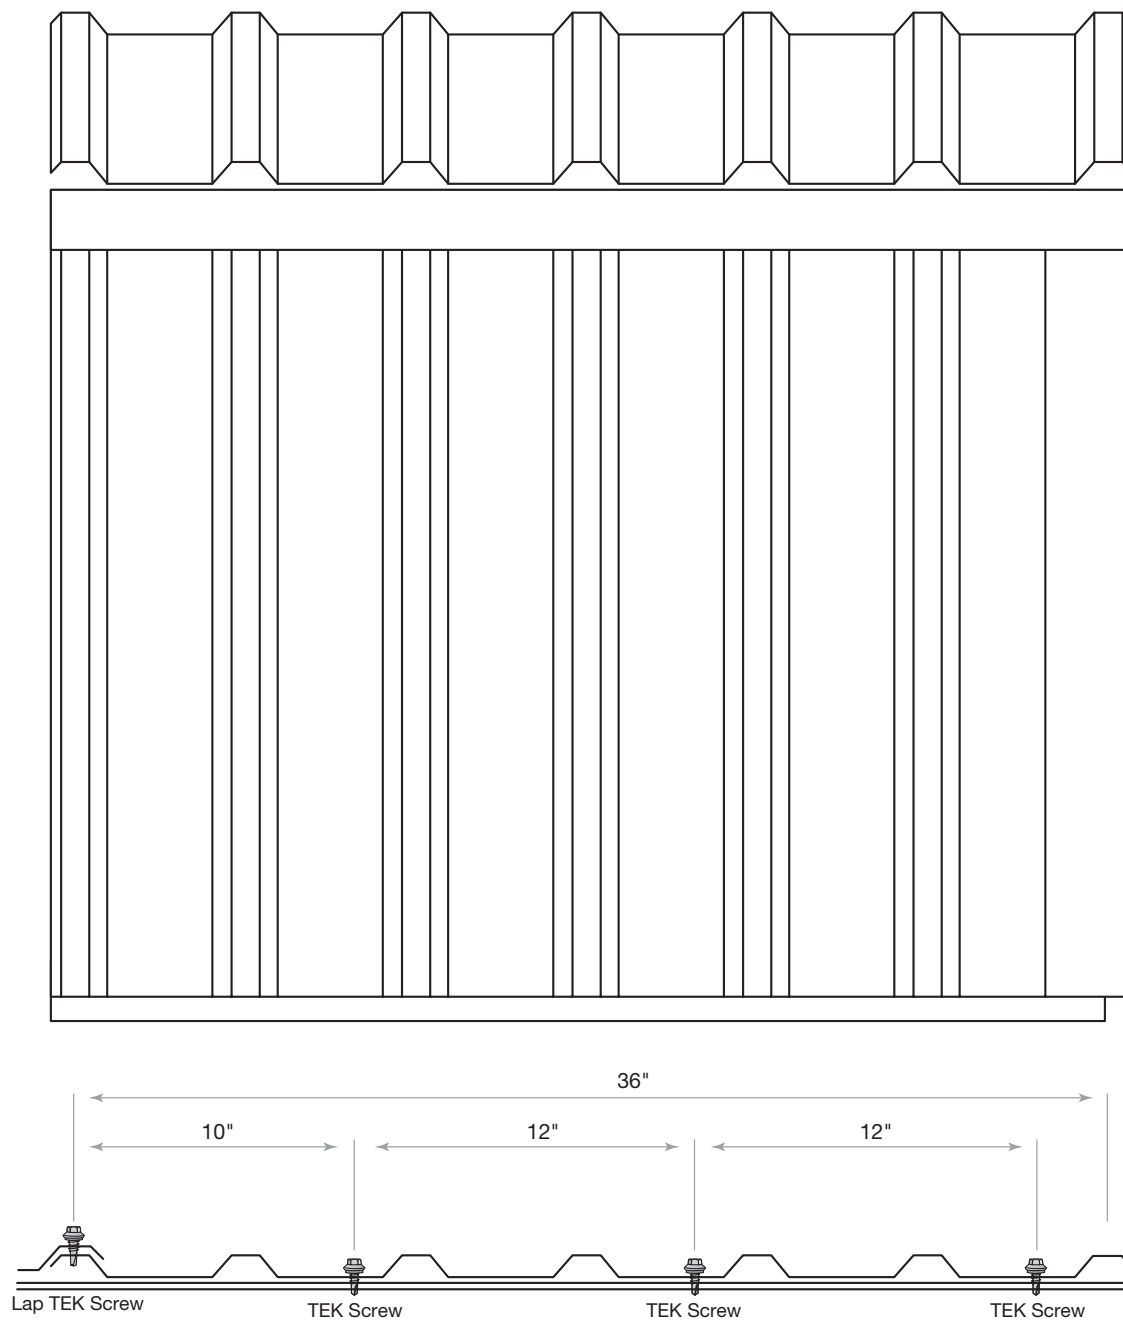

SHEETING THE ROOF

Align roof sheets with wall sheets

Place sealer tape between roof sheets
to avoid leaks

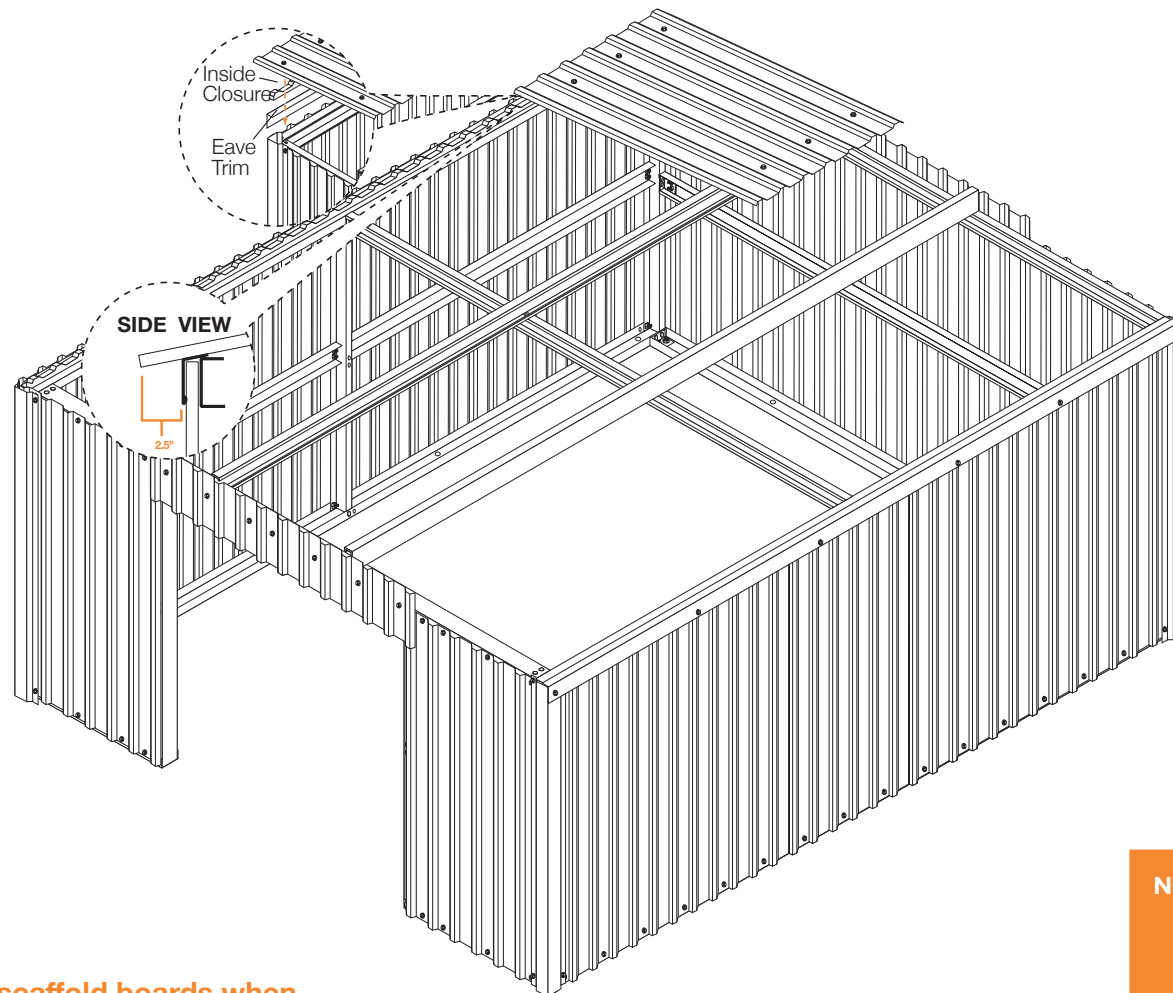

CAUTION: Use scaffold boards when
installing roof panel sheets/trim


NOTE: Use TEK screws at
the purlins

Use Lap TEK screws
every 20\"/>

ROOFING TRIM DETAILS

CAUTION: Use scaffold boards (not included) for support while installing roof sheets and trim.


NOTE: A chalk line will assist in closure and ridge roll placement

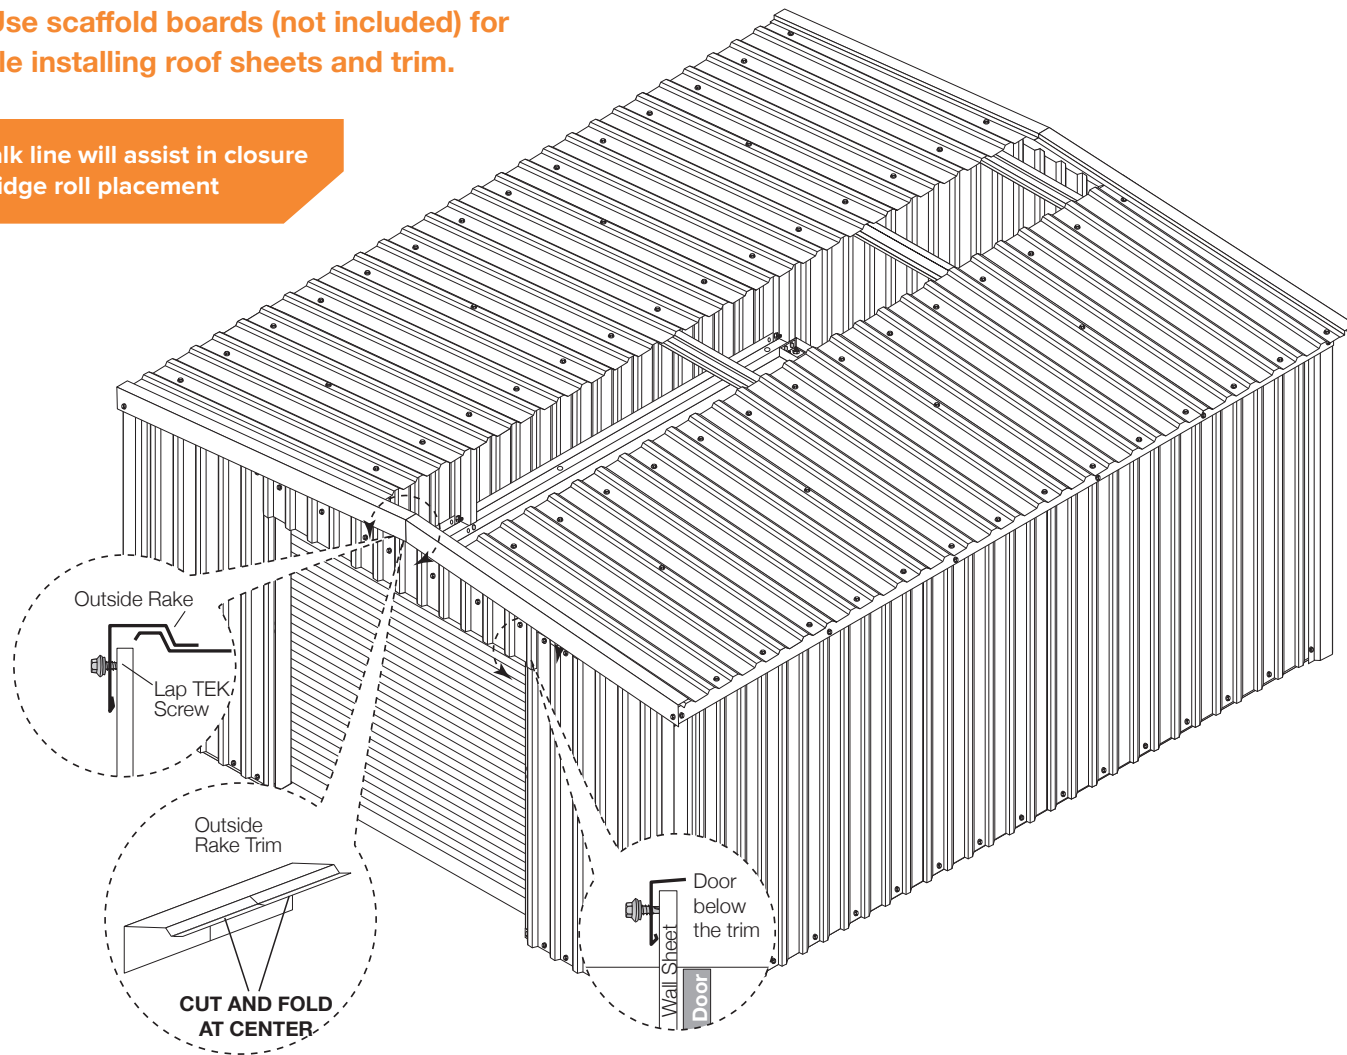

SKYLIGHT RIDGE ROLL INSTALLATION

CAUTION: Use scaffold boards (not included) for support while installing roof sheets and trim

HINT: Screw corner of ridge roll and middle first to maintain pitch. Install remainder of screws.

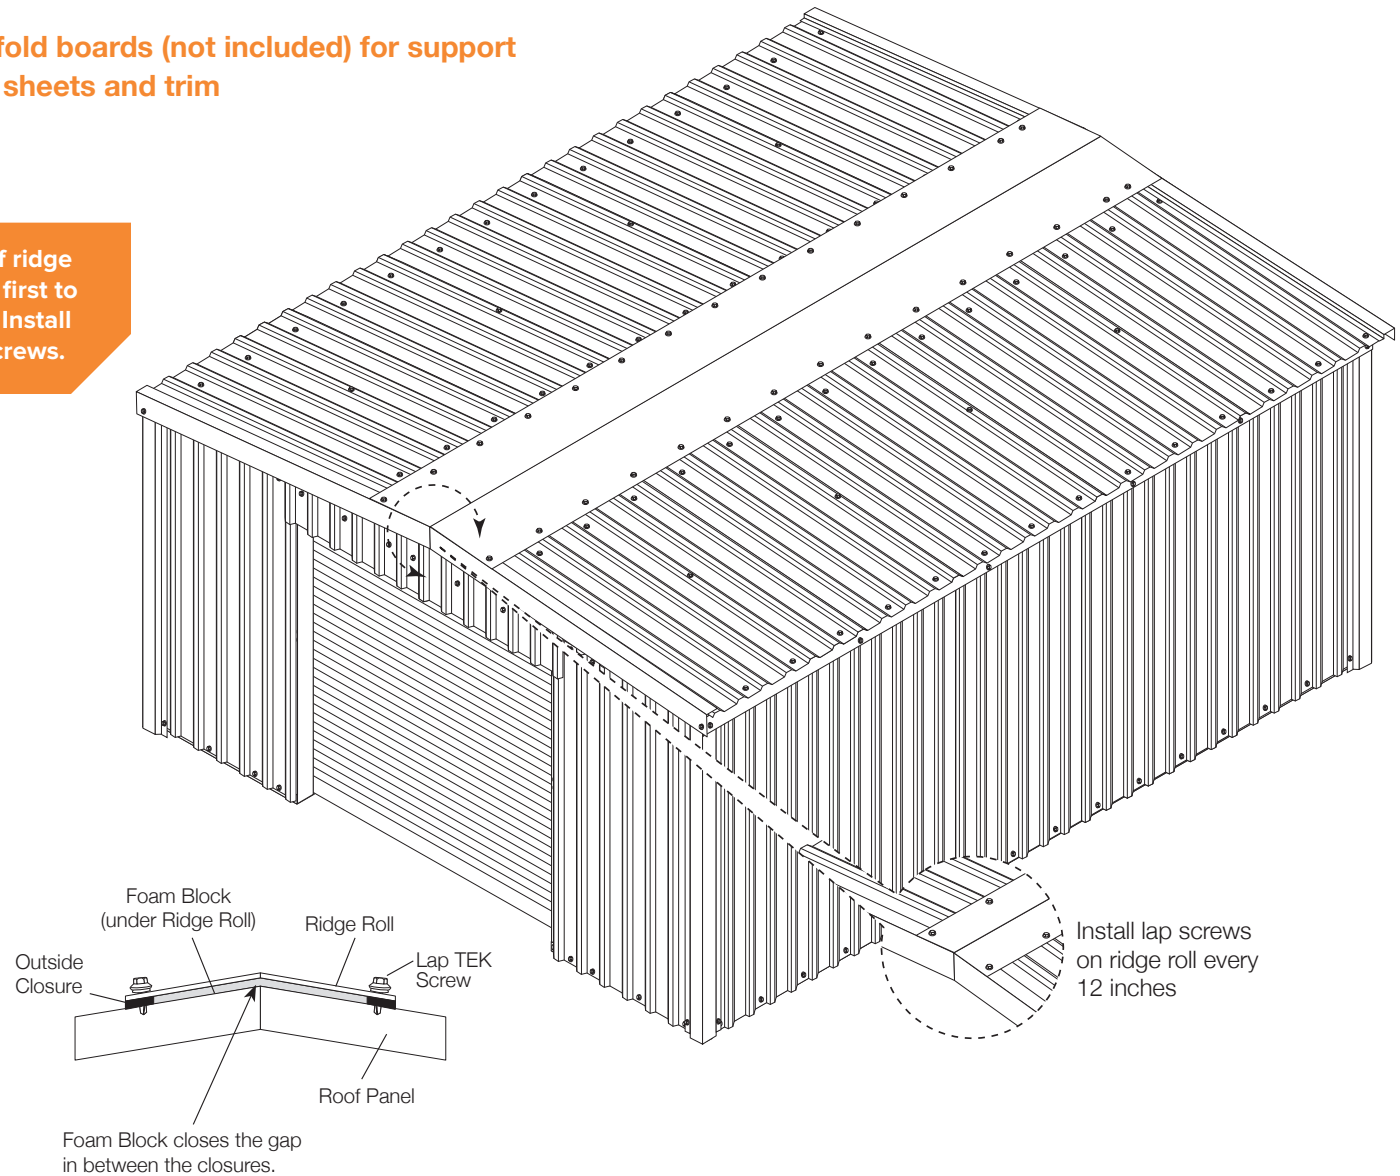

TOTAL BUILDING MEASUREMENTS

