



MUELLER, INC.
METAL BUILDINGS, ROOFING & COMPONENTS


877-2-MUELLER

www.MuellerInc.com


**COLDFORM ENDWALL
ERECTION MANUAL**

Generic EndWall:


See construction drawings
for all clip placement.

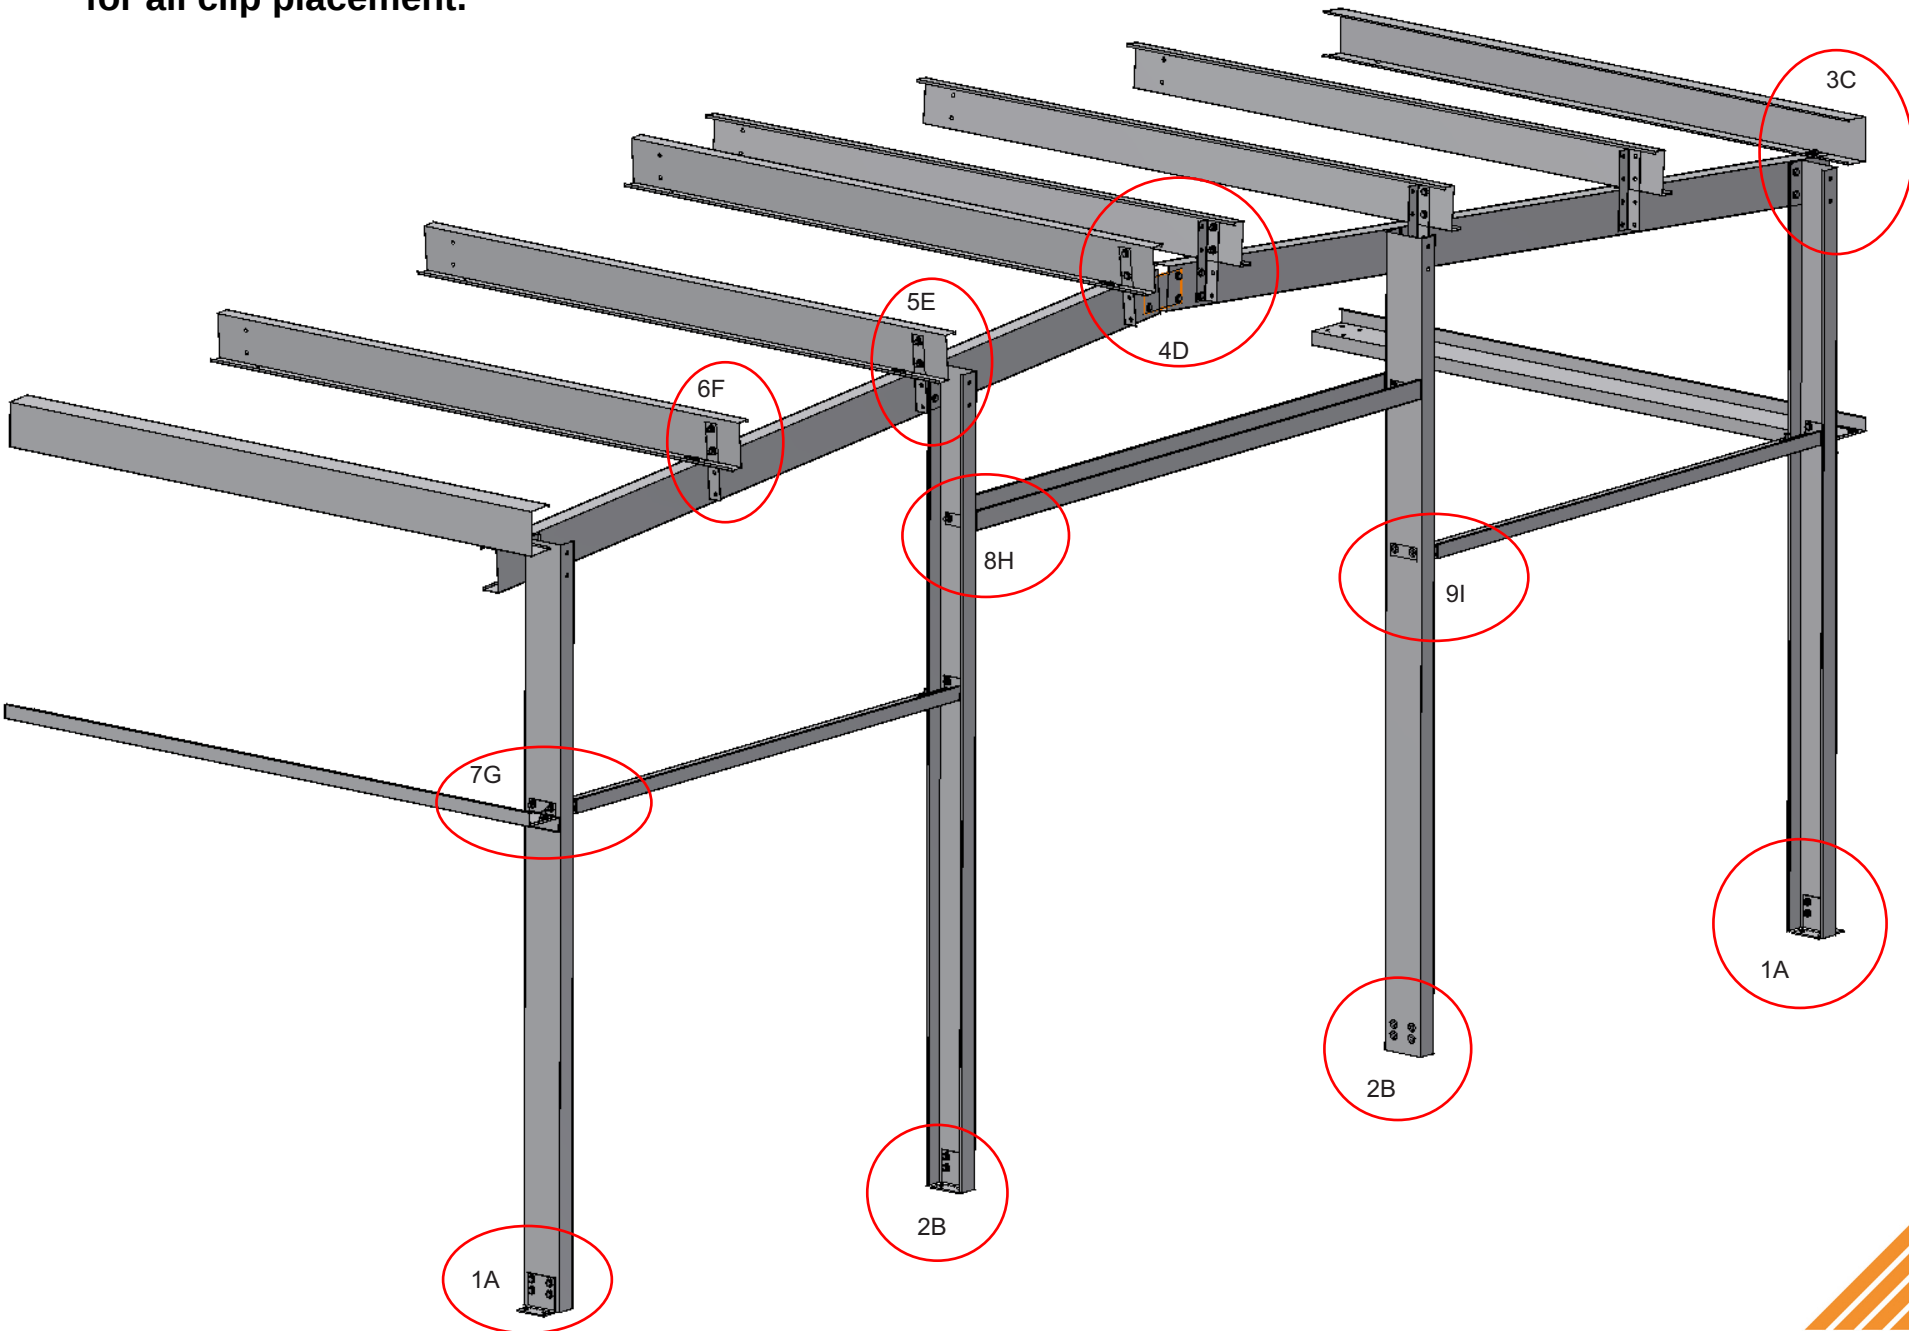

Inside View

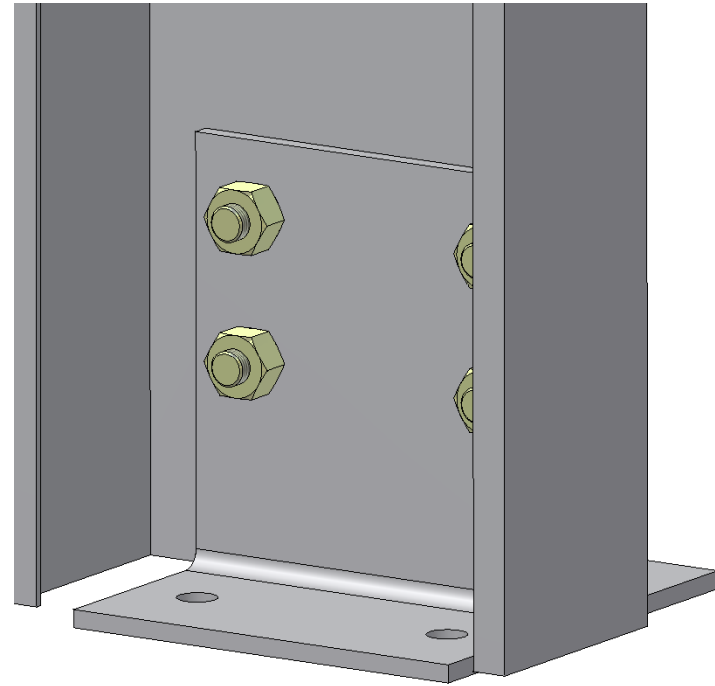


**(4) 1/2" x 1 1/2" A325
Bolts Required With
(2) MC-5 Base Clips**

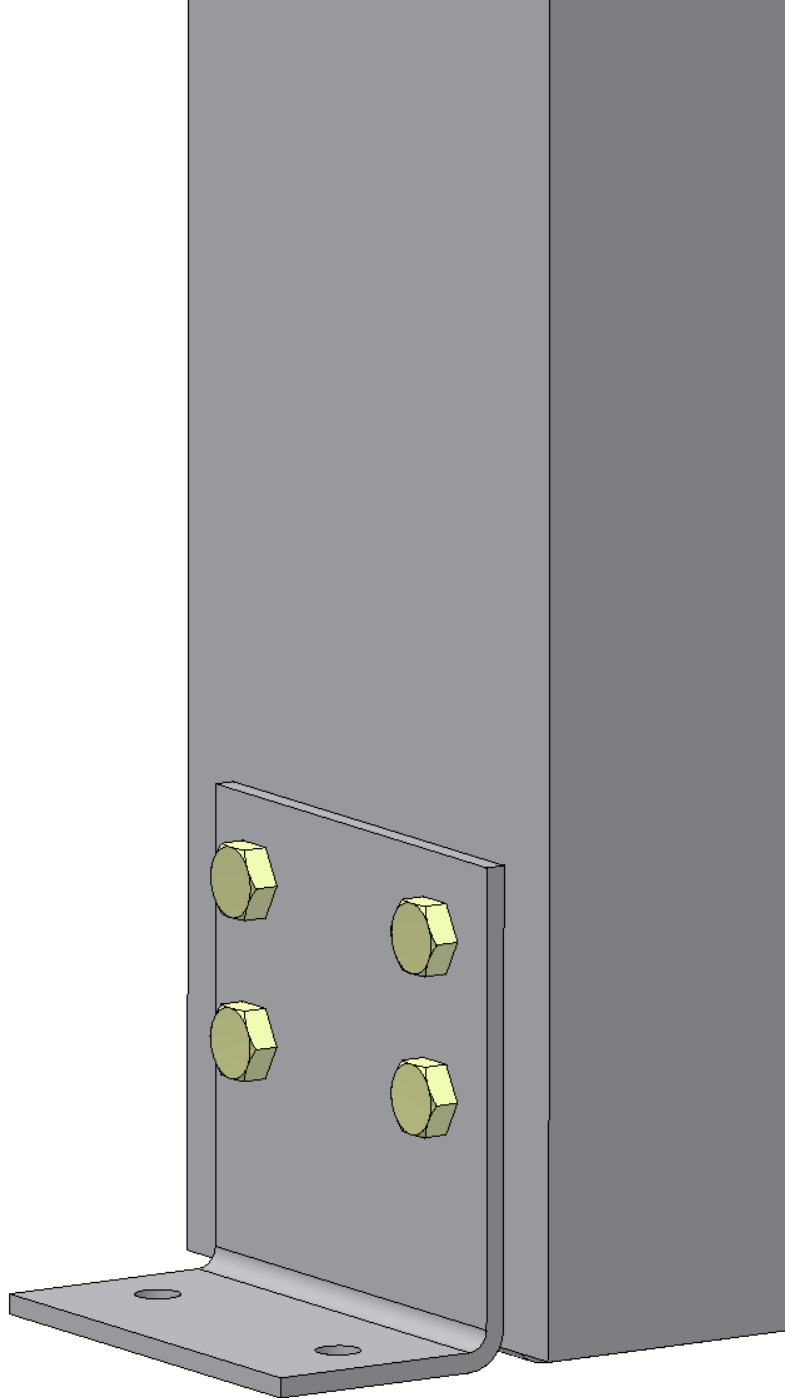


(1A) Corner Column Base

**(4) 1/2" x 1" A307
Flat Head Bolts
Required With (1)
MC-5 Base Clip**

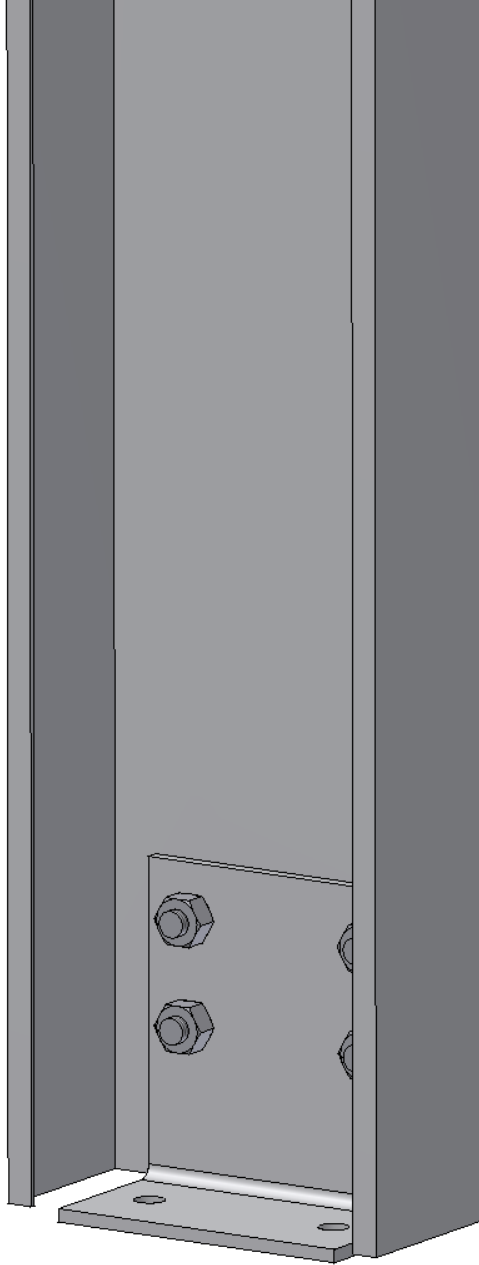

INSIDE VIEW

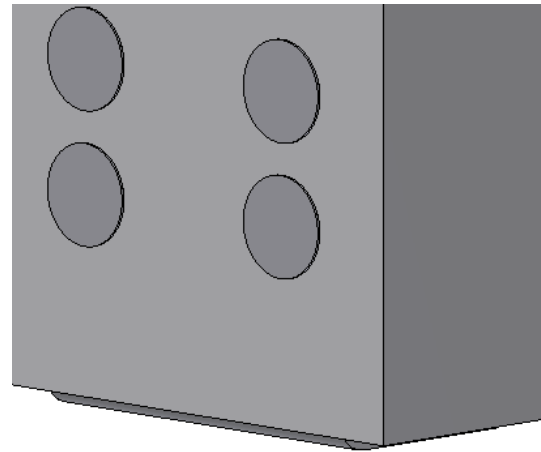


(2B) Door Jamb Base

**(4) 1/2" x 1" A307
Bolts Required**

***Corner Column
to Rafter Then
Rafter to Eave
Strut
(3C)***

**(2) 1/2" x 1 1/2" A325
Bolts Required**

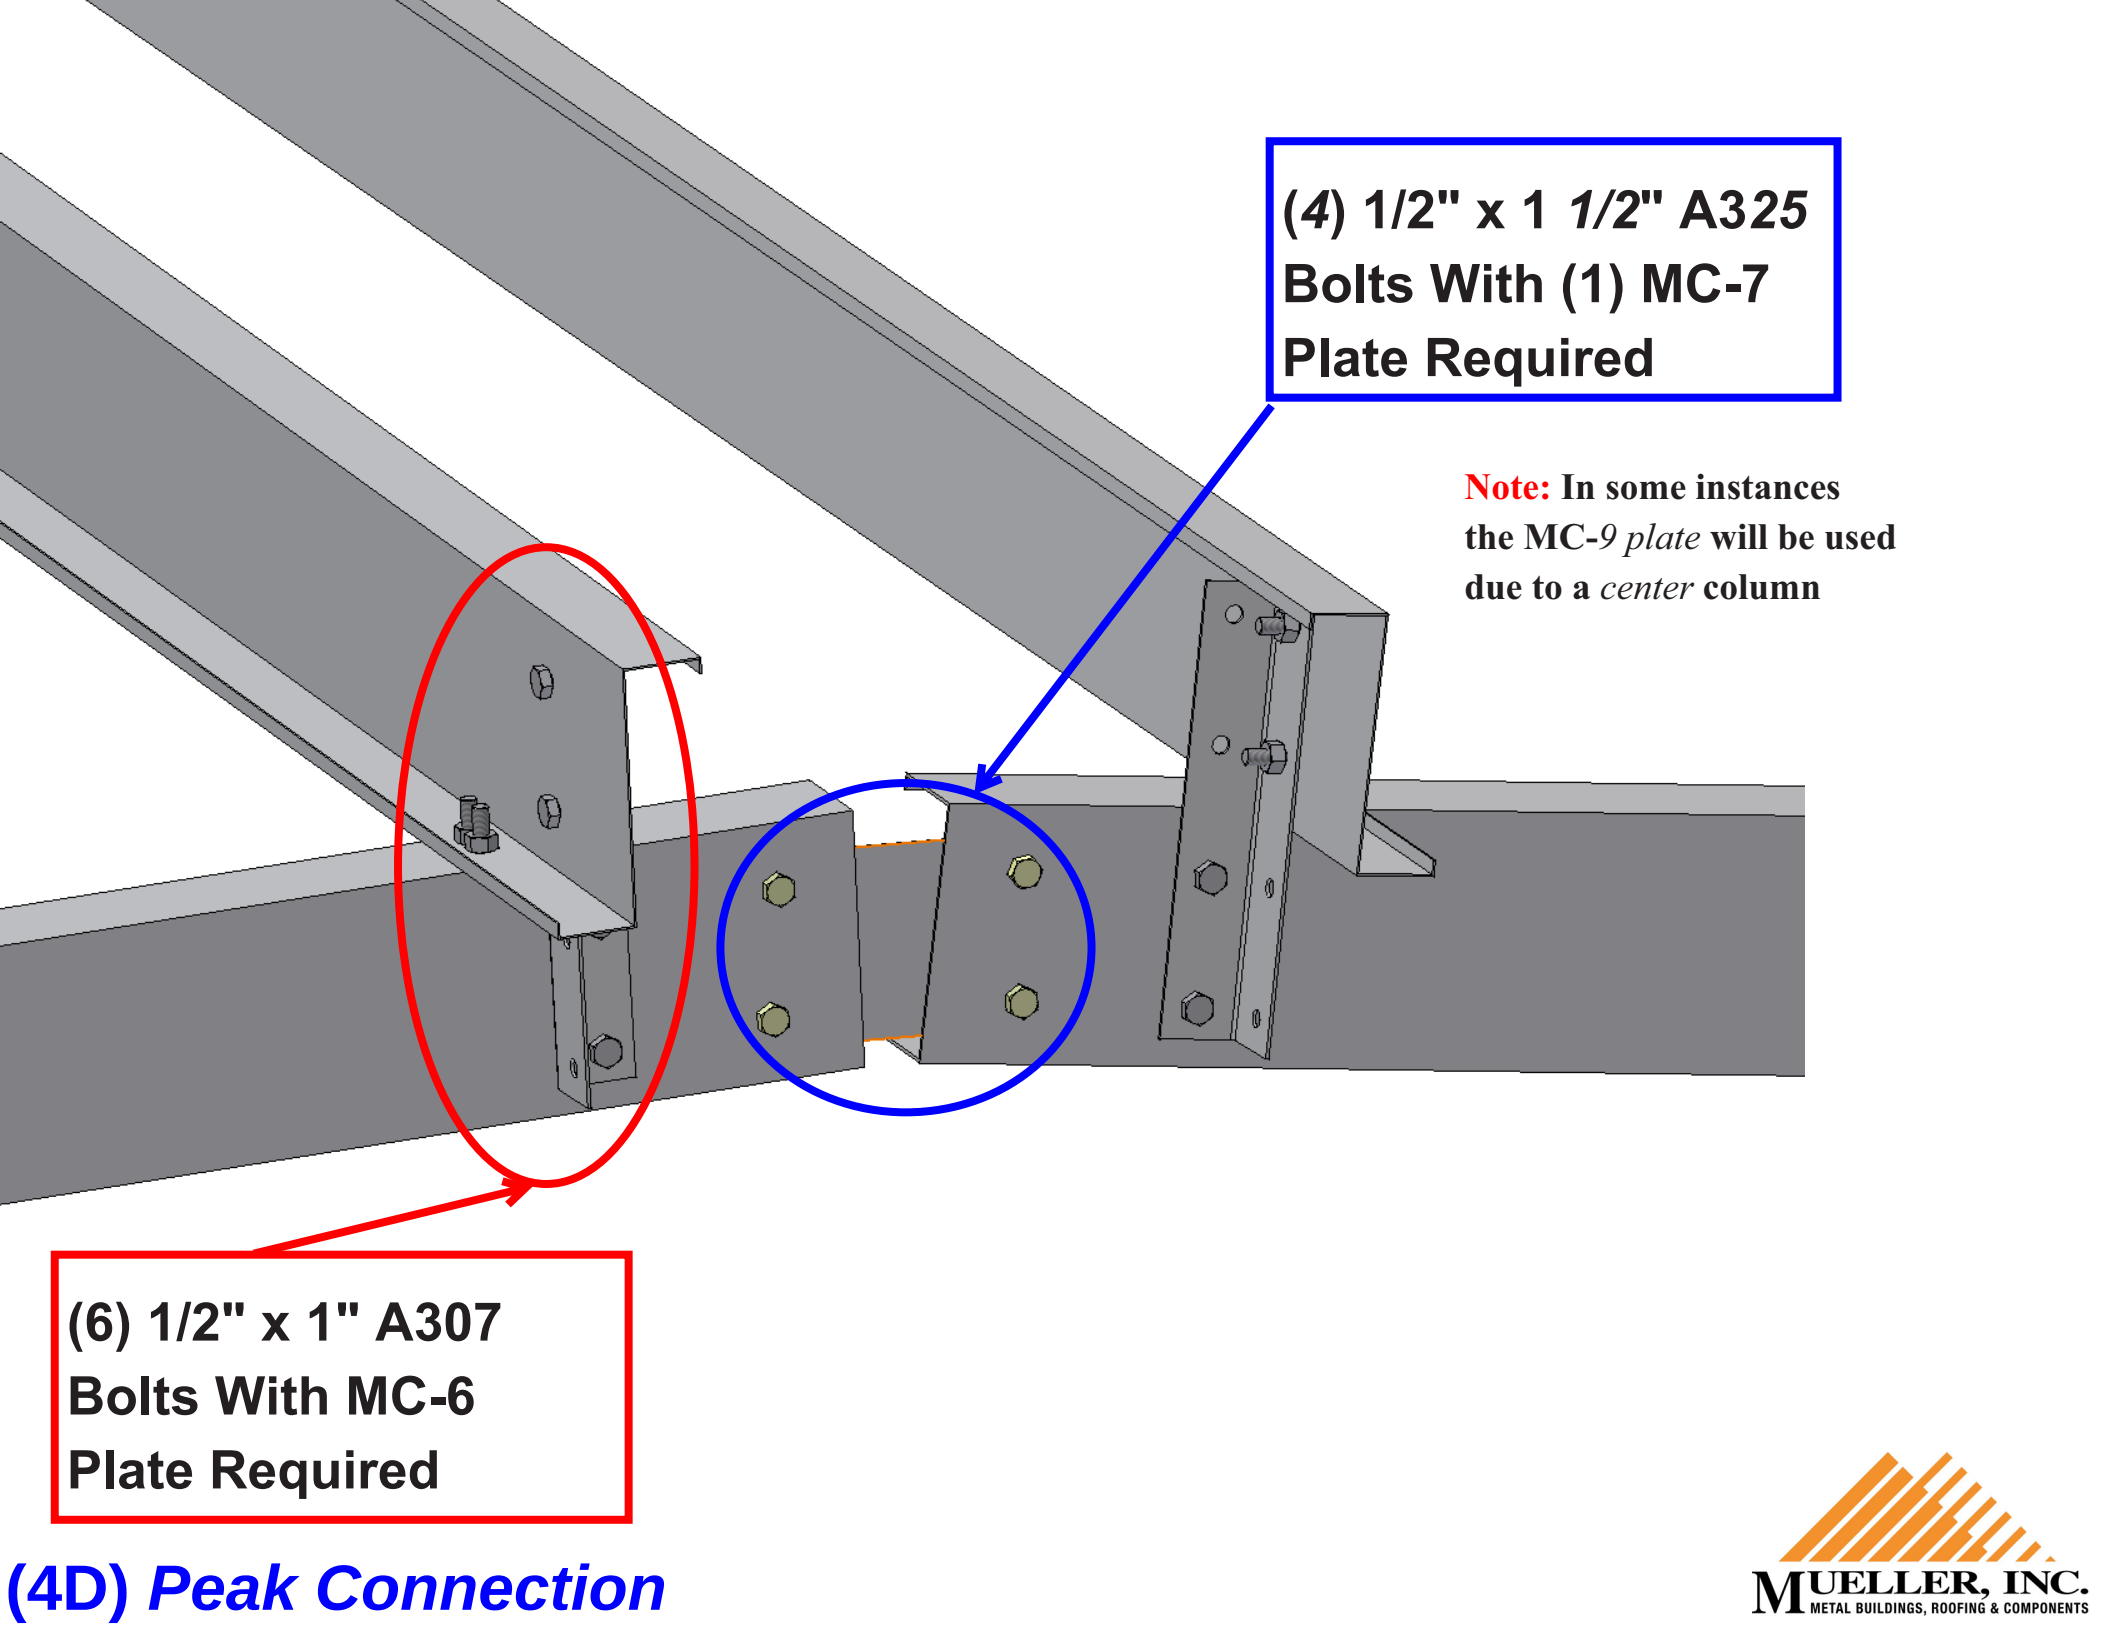

(4) 1/2" x 1 1/2" A325
Bolts With (1) MC-7
Plate Required

Note: In some instances
the MC-9 *plate* will be used
due to a *center column*

(6) 1/2" x 1" A307
Bolts With MC-6
Plate Required


(4D) Peak Connection

**(6) 1/2" x 1" A307
Bolts With MC-6
Plate Required**

Note: In some instances
the MC-6 clip will not
be used due to a conflict
with the door jamb or
interior column

**(2) 1/2" x 1 1/2" A325
Bolts Required**

(5E) Door Jamb to Rafter

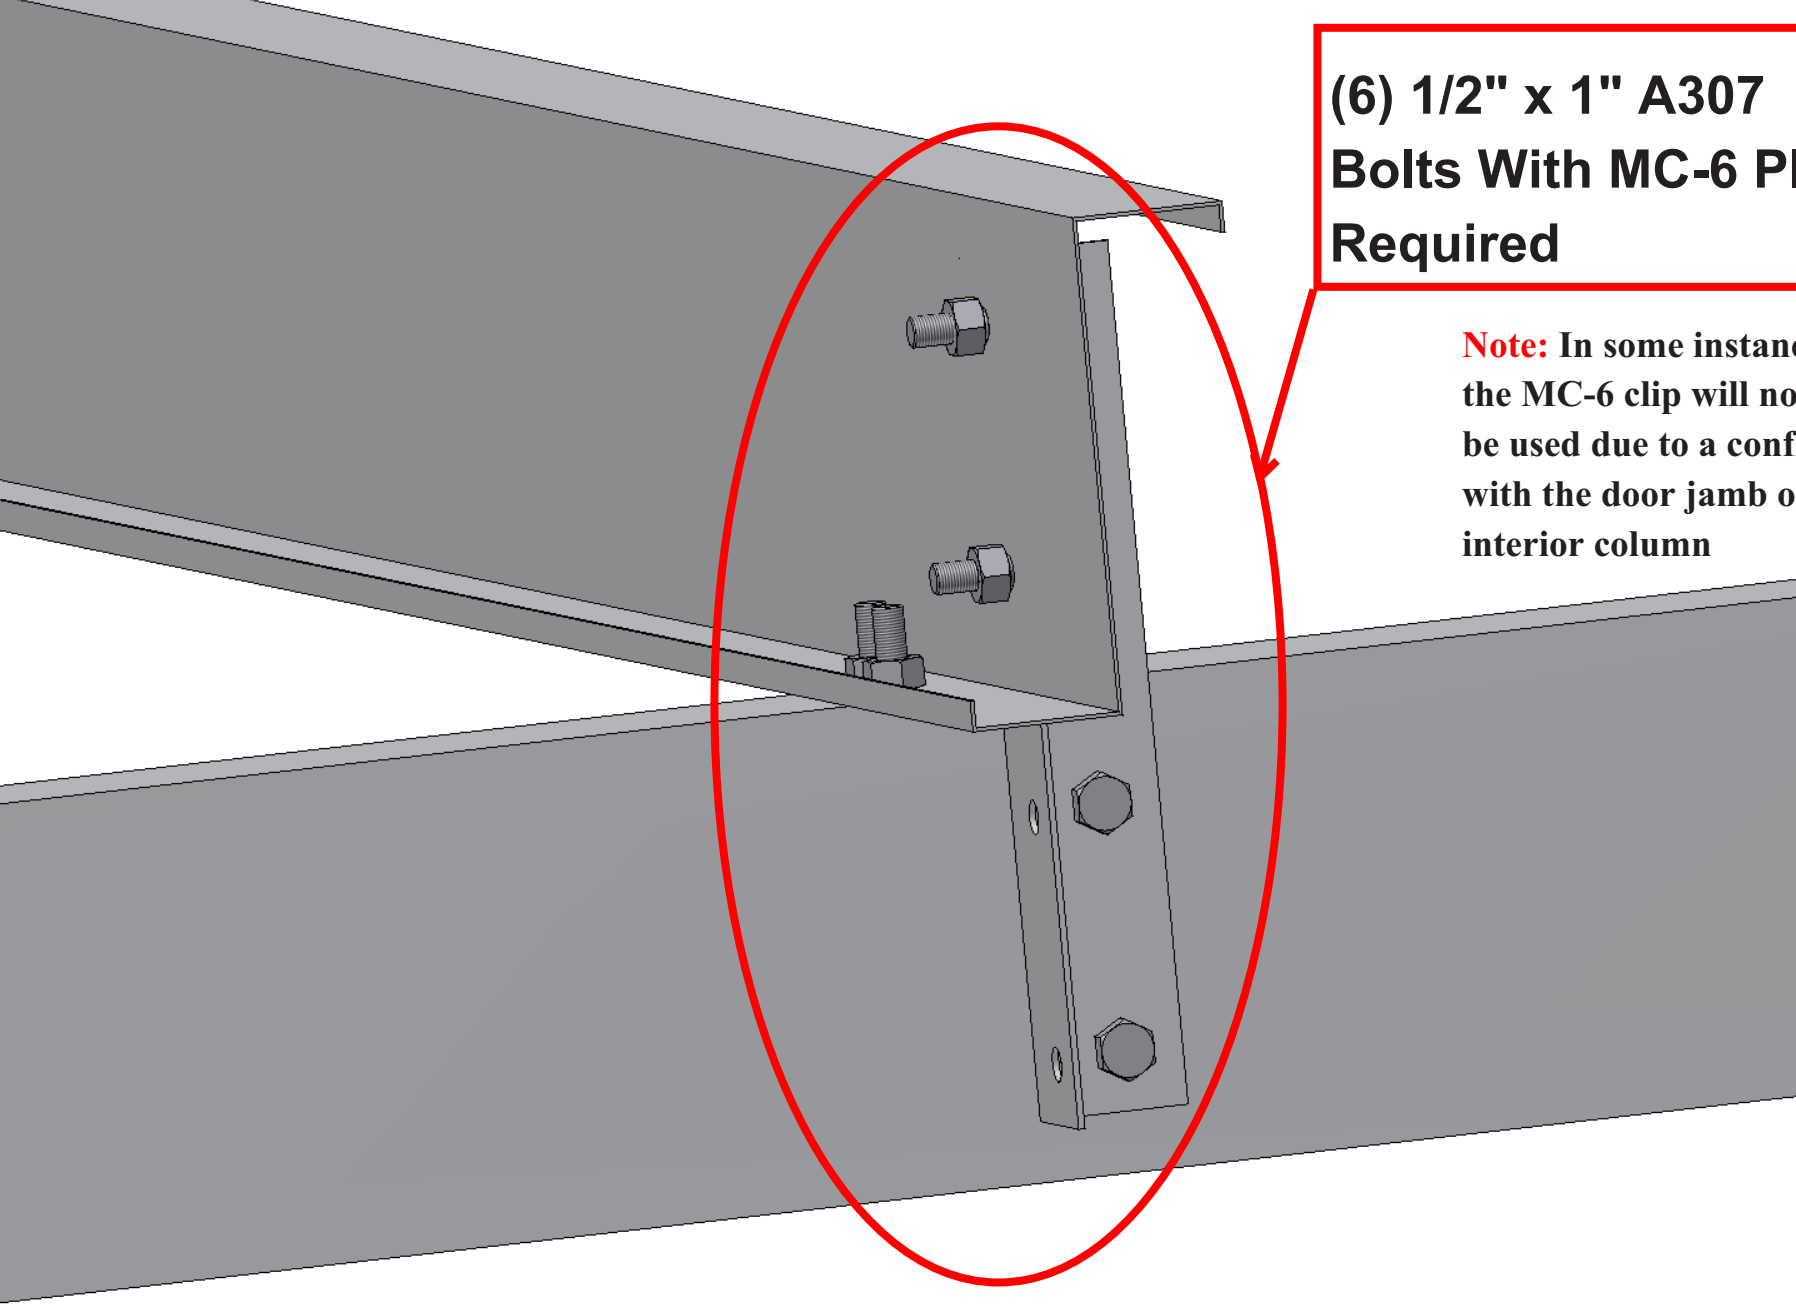


**(6) 1/2" x 1" A307
Bolts With MC-6 Plate
Required**


Note: In some instances
the MC-6 clip will not
be used due to a conflict
with the door jamb or
interior column

(6F) Purlin to Rafter


BACK VIEW

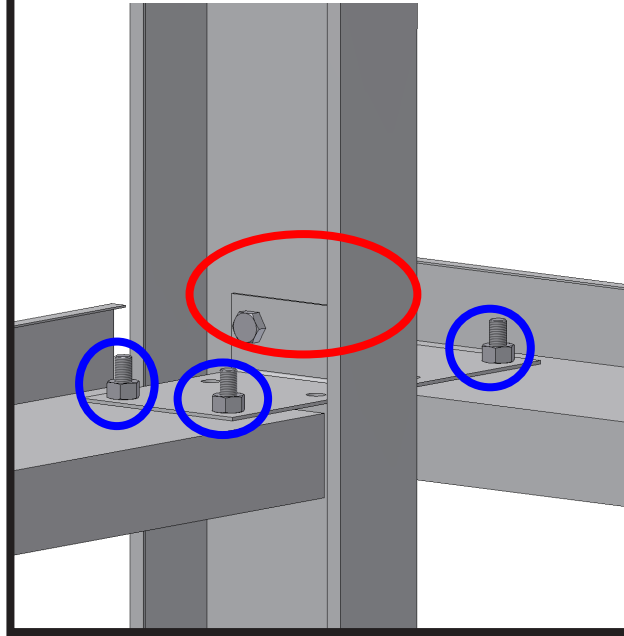

(2) 1/2" x 1
1/4" A307
Bolts With (2)
MC-1 Clips

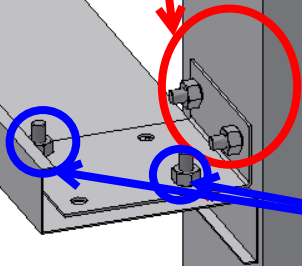

(4) 1/2" x 1"
A307 Bolts

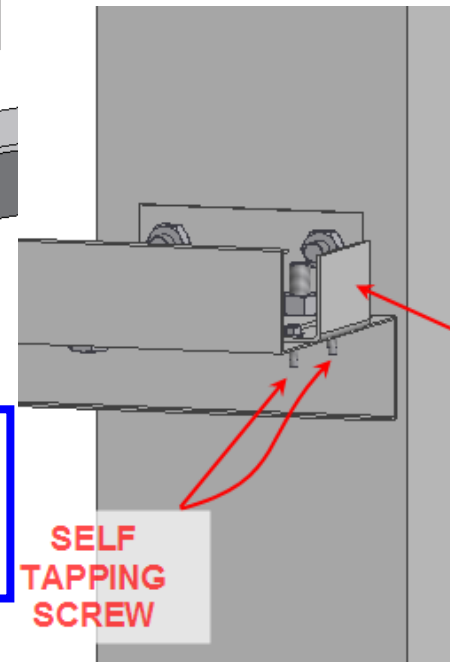

MC8A CLIP

SELF
TAPPING
SCREW

*SideWall & EndWall Girts to
Corner Column Connection*

(7G)

**(2) 1/2" x 1" A307 Bolts
With MC-1 Clip Required**

UNDERSIDE


**(2) 1/2" x 1"
A307 Flat
Head Bolts
Required**

(8H)


Door Header to Door Jamb

(2) 1/2" x 1" A307 Flat
Head Bolts With MC-1
Clip Required

BACK VIEW

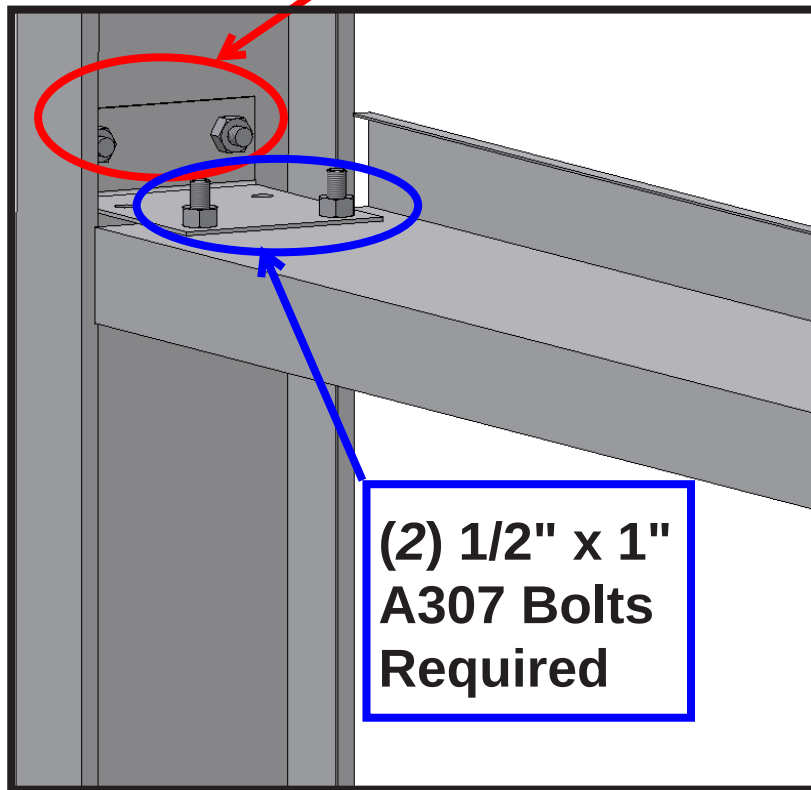

(2) 1/2" x 1"
A307 Bolts
Required

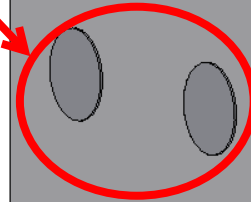

(9I) Endwall Girt to Door Jamb